 


Antenna



Screw Set


② Indicator

4 Activation

For the first-time access, you need to activate and pair the devices. The following part introduces the steps on the **Hik-Partner Pro** app. For the activation steps on other tools, such as web browser, iVMS-4200 client and SADP software, please scan the **Device Information** QR code, and find the information in **Chapter Remote Management**.


Before You Start

- 1 Scan the QR code to download Hik-Partner Pro app.
- 2 Power on the bridge devices.
- 3 Connect your bridge devices to a wireless network device (e.g. wireless router).
- 4 Make sure the wireless router has accessed to the Internet.
- 5 Connect your phone to the Wi-Fi of the wireless router.

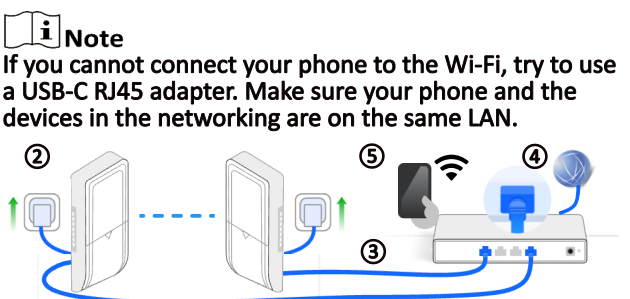

Step 1: Batch Activate Devices


The pictures below are for reference only. The actual interface prevails.

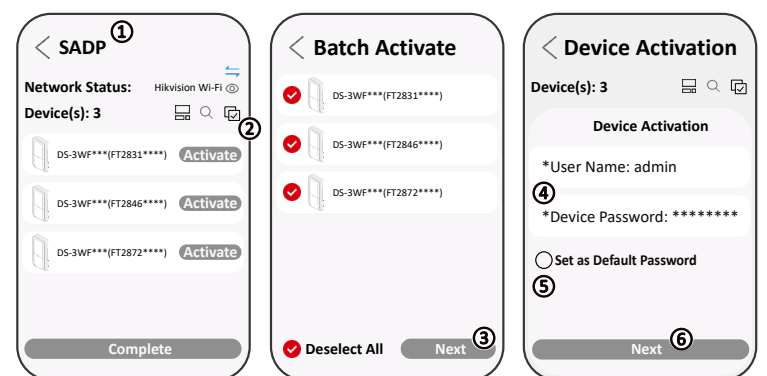

- 1 Click **SADP** on the homepage of the app.
- 2 After wireless bridges are identified, click **Batch Activate**.
- 3 Select the wireless bridges to be activated, and click **Next**.
- 4 Set **Device Password*** according to prompts. It is used to log in the device WEB for managing device remotely.
- 5 (Optional:) Check to set the device password as the **Default Password***. It helps activating other devices on HPP quickly.
- 6 Click **Next**.


Step 2: Pair Devices

The pictures below are for reference only. The actual interface prevails.

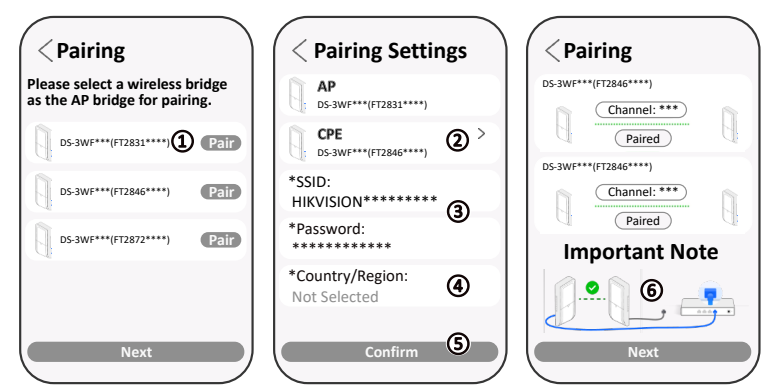


- 1 Select a device as AP bridge.
- 2 Click **CPE** to select at least 1 device as CPE bridge.
- 3 Set **SSID** and **Password*** according to prompts.
- 4 Select your **Country/Region**.
- 5 Click **Confirm**.
- 6 Disconnect **CPE** from the router to avoid loops.

Step 3: Add Devices to Site

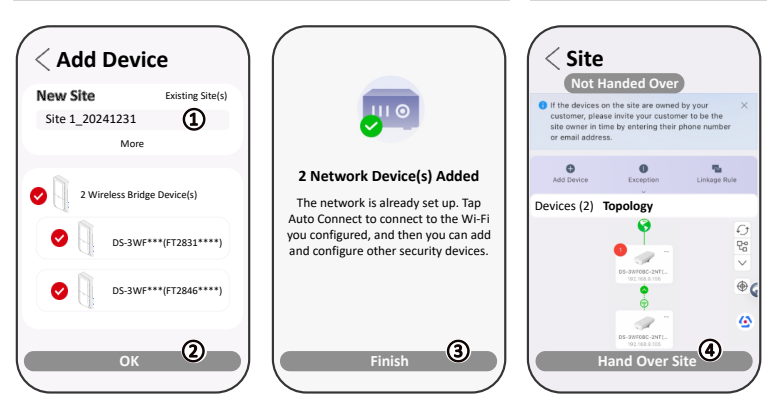


Step 4: Deliver Site to Customer

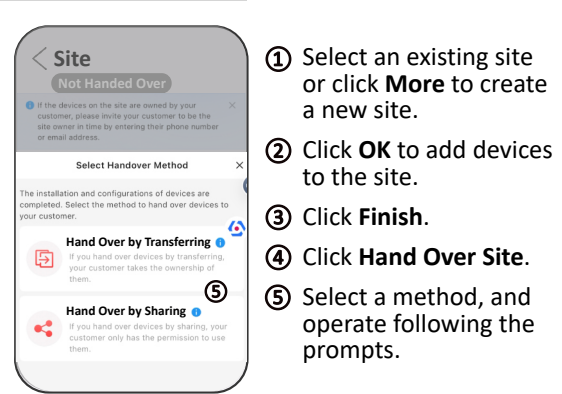

5 Installation


- The optimal installation distance between the AP and CPE devices should not exceed the **declared distance** to ensure transmission speed.
- The AP and CPE surfaces with brand Logos should be placed **face to face** without any obstacles.
- Set aside at least **50 cm** distance between the device and the wall.
- At least **2 m** distance should be kept between two pairs of adjacent devices.

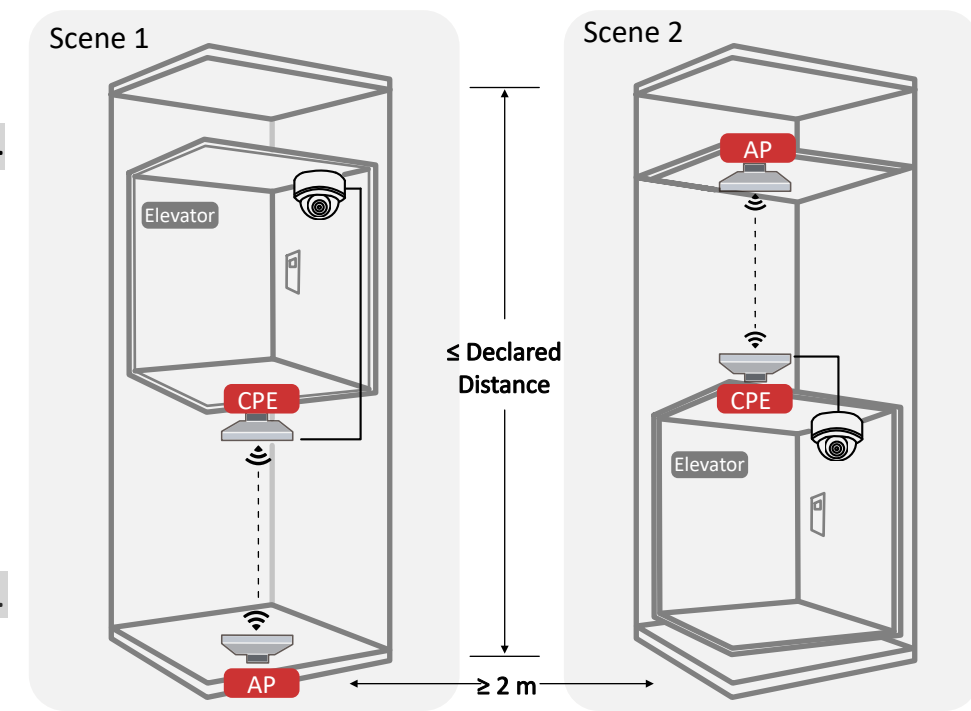

Elevator Series

Outdoor Series

- The optimal installation distance between the AP and CPE devices should not exceed the **declared distance** to ensure transmission speed.
- The AP and CPE surfaces with brand Logos should be placed **face to face** without any obstacles.
- The max. angle of deviation should within the declared angle.
- At least **2 m** distance should be kept between two adjacent AP devices.

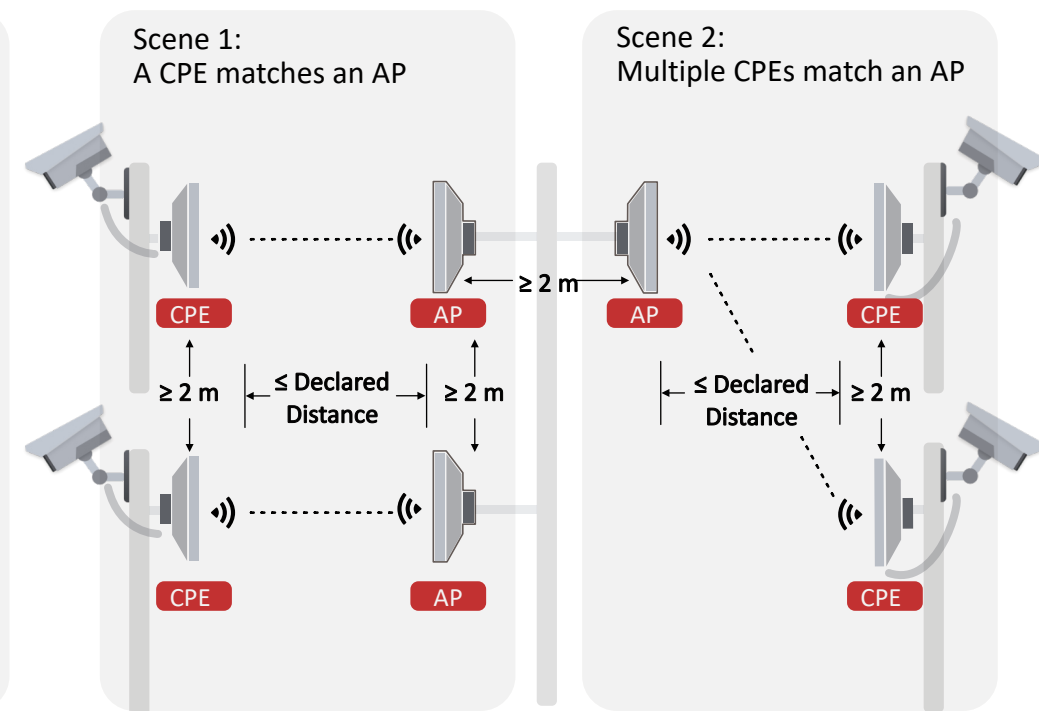

6 Power On

- **Note**
- The figures in this manual are for reference only.
- The complete networking method of the device depends on the application scenario.
- For detailed information on different models of devices, please scan the QR code of the **Device Information**.

