



©2024 Hangzhou Hikvision Digital Technology Co., Ltd.
All rights reserved.

The guide includes instructions for using and managing the product. Pictures, charts, images and all other information hereinafter are for description and explanation only. The information contained in the guide is subject to change, without notice, due to firmware updates or other reasons. Please find the latest version of this guide at the Hikvision website (www.hikvision.com). Please use this guide with the guidance and assistance of professionals trained in supporting the product.

HIKVISION and other Hikvision's trademarks and logos are the properties of Hikvision in various jurisdictions. Other trademarks and logos mentioned are the properties of their respective owners.

* TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, THIS GUIDE AND THE PRODUCT DESCRIBED, WITH ITS HARDWARE, SOFTWARE AND FIRMWARE, ARE PROVIDED "AS IS" WITHOUT WARRANTIES OR GUARANTEES, EITHER WRITTEN OR UNWRITTEN, EXPRESS OR IMPLIED, INCLUDING WITHOUT LIMITATION, MERCHANTABILITY, SATISFACTORY QUALITY, OR FITNESS FOR A PARTICULAR PURPOSE. YOU AGREE THAT KIVISION BEARS NO RESPONSIBILITY FOR ANY DAMAGES OF ANY KIND, INCLUDING BUT NOT LIMITED TO YOUR OWN RISK, IN NO EVENT WILL KIVISION BE LIABLE TO YOU FOR ANY SPECIAL, CONSEQUENTIAL, INCIDENTAL OR INDIRECT DAMAGES, INCLUDING, AMONG OTHERS, DAMAGES FOR LOSS OF PROFITS, DATA, INFORMATION, BUSINESS, REPUTATION, OR ANY OTHER COMMERCIAL LOSS, WHETHER CAUSED BY NEGLIGENCE, ACTIVE OR PASSIVE MISUSE, CORRUPTION OF SYSTEMS, OR LOSS OF DOCUMENTATION. WHERE BASED ON BREACH OF CONTRACT, TORT INCLUDING NEGLIGENCE, OR STRICT LIABILITY, THIS RELEASE OF LIABILITY WITH THE USE OF THE PRODUCT, EVEN IF KIVISION HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES OR LOSS.

- **YOU ACKNOWLEDGE THAT THE NATURE OF THE INTERNET PROVIDES FOR INHERENT SECURITY RISKS, AND HIKVISION SHALL NOT TAKE ANY TYPE OF LIABILITY FOR ANY TYPE OF OPERATION, PRIVACY LEAKAGE OR OTHER DAMAGES RESULTING FROM CYBER-ATTACKS, HACKER ATTACKS, VIRUS INFECTIONS, OR OTHER INTERNET SECURITY RISKS. HIKVISION WILL PROVIDE TIMELY TECHNICAL SUPPORT IF REQUIRED.**
- **YOU AGREE TO USE THIS PRODUCT IN COMPLIANCE WITH ALL APPLICABLE LAWS, REGULATIONS, AND STANDARDS, AND TO ENSURE THAT YOUR USE CONFORMS TO THE APPLICABLE LAW. ESPECIALLY, YOU ARE RESPONSIBLE, FOR USING THIS PRODUCT IN A MANNER THAT DOES NOT VIOLATE ANY APPLICABLE LAWS, REGULATIONS, PARTIES, INCLUDING WITHOUT LIMITATION, RIGHTS OF PUBLICITY, INTELLECTUAL PROPERTY RIGHTS, OR DATA PROTECTION AND OTHER APPLICABLE LAWS. YOU AGREE TO BE RESPONSIBLE FOR ANY PROHIBITED ENDUSES, INCLUDING THE DEVELOPMENT OR PRODUCTION OF WEAPONS OF MASS DESTRUCTION, THE CONSTRUCTION OR PRODUCTION OF WEAPONS OF MASS DESTRUCTION, ANY ACTIVITIES IN THE CONTEXT RELATED TO ANY NUCLEAR EXPLOSIVE OR UNSAFE NUCLEAR FUEL-CYCLE, OR IN SUPPORT OF SUCH ACTIVITIES.**
- **IN THE EVENT OF ANY CONFLICTS BETWEEN THIS GUIDE AND THE APPLICABLE LAW, THE LATER PREVAILS.**

This guide is applicable to the model: DS-3WRE12C.

Symbol Conventions
The symbol that may be found in this document is defined as follows

Symbol	Description
 Note	Provides additional information to emphasize or supplement important points of the main text.


- Wi-Fi Repeater x 1
- Quick Start Guide x 1
- Regulatory Compliance and Safety Information x 1

LED indicators:

LED Indicator	Status	Description
Signal	Solid blue	Extended successfully, and the connection quality is good
	Solid red	Extended successfully, and the connection quality is poor
	Off	The repeater does not connect to your Wi-Fi router
WPS	Solid on	A WPS connection has been established
	Blinking	Performing WPS negotiation with a Wi-Fi router
	Off	The WPS function is disabled
PWR	Solid on	Powered on
	Off	Powered off

Button/Port	Description
WPS	For instructions, see Method 2: Set up the repeater by WPS button in Chapter 3.
RESET	Reset button. With your repeater powered on, press the reset button (RESET) using a paper clip. All LED indicators light up then turn off. When the PWR LED indicator turns solid on again, the repeater is restored to the factory settings.
	LAN port. - In repeater mode, it is used to connect to a computer or an IPTV STB. - In AP mode, it is used to connect to your wired router to provide wireless network for wireless devices.

Plug the repeater into a power outlet near the Wi-Fi router.
Ensure that the **PWR** LED indicator is solid on.

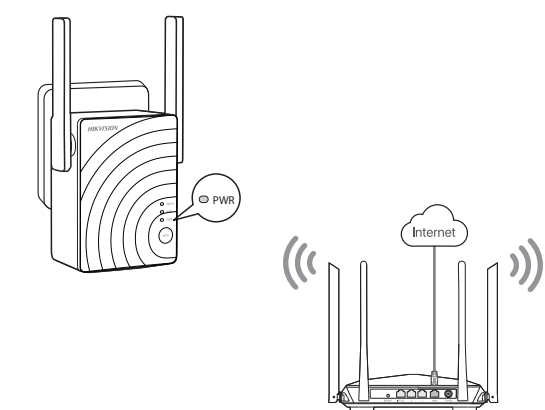


Method 1: Set up the repeater by web UI

- Method 1: Connect the Wi-Fi-enabled device such as a smartphone to the Wi-Fi network of repeater.
- Method 2: Use an Ethernet cable to connect the computer to the LAN port of the repeater.

The default Wi-Fi name (SSID) is **HIKVISION_XXXX**. By default, it has no password.

 1. You will be directed to the quick setup page within one minute.
If not, start a web browser, and enter **<http://hikrepeater.net>** in the address bar to access the repeater's web UI. (Example: smartphone)



2. Create a login password for security (recommend) and tap **Next**.

hikvision@local
HIKVISION_XXXX

< > Log In Cancel

Select a WiFi network you want to extend...

HIKVISION_1

Rescan Switch Mode

4. If the Wi-Fi network you chose is encrypted, enter the password for the selected Wi-Fi network. Modify your repeater's SSID (optional), and tap **Extend**.


The screenshot shows the 'Extend' screen in the Hikvision mobile app. At the top, the status bar displays the time 12:00 and battery level 90%. The app header shows the URL 'hikvisionwifi.local', the device name 'HIKVISION_XXXX', and navigation icons for back, forward, login, and cancel. The main content area is titled 'Your existing WiFi network' and contains a text input field with the placeholder 'Enter the password of "HIKVISION_1"'. Below this is a section titled 'The extended WiFi network' which displays the SSID 'HIKVISION_1_5GEXT'. A note states: 'Extender WiFi password is the same as that of your existing WiFi network.' At the bottom, there are two buttons: 'Back' and 'Extend'.

Wait until the **Extended successfully** page appears

Wi-Fi-enabled device: Connect to the Wi-Fi network of repeater.
After extending, the Wi-Fi name and Wi-Fi password of the repeater are shown in the table below.

	If the repeater is set through the Web UI	If the repeater is set through the WPS button
Wi-Fi name	Wi-Fi name you set Or Your Wi-Fi router's SSID with the suffix _EXT or _SGEXT	Your Wi-Fi router's SSID with the suffix _EXT or _SGEXT
Wi-Fi password	Same as the router	Same as the router


Wired device: Connect to the LAN port of repeater using an Ethernet cable.

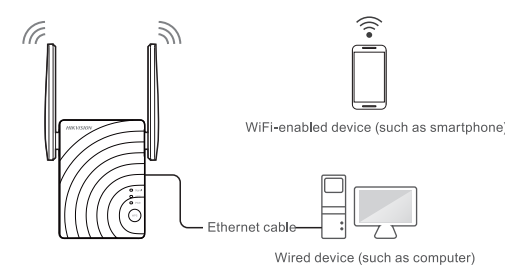

Note
This method is applicable for the Wi-Fi router having a WPS button, which may be indicated by .

1. Press the WPS button on the Wi-Fi router to enable its WPS function.
2. Within 2 minutes, press the WPS button (1-3s) on the repeater.

The **WPS** LED indicator blinks. When the **WPS** LED indicator lights solid on, and the **Signal** LED indicator lights solid on, the setup is successful.

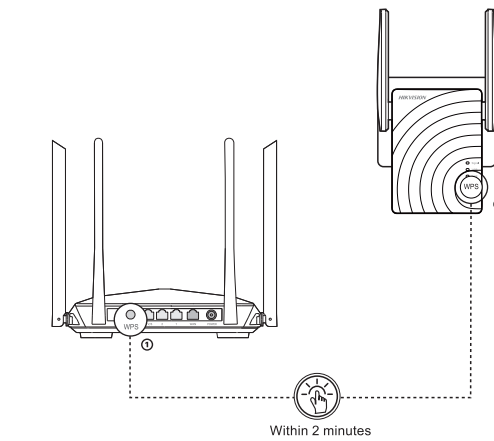

1. Refer to the following relocation tips to locate the repeater to obtain a better performance.
 - Place the repeater between the Wi-Fi router and the Wi-Fi dead zone (within the coverage of the router).
 - Keep your repeater away from electronics with strong interference, such as microwave ovens, induction cookers, and refrigerators.
 - Place the repeater in a high position with few obstacles.
 - Unfold the antennas and point them vertically upwards.
2. Observe the **Signal** LED indicator of the repeater to ensure the repeater is located in the proper position.
 - Solid blue: Extended with good connection quality.
 - Solid red: Extended with poor connection quality.

3. If the connection quality is poor, move the repeater closer to the Wi-Fi router.

Q1. I cannot log in to the web UI of the repeater. What should I do?

- If you are using a wireless dist., such as a smartphone:
 - Ensure that your smartphone has connected to the Wi-Fi network of the repeater.
- Before extending: Use the default Wi-Fi name (SSID): **HIKVISION_XXXX**
- After extending: Reconnect the repeater's Wi-Fi by referring to **Chapter 5**
- Connect clients to the repeater**
- If you are using a wired client, such as a computer:
 - Ensure that the **Mobile Data** (if any) function is disabled.
 - If you are using a wired client, such as a computer:
 - Ensure that your computer is set to **Obtain an IP address automatically** and **Obtain DNS server address automatically**.
 - Ensure that you enter <http://hikrepeater.net> in the address bar (not searching bar) of the browser.
 - If the problem persists, reset the repeater by referring to **Button and port in Chapter 1 Introduction**, and then log in again.

Q2. The repeater cannot find the Wi-Fi network of my router. What should I do?

- A2.**
- Ensure that your smartphone can detect the Wi-Fi network of your Wi-Fi router. If not, change your router's settings: turn off **Hide SSID**, do not combine 2.4 GHz and 5 GHz into one SSID, and try again.
 - Change the channel of your Wi-Fi router, and try again.
 - Change the encryption type of the Wi-Fi router to WPA-PSK or WPA2-PSK and try again.

Q3. How to reset the repeater?

A3. See Button and port in Chapter 1 Introduction.

