


Quick guide


1: Start by login into the program "Timeattendance"

Default UserName is "admin" and passWord is "123456"

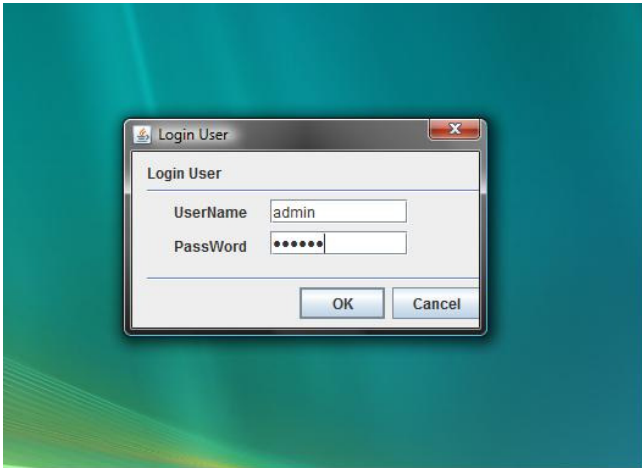

2: The first thing that should be done after the program starts is to Open the Com port.

Select "Comport" and then "Open port", Select the Com port you are using on your PC, the BaudRate should be set to "57600", then click "OK".

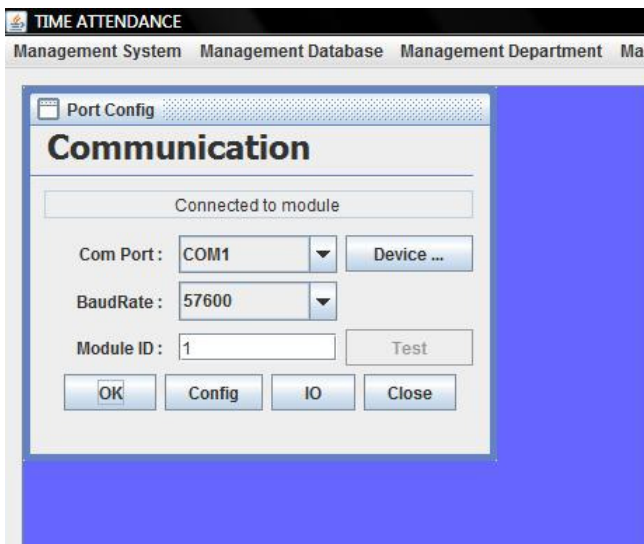

3: To change the Module ID click on "Config" in the "Port config" window, this will open the "Config Module" window for the selected Unit, in this case ID "1". Here you can change the ID number. There should never be 2 unit connected to the bus with the same ID, so start by connecting one by one and set them to different ID numbers. To change ID, enter new ID number in "Module ID" and click on "Write" and "save".




4: Next step is to setup how many unit and on what Module ID that is connected on the bus.

Click on "Management Department" and then "list Fingerlock", here you can add new unit, edit the units and delete the units. This list should match the units connected to the bus.



5: When all the unit is create in the "FingerPrint Lock" window you can use the "Device" button under "Open Port" to check if all the units are connected.

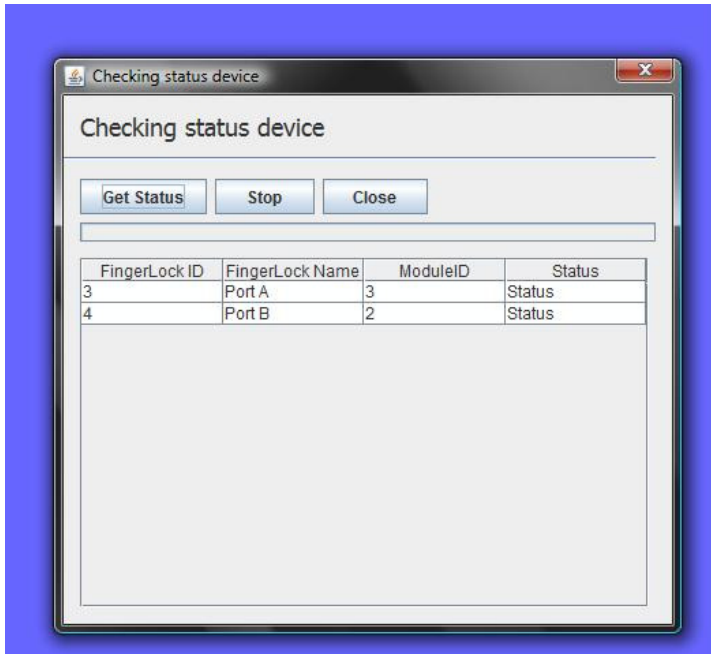

This option can not be used to scan the bus for new Units, it will only check if the ones in the Database is conneted.