



SETTING SOFTWARE INSTRUCTIONS

INTEGRATED VOICE EVACUATION SYSTEM

VM-3000 SERIES

VOICE ALARM SYSTEM AMPLIFIER 240W	VM-3240VA
VOICE ALARM SYSTEM AMPLIFIER 360W	VM-3360VA
VM EXTENSION AMPLIFIER 240W	VM-3240E
VM EXTENSION AMPLIFIER 360W	VM-3360E
FIREMAN'S MICROPHONE	RM-300MF
FIREMAN'S MICROPHONE EXTENSION	RM-320F
REMOTE MICROPHONE	RM-200M
REMOTE MICROPHONE EXTENSION	RM-210



10

TOA Electronics Europe GmbH
Suederstrasse 282, 20537 Hamburg, Germany
1438-CPR-1090

EN 54-16: 2008

Voice alarm control and indicating equipment
for fire detection and fire alarm systems

VM-3000

Provided options:

- 7.3 Audible warning
- 7.6.2 Manual silencing of the voice alarm condition
- 7.7.2 Manual reset of the voice alarm condition
- 7.9 Voice alarm condition output
- 8.4 Indication of faults related to voice alarm zones
- 10 Voice alarm manual control
- 11 Interface to external control device(s)
- 12 Emergency microphone(s)
- 13.14 Redundant power amplifiers

Technical data: see document VM-3000 Instruction Manual

Thank you for purchasing TOA's VM-3000 Series System.

Please carefully follow the instructions in this manual to ensure long, trouble-free use of your equipment.

TABLE OF CONTENTS

1. SOFTWARE OUTLINE	4
2. NOTES ON PERFORMING SETTINGS	
2.1. System Requirements	5
2.2. Notes	
2.2.1. Displays	5
2.2.2. Window screens	5
3. SOFTWARE SETUP	
3.1. Setting Software Installation	6
3.2. Uninstallation	8
3.3. Update	9
4. RUNNING THE VM-3000 SETTING SOFTWARE	10
5. SETTING ITEMS	11
5.1. Menu Structure	12
5.2. Menu Bar Items & Explanations	13
6. SYSTEM SETTINGS	14
6.1. System Type Settings	15
6.2. Setting the Number of VM-3000Es	17
6.3. Settings for RM-300MF & RM-200M Remote Microphones	18
6.4. External ATT Settings	19
6.5. End of Line (EOL) Unit Settings	21
6.6. VM-3000VA Settings	22
6.6.1. Audio input settings	23
6.6.2. RM-200M settings	24
6.6.3. RM-300MF settings	25
6.6.4. Audio output settings	26
6.6.5. Control input settings	27
6.6.6. Control output settings	28
6.6.7. VM-3000VA/VM-3000E setting screen changeover	29
6.6.8. Returning to the system setting screen from the VM-3000VA setting screen	30
6.7. VM-3000E Settings	31
6.7.1. Audio output setting	32
6.7.2. Control input settings	33
6.7.3. Control output settings	34
6.7.4. VM-3000VA/VM-3000E setting screen changeover	35
6.7.5. Returning to the system setting screen from the VM-3000E setting screen	36
6.8. Local Input Setting	37
7. SURVEILLANCE SETTINGS	38
7.1. Time/Interval Setting	39
7.2. Surveillance Group Settings	40
8. PRIORITY SETTINGS	43
8.1. General Broadcast Sound Source Priority Settings	44
8.2. Emergency Sound Source Priority Display	46

9. ZONE SETTINGS	48
10. EVENT SETTINGS	49
10.1. General Control Input Settings	50
10.2. Emergency Control Input Settings	53
10.3. RM Function Key Settings	57
10.3.1. RM-300MF settings	58
10.3.2. RM-320F settings	60
10.3.3. RM-200M settings	62
10.3.4. RM-210 settings	64
11. LOG DISPLAY	66
12. ERROR LIST DISPLAY	68
13. MENU ITEM OPERATIONS FROM THE MENU BAR	
13.1. Creating a New Setting File	69
13.2. Loading Set Files	71
13.3. Saving Set Files	
13.3.1. Overwriting an existing file	73
13.3.2. Saving new set files	74
13.4. Printing Set Data	76
13.5. Exporting Printed Data in CSV Format	78
13.6. Printing Remote Microphone Labels	80
13.7. Exiting Setting Software	82
13.8. Selecting the Setting Software Display Language	83
13.9. Network Settings between Setting Software and VM-3000VA	84
13.10. Transferring Data Edited by PC between the VM-3000VA and a PC	
13.10.1. Loading set VM-3000VA data into a PC	86
13.10.2. Writing PC-edited data into the VM-3000VA	87
13.11. Transferring EV Message Files between the VM-3000VA/VM-3000E and a PC	
13.11.1. EV file registration screen transfer operation	88
13.11.2. Simultaneous EV message registration	92
13.11.3. Individual EV message file registration	92
13.11.4. Individual EV message file erasure	92
13.12. Setting Software Version Display	93

1. SOFTWARE OUTLINE

This setting software is designed to be installed in a PC and used exclusively for performing the settings necessary for operating the VM-3000 system.

Settings are roughly divided into system configurations, failure detection points, broadcasting sound source priorities, broadcast zones, and function assignment to the control inputs and remote microphone keys. This software also features a Log function that integrates event log data from the VM-3240VA or VM-3360VA into a PC and displays such data, as well as an Error List function that shows discrepancies in set data.

Loading the PC-set data into the VM-3240VA or VM-3360VA allows the VM-3000 system to operate according to the configured settings.

2. NOTES ON PERFORMING SETTINGS

2.1. System Requirements

• OS:	Windows Vista, 32-bit Windows 7, 64-bit Windows 7
• CPU:	1 GHz or faster
• Memory:	1 GB or more

Note

Windows and Windows Vista are trademarks of Microsoft Corporation.

2.2. Notes

2.2.1. Displays

The VM-3000 Setting Software creates window displays at a resolution of 1024 x 768 pixels. Setting the screen size to a lower resolution or resizing windows may cause a portion of display to be hidden or cut off.

2.2.2. Window screens

The windows displayed by the VM-3000 Setting Software in this manual are examples and may vary somewhat depending on the specific environment of the PC used.

3. SOFTWARE SETUP

Notes


- Close all open applications before installing.
- To install the software, it is necessary to log in to the PC using an administrator account.

3.1. Setting Software Installation


Step 1. Click on "setup.exe" in the setting software folder contained in the CD supplied with the VM-3240VA and VM-3360VA.
The installation wizard screen is displayed.

Note


The installation wizard screen may not be displayed. In this case, read [the next page](#).

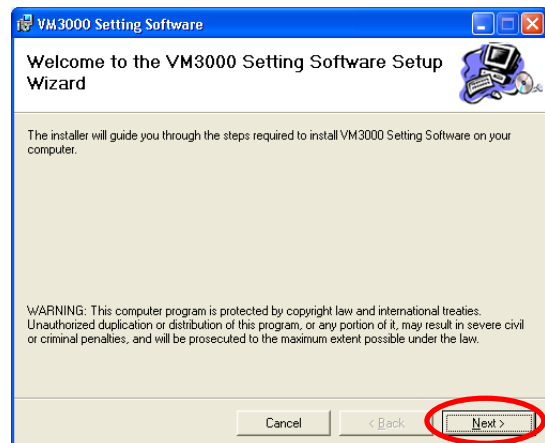

Step 2. Click the Next button.
The Select Installation Folder screen is displayed.

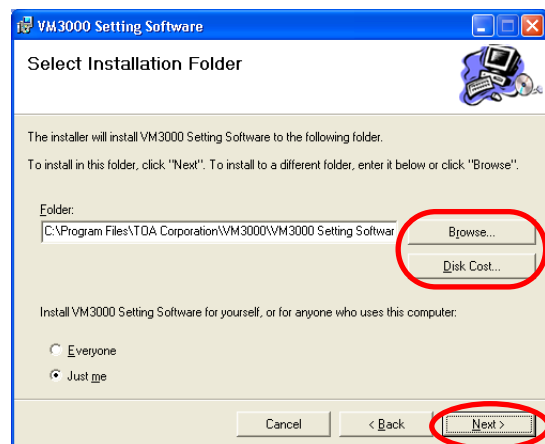


Step 3. Change the folder as needed, then click the Next button.
The Confirm Installation dialog is displayed.

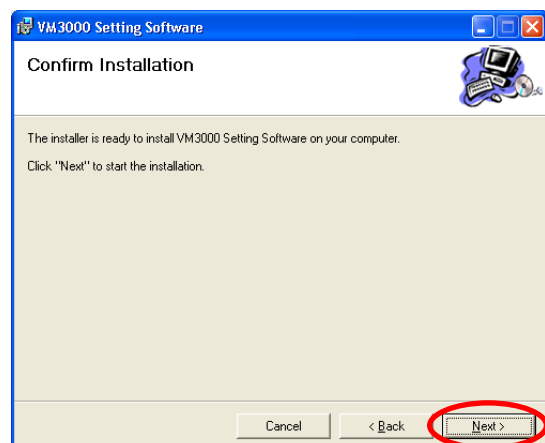


Step 4. Click the Next button to start installing the software.

Step 5. When the Installation Complete dialog is displayed, click the Close button to complete the installation.

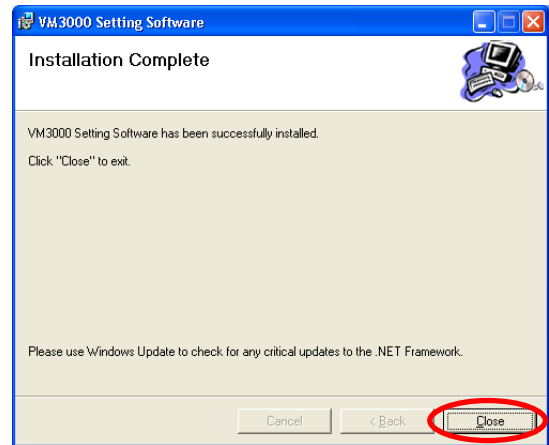


[If no installation wizard screen is displayed]

The screen at right may be displayed when the Step 1 is performed. In this case, install the software needed to run the VM-3000 Setting Software with the steps below.

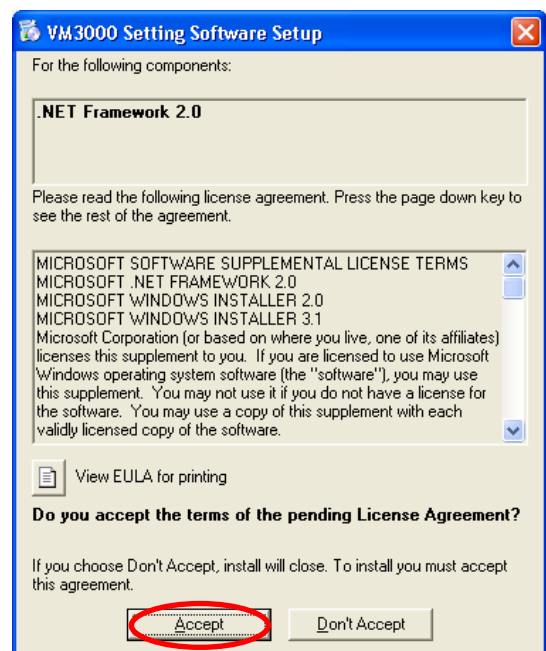

Step 1. Click the Accept button.

Installation in progress screen is displayed.

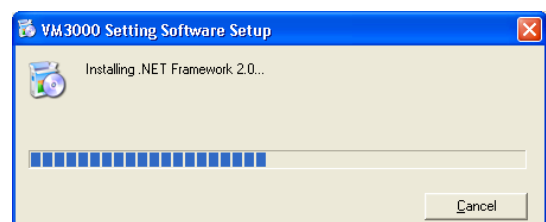


As the installation wizard screen is displayed after completion of installation, follow the steps shown on [the previous page](#).


3.2. Uninstallation

Step 1. Click on "setup.exe" in the setting software folder contained in the CD supplied with the VM-3240VA and VM-3360VA.
The setup wizard screen is displayed.

Step 2. Select "Remove VM3000 Setting Software," and click the Finish button to start uninstalling the software.

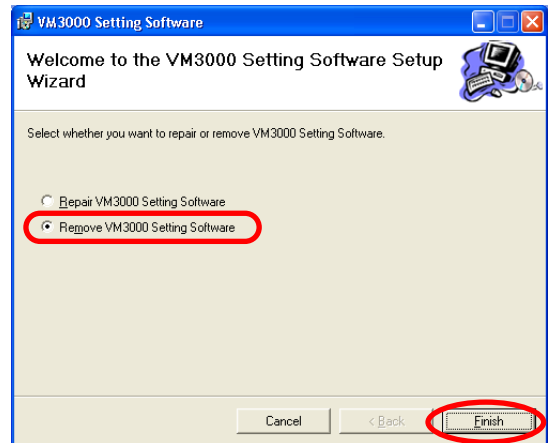


Step 3. When the Installation Complete dialog is displayed, click the Close button to complete the uninstallation.

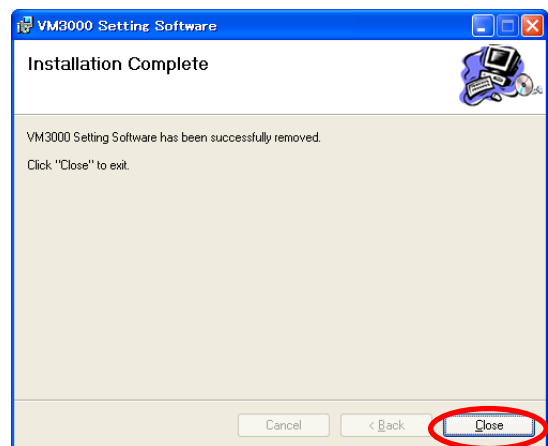


3.3. Update

Step 1. Click on "setup.exe" in the setting software folder contained in the CD supplied with the VM-3240VA and VM-3360VA.
The setup wizard screen is displayed.

Step 2. Select "Repair VM3000 Setting Software," and click the Finish button to start updating the software.

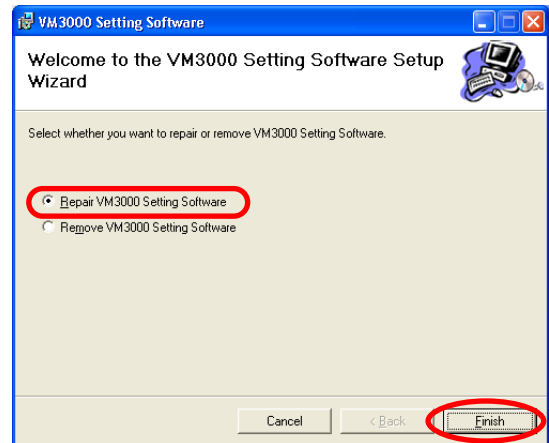

Step 3. When the Installation Complete dialog is displayed, click the Close button to complete the update.

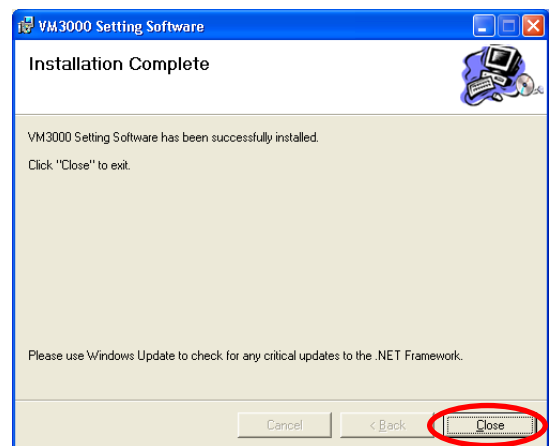

4. RUNNING THE VM-3000 SETTING SOFTWARE

To start the software, select "VM-3000 → Setting Software," or double-click the VM-3000 shortcut icon on the desktop.


Start menu




Shortcut icon on the desktop



Activating the software displays the following splash screen.

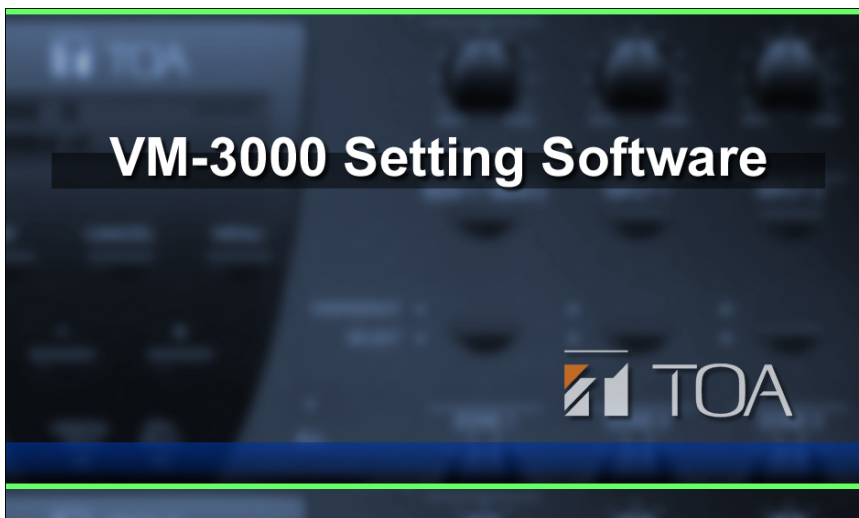

After activation is complete, the VM-3000 Setting Software initial screen is displayed.

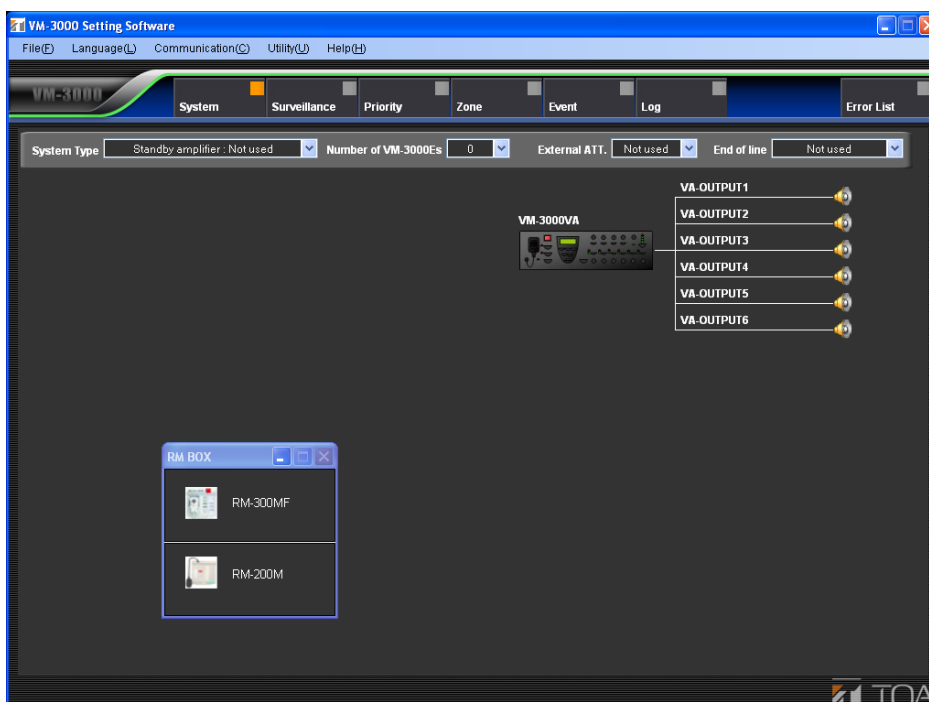

5. SETTING ITEMS


Menu items are displayed at the top of the setting screen.

These menu items include those from "System" to "Event." Settings are conducted in order from left to right. The other two menu items, "Log" and "Error List," are respectively for checking event histories and checking for irregularities in the settings data. Clicking on any of these menu items calls up the relevant setting screen.

Note

In the following setting screen illustrations and instructions, the VM-3240VA and VM-3360VA are referred to collectively as simply "VM-3000VA," and the VM-3240E and VM-3360E are referred to collectively as simply "VM-3000E."

Menu Items

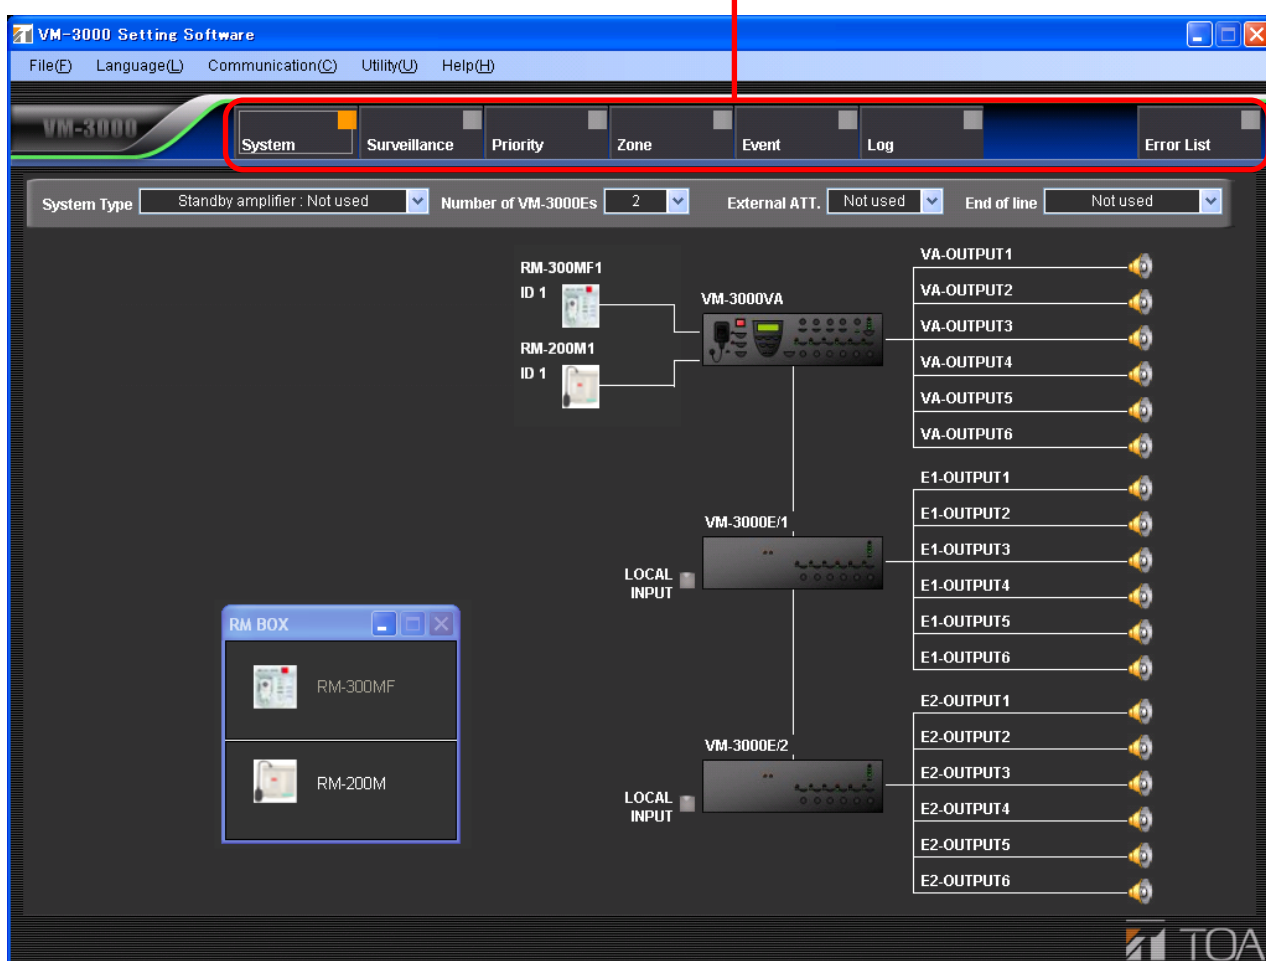

5.1. Menu Structure

System (p. 14)	System Type (p. 15)	Selects a system configuration from the following options: 1-channel broadcasting (no standby amplifier); 1-channel (with standby amplifier); and 2-channel broadcasting (BGM/paging).
	Number of VM-3000Es (p. 17)	Sets the number of extension amplifiers.
	RM-300MF (p. 18)	Sets the connection format for the RM-300MF emergency remote microphones.
	RM-200M (p. 18)	Sets the connection format for the RM-200M general use remote microphones.
	External ATT. (p. 19)	Sets the external attenuator.
	EOL (End of line) (p. 21)	Sets EOL units to be connected to the speaker lines.
	VM-3000VA (p. 22)	Sets the names of the audio inputs, audio outputs, control inputs, and control outputs for the VM-3240VA/3360VA.
	VM-3000E (p. 31)	Sets the names of the audio outputs, control inputs, and control outputs for the VM-3240E/3360E.
	Local Input (p. 37)	Sets the local input.
Surveillance (p. 38)	Time/Interval Setting (p. 39)	Sets the time and interval for specific surveillance items.
	Surveillance Group Settings (p. 40)	Allocates surveillance items into up to 64 groups.
Priority (p. 43)	General Setting (p. 44)	Sets sound source priorities for general broadcasting.
	Emergency Setting (p. 46)	Displays the priority setting status of emergency broadcasting sound sources.
Zone (p. 48)	Zone Setting (p. 48)	Sets broadcast zones.
Event (p. 49)	General Setting (p. 50)	
	VM-3000VA (p. 50)	Sets general broadcast control input functions for the VM-3240VA/3360VA.
	VM-3000E (p. 50)	Sets general broadcast control input functions for the VM-3240E/3360E.
	Emergency Setting (p. 53)	
	VM-3000VA (p. 53)	Sets the front panel-mounted emergency broadcast keys' functions, and emergency control input functions for the VM-3240VA/3360VA.
	VM-3000E (p. 53)	Sets the emergency control input functions for the VM-3240E/3360E.
	RM Key Setting (p. 57)	
	RM-300MF (p. 58)	Sets the RM-300MF function display and RM-320F key functions.
	RM-200M (p. 62)	Sets RM-200M and RM-210 key functions.
Log (p. 66)	Log Display (p. 66)	Displays event history information and stores history data.
Error List (p. 68)	Error List Display (p. 68)	Displays a list of errors and other irregularities occurring within set data.

5.2. Menu Bar Items & Explanations

For details on operations conducted by selecting the following menu items from the menu bar, see ["Menu Item Operations from the Menu Bar" on page 69](#).

File (F)

- New (N): Creates a new data file to be used by the VM-3000 setting software.
- Open (O): Reads an existing data file to be used by the VM-3000 setting software.
- Save (S): Saves the information currently being edited by the VM-3000 setting software and overwrites an existing data.
- Save As (A): Saves the information currently being edited by the VM-3000 setting software under a new file name.
- Data Output (P)
- Print Setting Data (P): Prints setting data.
- CSV Output (C): Exports setting data as a CSV file.
- RM Label (L): Creates and prints labels used to identify the keys on remote microphones (RM-300MF, RM-320F, RM-200M, and RM-210).
- Exit (X): Quits the VM-3000 setting software.

Language (L)

- Select (S): Selects the display language used by the VM-3000 setting software.

Communication (C)

- Setting Data: VA->PC (D): Allows PC-set data stored in the VM-3240VA/3360VA to be read back into a PC.
- Setting Data: PC->VA(U): Allows data set on a PC to be written from the PC into the VM-3240VA/3360VA.
- Network Setting(N): Conducts communication settings needed to achieve communication between the VM-3000 setting software and the VM-3240VA/3360VA.

Utility (U)

- EV (E): Allows EV message sound source files used by the VM-3240VA/3360VA to be written into the VM-3240VA/3360VA from a PC or read from the VM-3240VA/3360VA to a PC.


Help (H)

- Version (A): Displays the version information for the VM-3000 setting software.

6. SYSTEM SETTINGS

Set the system configuration and inputs and outputs for each device.

Click the Menu item "System" button to display the system setting screen.

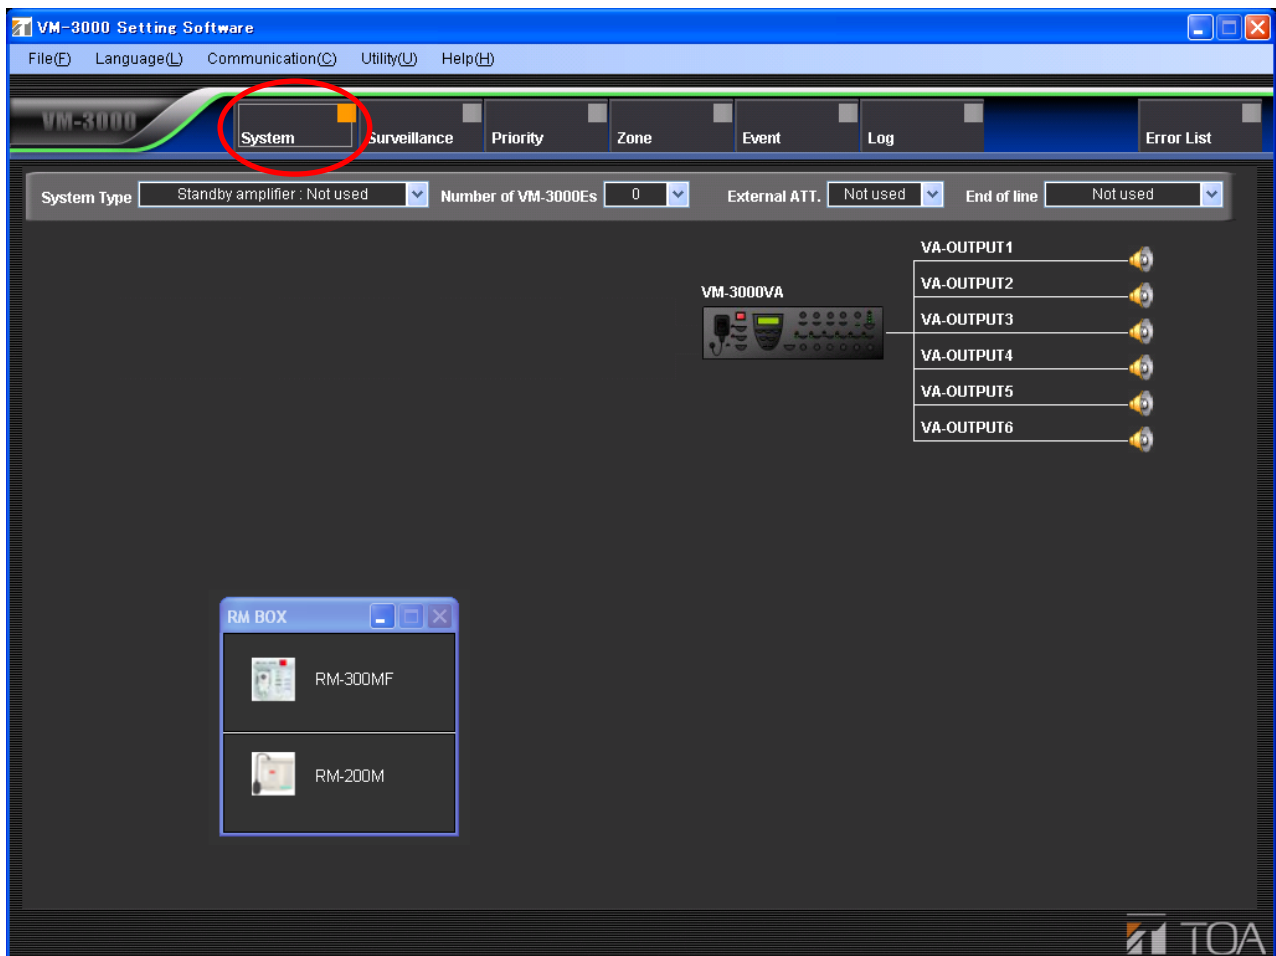


6.1. System Type Settings


Select the type of VM-3000 system.

Available Settings	Standby amplifier: Not used (default), Standby amplifier: Used, BGM/PAGING System
--------------------	---

Setting this to "Standby amplifier: Not used" sets the configuration to a system that does not use a standby amplifier.

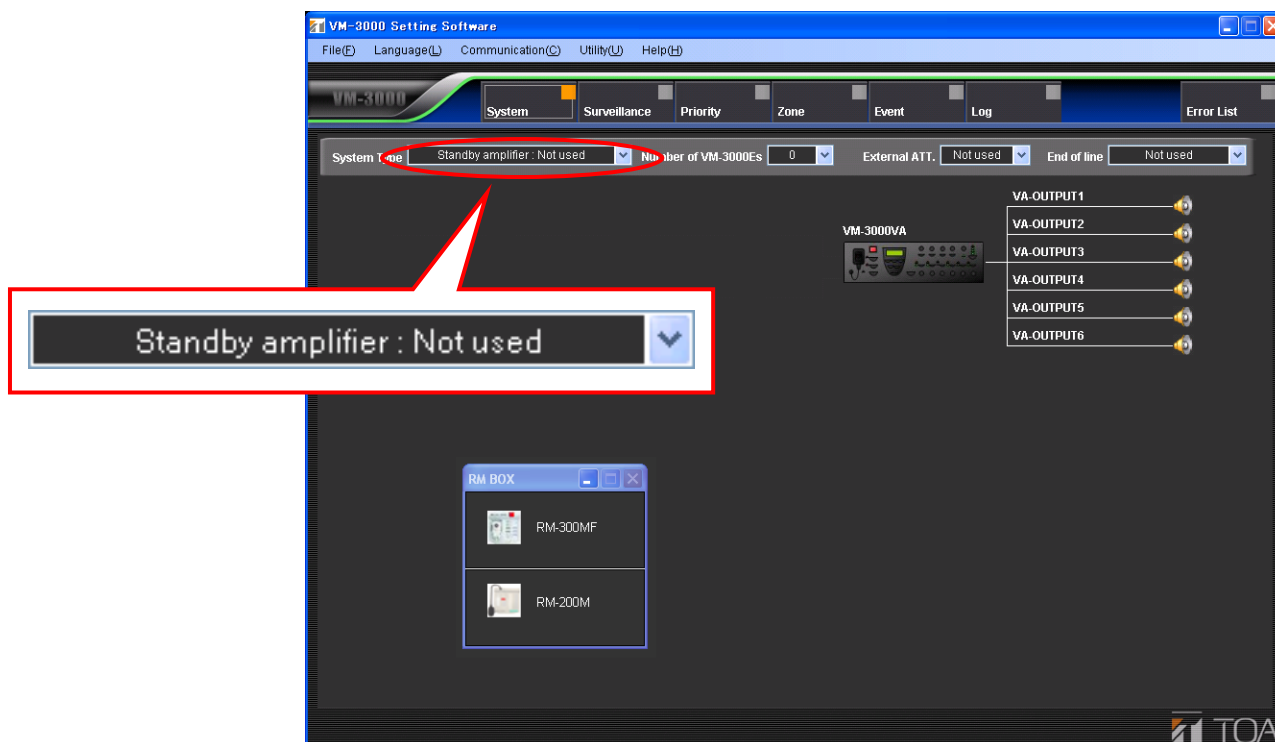


Setting this to "Standby amplifier: Used" sets the configuration to a system that does use a standby amplifier. In such cases, use a VP-2000 series amplifier as the VM-3000VA's standby amplifier.

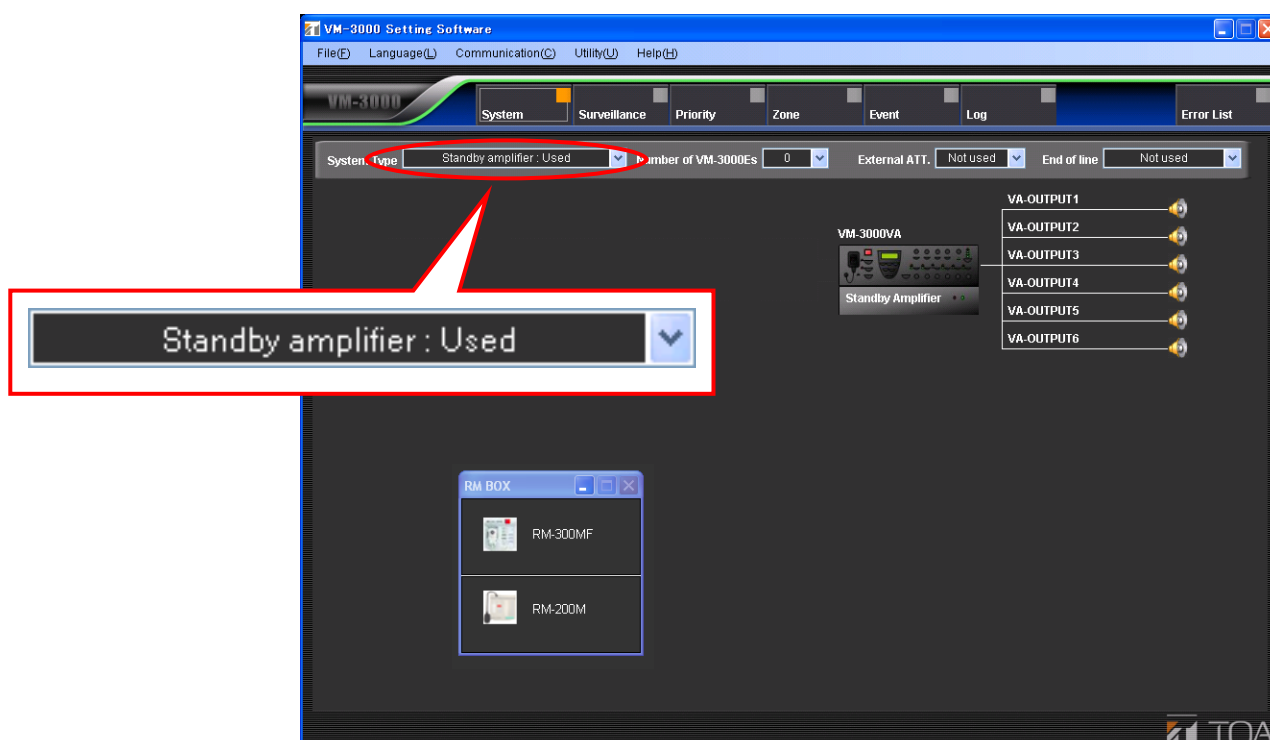

Setting this to "BGM/Paging System" allows connection of a VP-2000 series amplifier to each VM-3000VA and VM-3000E in order to configure simultaneous 2-channel broadcast system for BGM and paging announcement.

In the case of emergency broadcasts, simultaneous 2-channel broadcast of microphone announcements, and pre-recorded Evacuation or Alert announcements is possible.

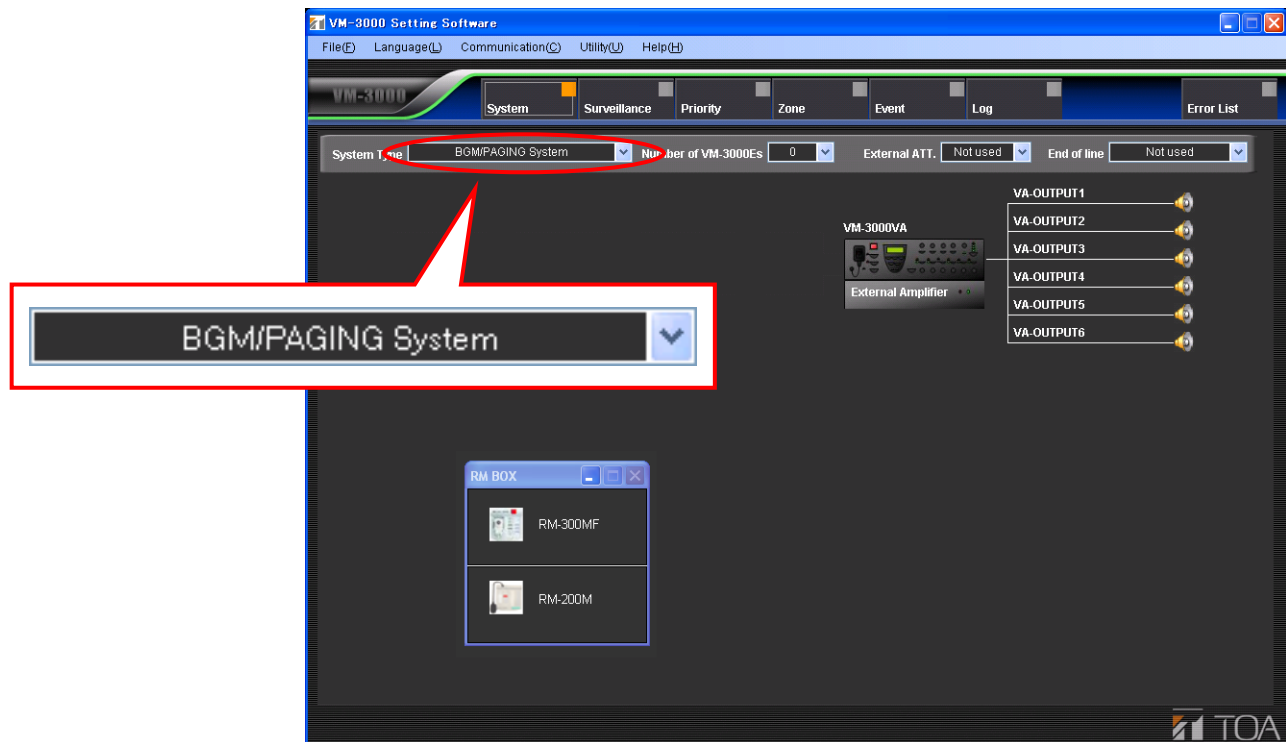


6.2. Setting the Number of VM-3000Es

Set the number of VM-3000Es being used.

Available Settings	0 to 9 (default: 0)
--------------------	---------------------


Selecting a number causes the VM-3000E icon to be displayed.

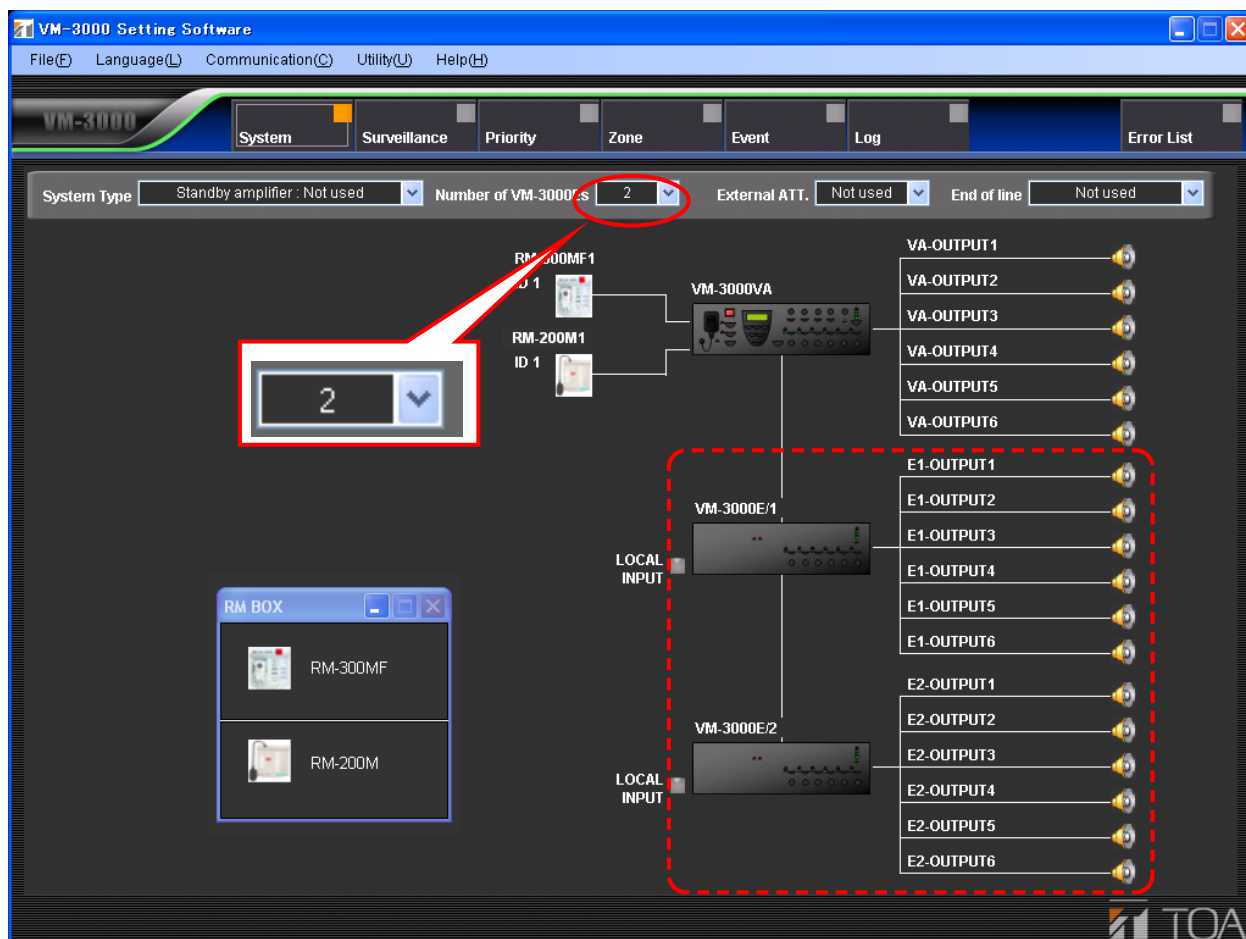

6.3. Settings for RM-300MF & RM-200M Remote Microphones

Set the remote microphones being used.

Select the remote microphones to be used from the "RM BOX" window on the system setting screen, then drag and drop it around the VM-3000VA icon.

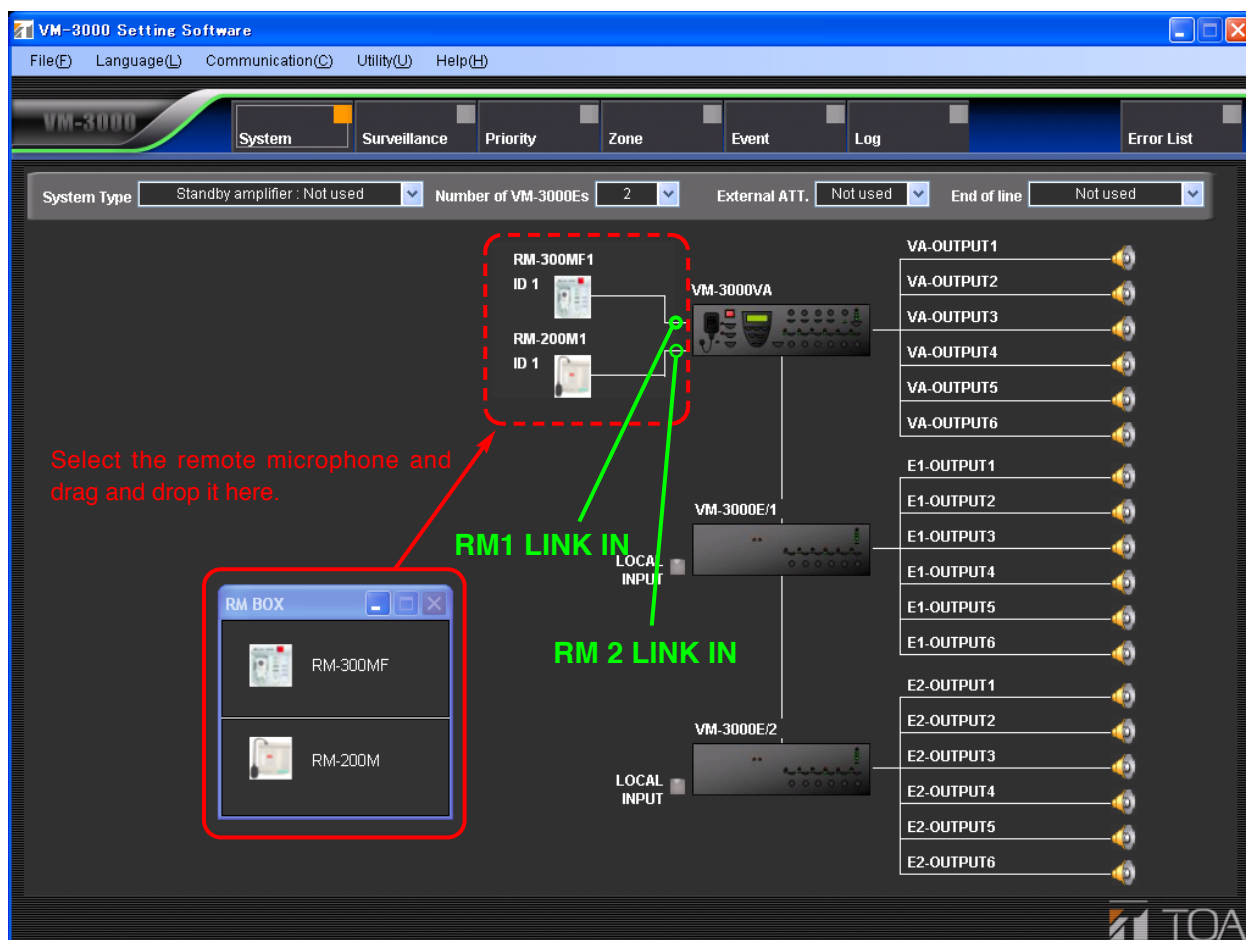

Clicking the set remote microphone icon transfers the display to the [RM Key Setting screen \(page 57\)](#) in [Event Settings](#), allowing the functions of the remote microphone keys to be set.

To delete a set remote microphone icon, position the pointer on it and right click to access the "Delete" option.


6.4. External ATT Settings

Notes



- This function can be used only when all the versions of VM-3000VA firmware, VM-3000E firmware, and VM-3000 Setting Software are 2.00 or later.
- Both of external attenuators and the EOL unit ([refer to page 21](#)) cannot be used together in the same system.

Set whether or not an external attenuator is being used.

Available Settings	Not used (default), All output, Each output
--------------------	---


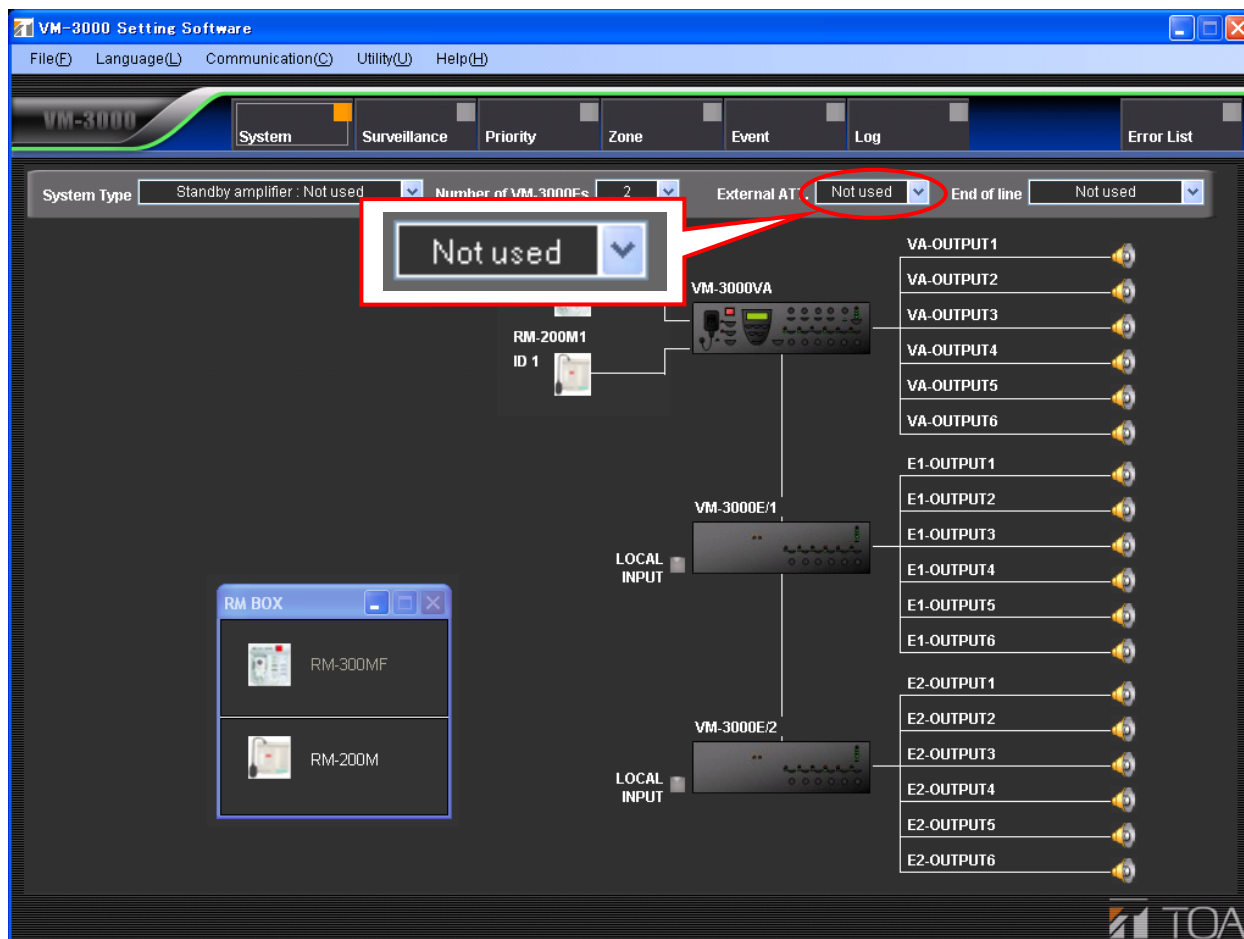


Setting this to "All output" causes the speaker lines to be displayed as shown at right.

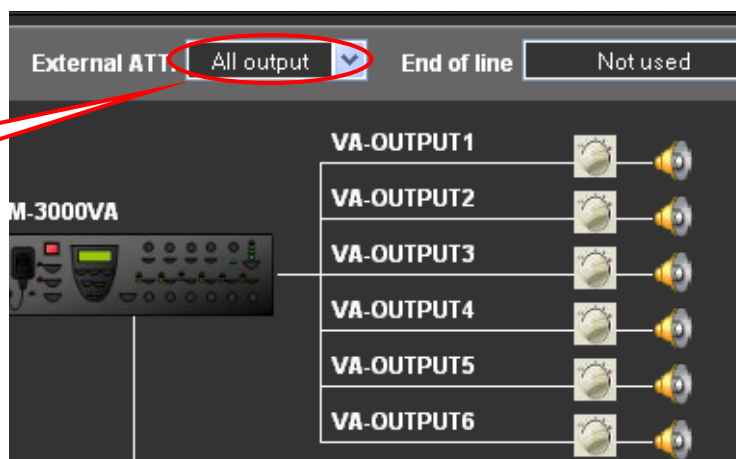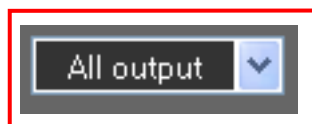

Setting this to "Each output" causes the speaker lines to be displayed as shown at right.

Each attenuator can be turned ON (used) or OFF (not used) each time its icon is clicked.

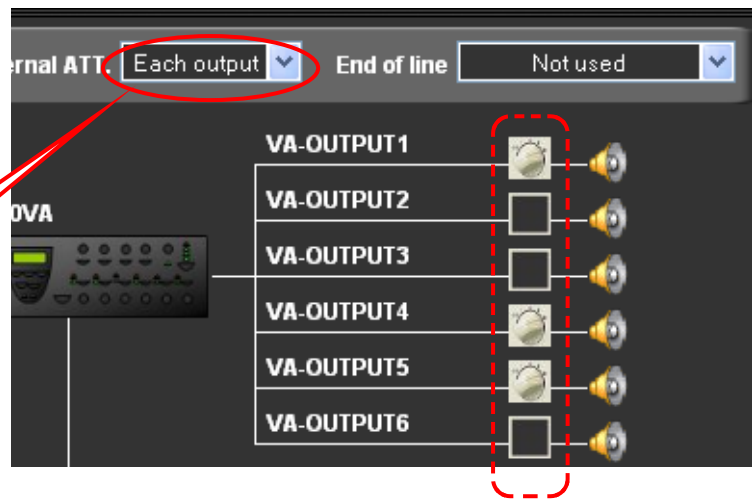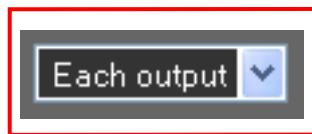

6.5. End of Line (EOL) Unit Settings

Notes


- This function can be used only when all the versions of VM-3000VA firmware, VM-3000E firmware, and VM-3000 Setting Software are 2.00 or later.
- Both of external attenuators ([refer to page 19](#)) and the EOL unit cannot be used together in the same system.

The EOL unit installed at the end of speaker line monitors the presence or absence of a 40 Hz pilot tone from the VM-3000. If the line failure occurs, contact information is sent from the EOL to the VM-3000's emergency control input, informing the VM-3000 of the abnormality condition.

(The VM-3000's emergency control input should be set. See [page 53](#), Emergency Control Input Settings.)


If the End of line setting is changed on the system setting screen, the emergency control input should also be changed.

Set the End of line item to "Each output" on the system setting screen as shown below.

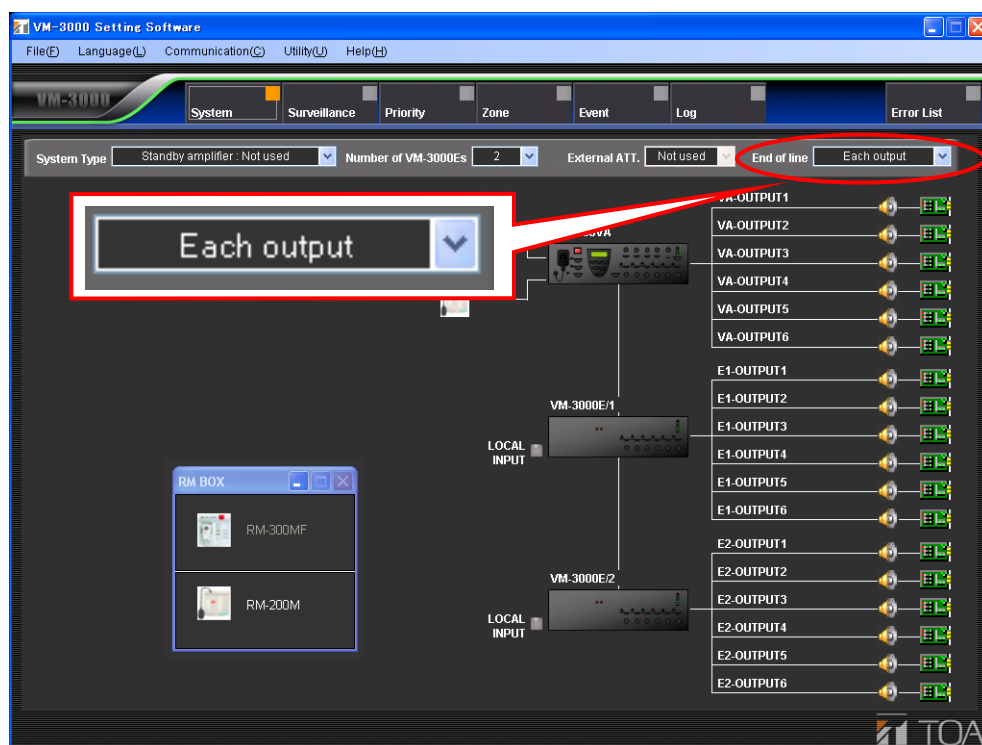

Note


The following dialog is displayed after the EOL setting completion. Click "Yes," then perform the emergency control input setting in the Event settings referring to [page 53](#).

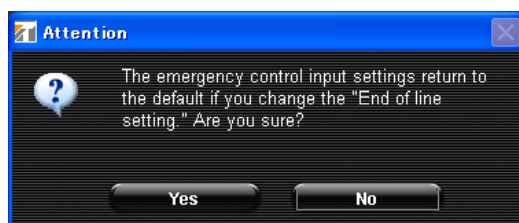

6.6. VM-3000VA Settings

Set the audio inputs and outputs, as well as control inputs and outputs, for the VM-3000VA.

Clicking the VM-3000VA icon on the System Setting screen switches the display to the VM-3000VA setting screen.

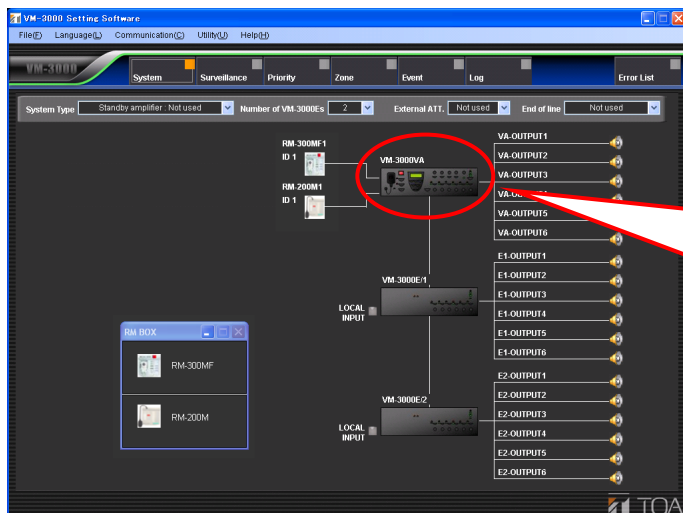

VM-3000VA



Click the VM-3000VA icon.

"VM-3000VA Setting Screen"


Changeover to the VM-3000VA/VM-3000E setting screen (p. 29)

RM-200M setting (p. 24)

Audio input setting (p. 23)

Audio output setting (p. 26)

RM-300MF setting (p. 25)

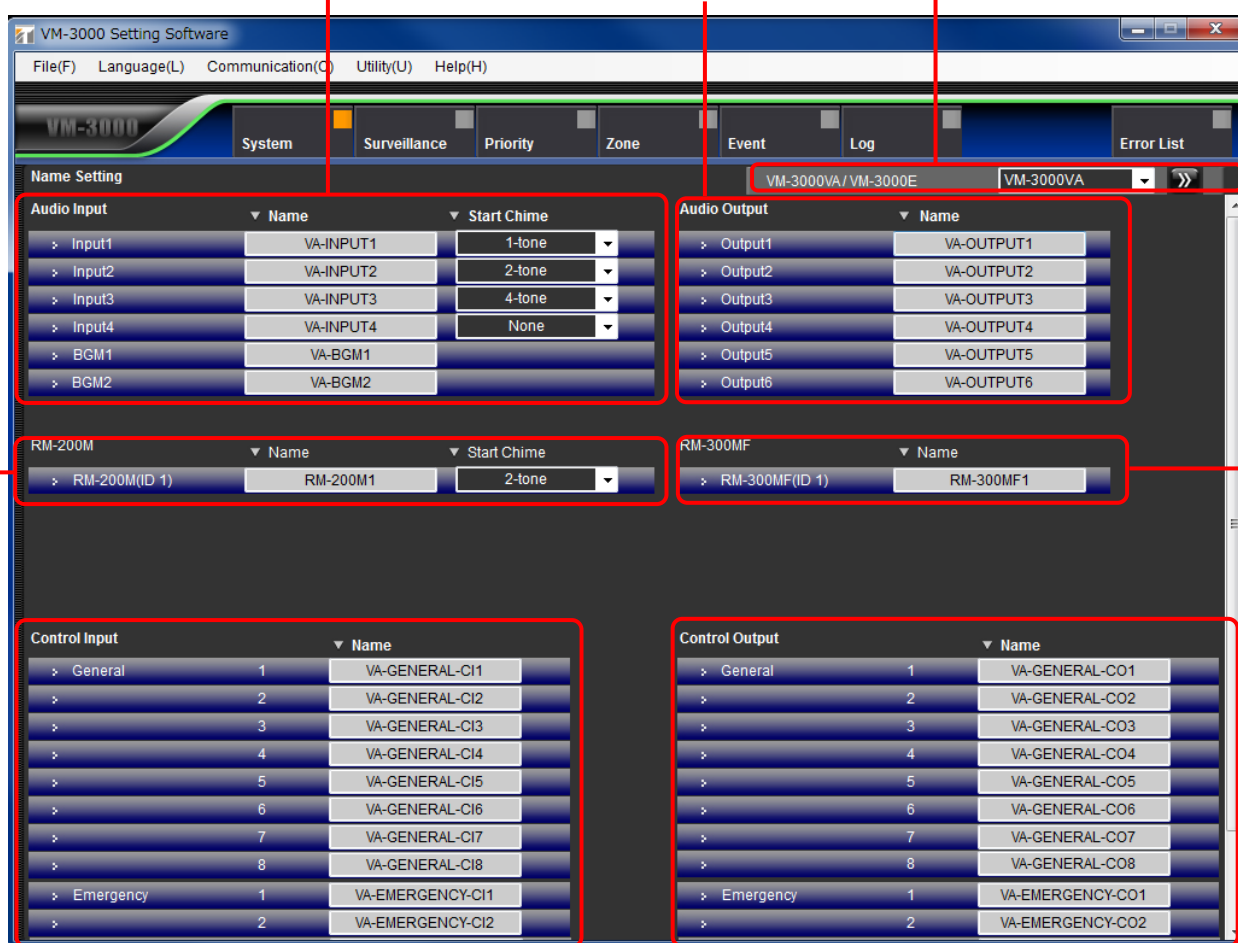


Control input setting (p. 27)

Control output setting (p. 28)

6.6.1. Audio input settings

Set the audio inputs for the VM-3000VA.

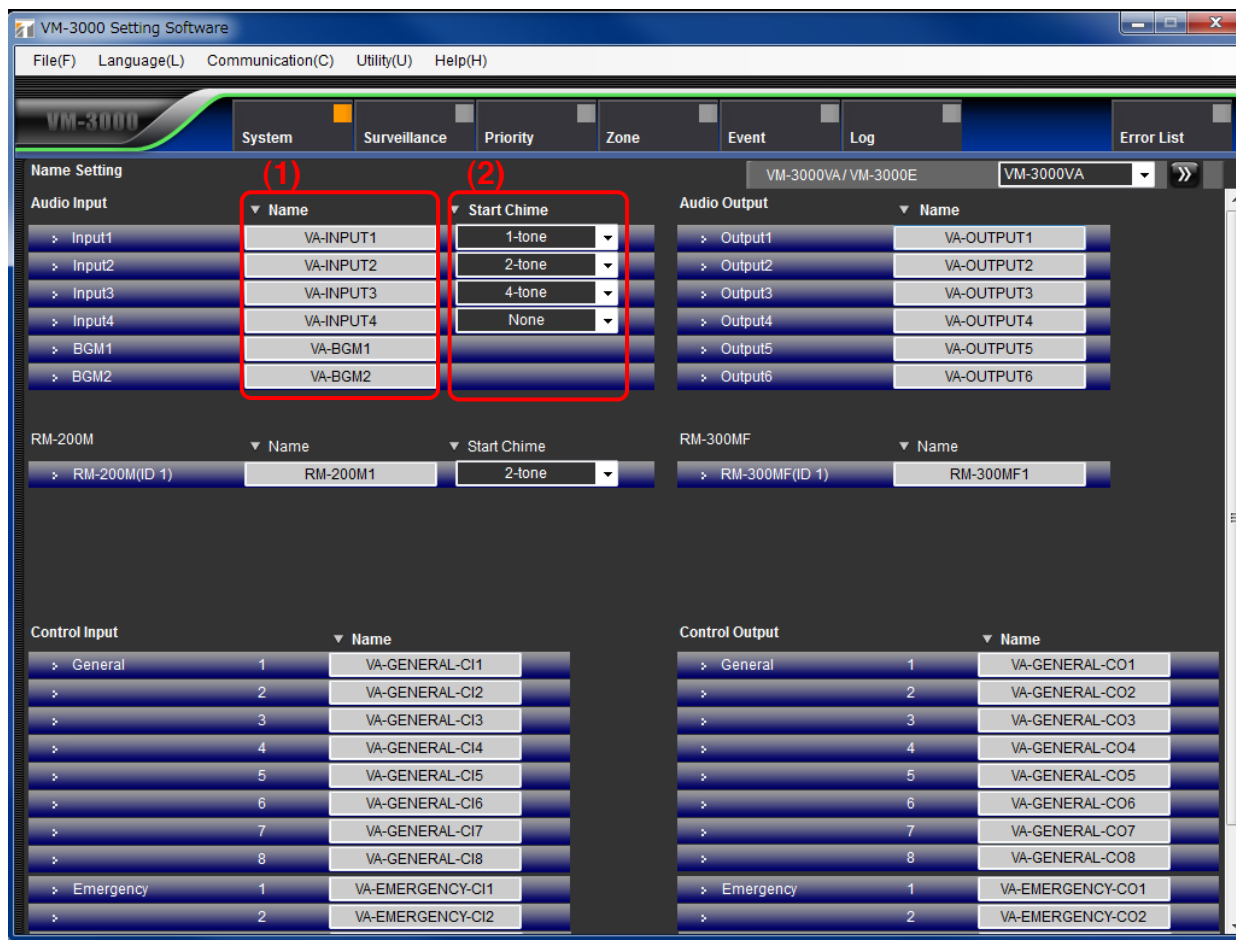

(1) Name

Sets each audio input name.

Available Settings	Up to 16 alphanumeric characters (default names are VA-INPUT* and VA-BGM* in which "*" is a number).
--------------------	--


(2) Start Chime

Selects the chime sound used at the beginning of audio input broadcasting.

Available Settings	None (default), 1-tone, 2-tone, 4-tone, Gong
--------------------	--

6.6.2. RM-200M setting

Set the RM-200M.

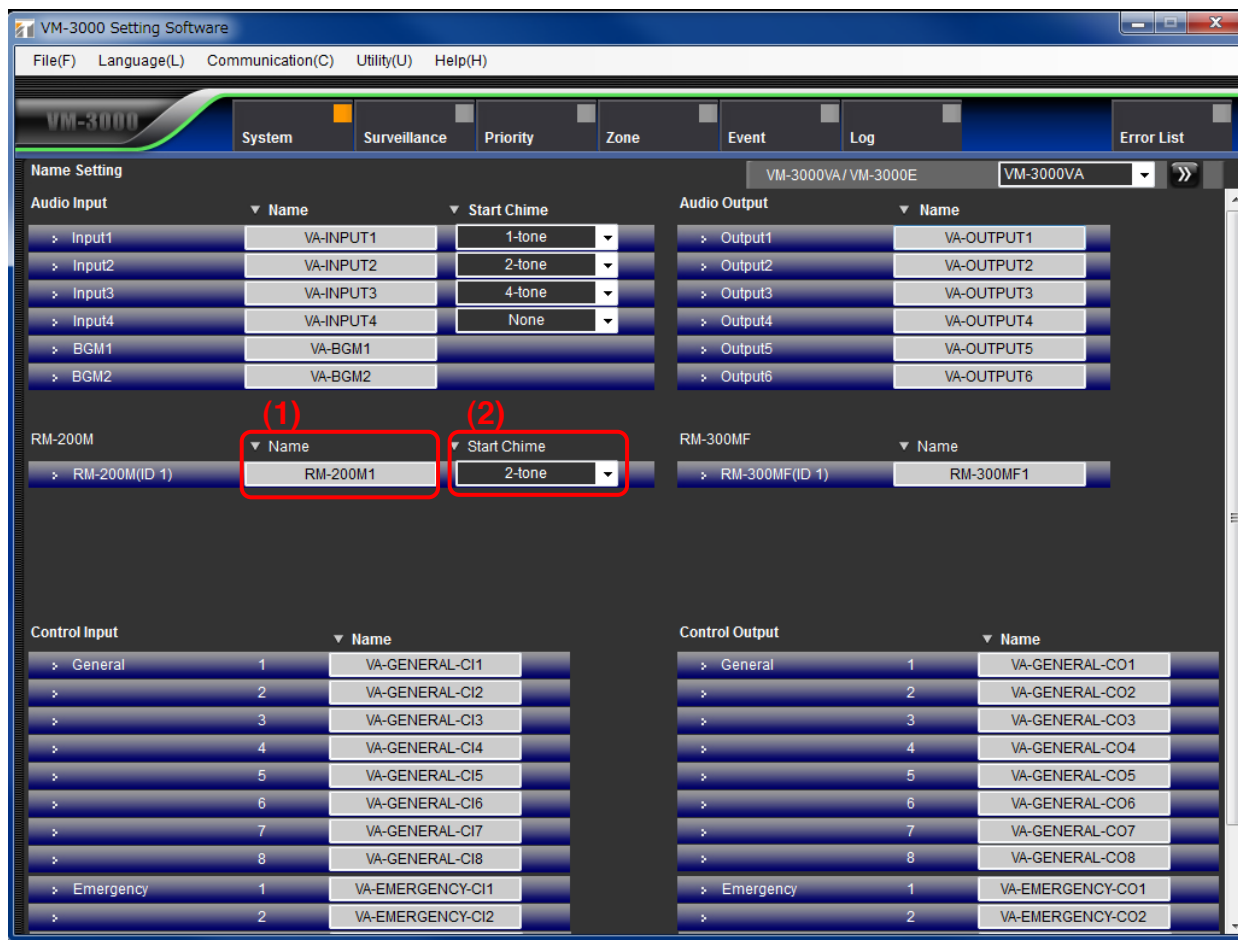

(1) Name

Sets the RM-200M name.

Available Settings	Up to 16 alphanumeric characters (default names are RM-200M*, in which “*” is a number).
--------------------	--


(2) Start Chime

Selects the chime sound used at the beginning of RM-200M broadcasting.

Available Settings	None (default), 1-tone, 2-tone, 4-tone, Gong
--------------------	--

6.6.3. RM-300MF setting

Set the RM-300MF.

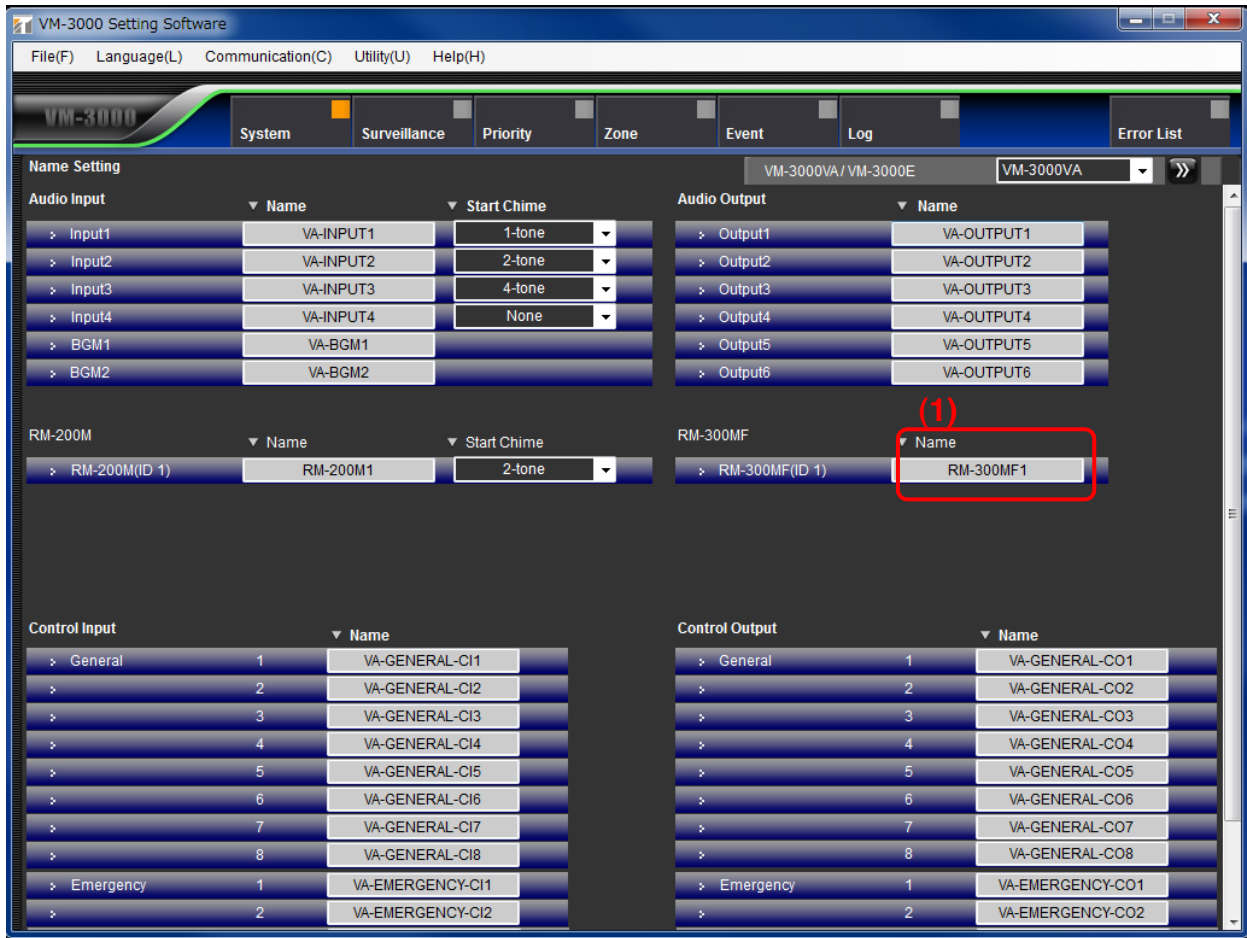


(1) Name

Sets the RM-300MF name.

Available Settings	Up to 16 alphanumeric characters (default names are RM-300MF*, in which “*” is a number).
--------------------	---

6.6.4. Audio output settings

Set the audio outputs for the VM-3000VA.

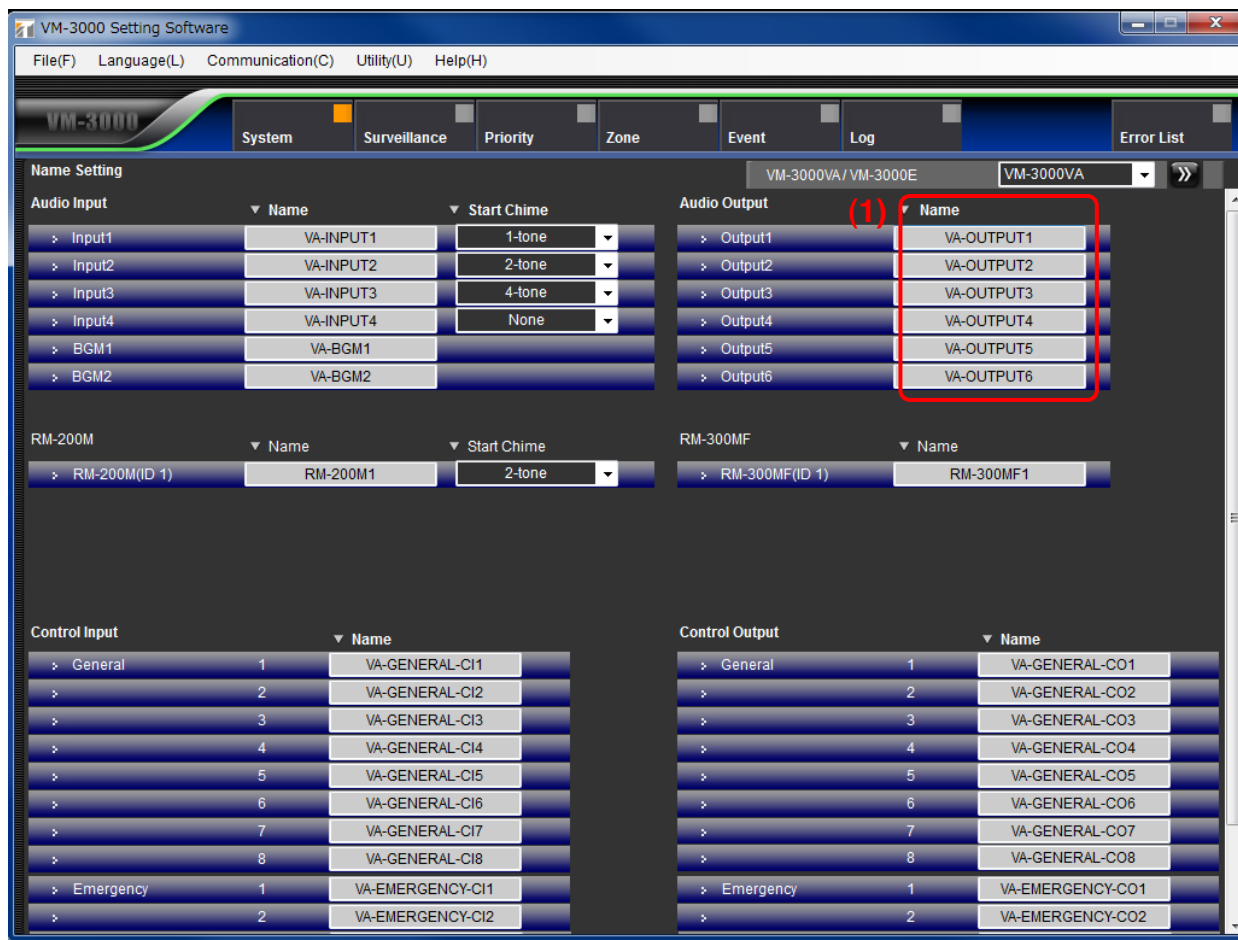


(1) Name

Sets each audio output name.

Available Settings	Up to 16 alphanumeric characters (default name is VA-OUTPUT*, in which "*" is the terminal number).
--------------------	---

6.6.5. Control input settings

Set the control inputs for the VM-3000VA.

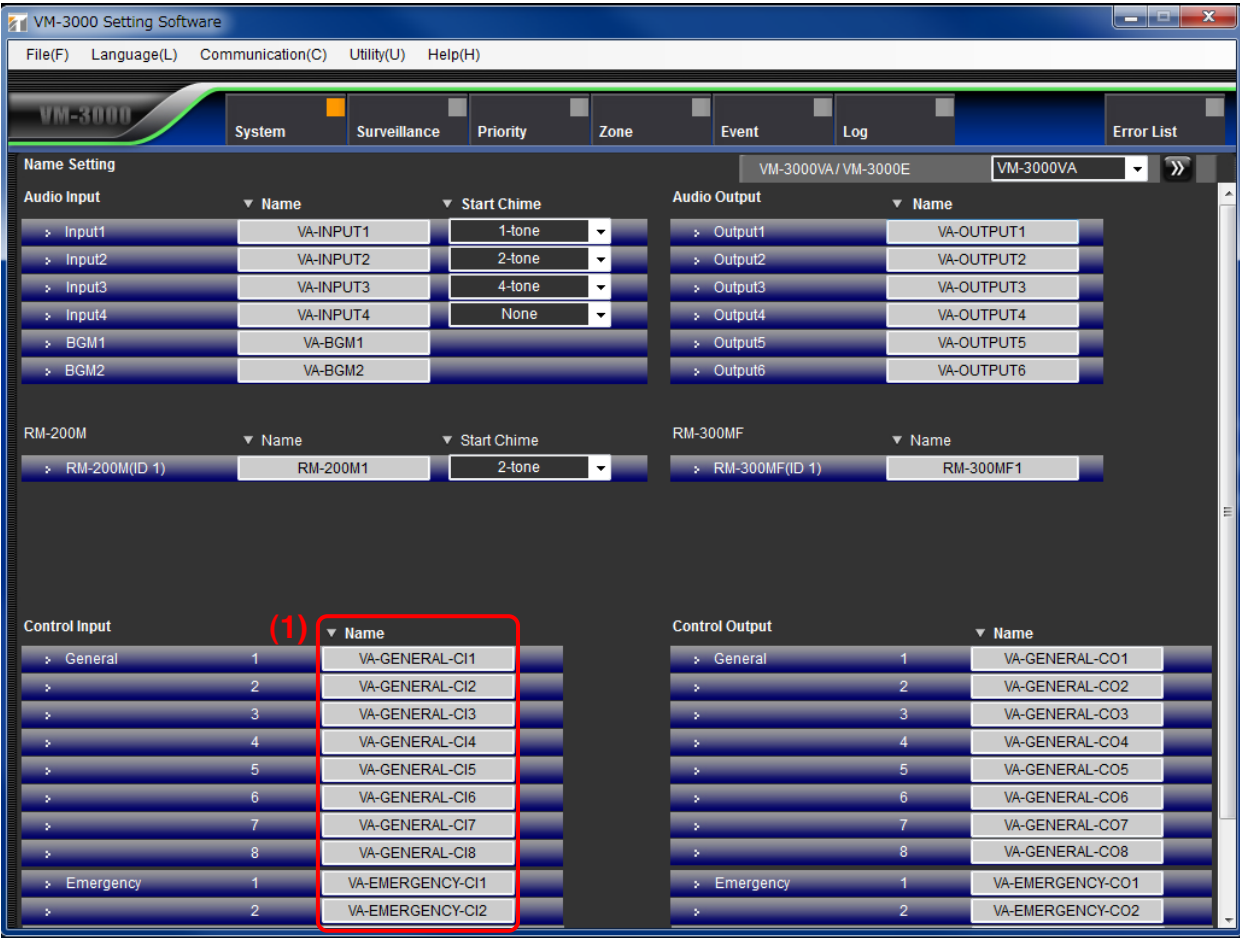


(1) Name

Sets the names for general and emergency control inputs.

Available Settings	Up to 16 alphanumeric characters (default names are VA-GENERAL-CI* and VA-EMERGENCY-CI*, in which "*" is the terminal number).
--------------------	--

6.6.6. Control output settings

Set the control outputs for the VM-3000VA.

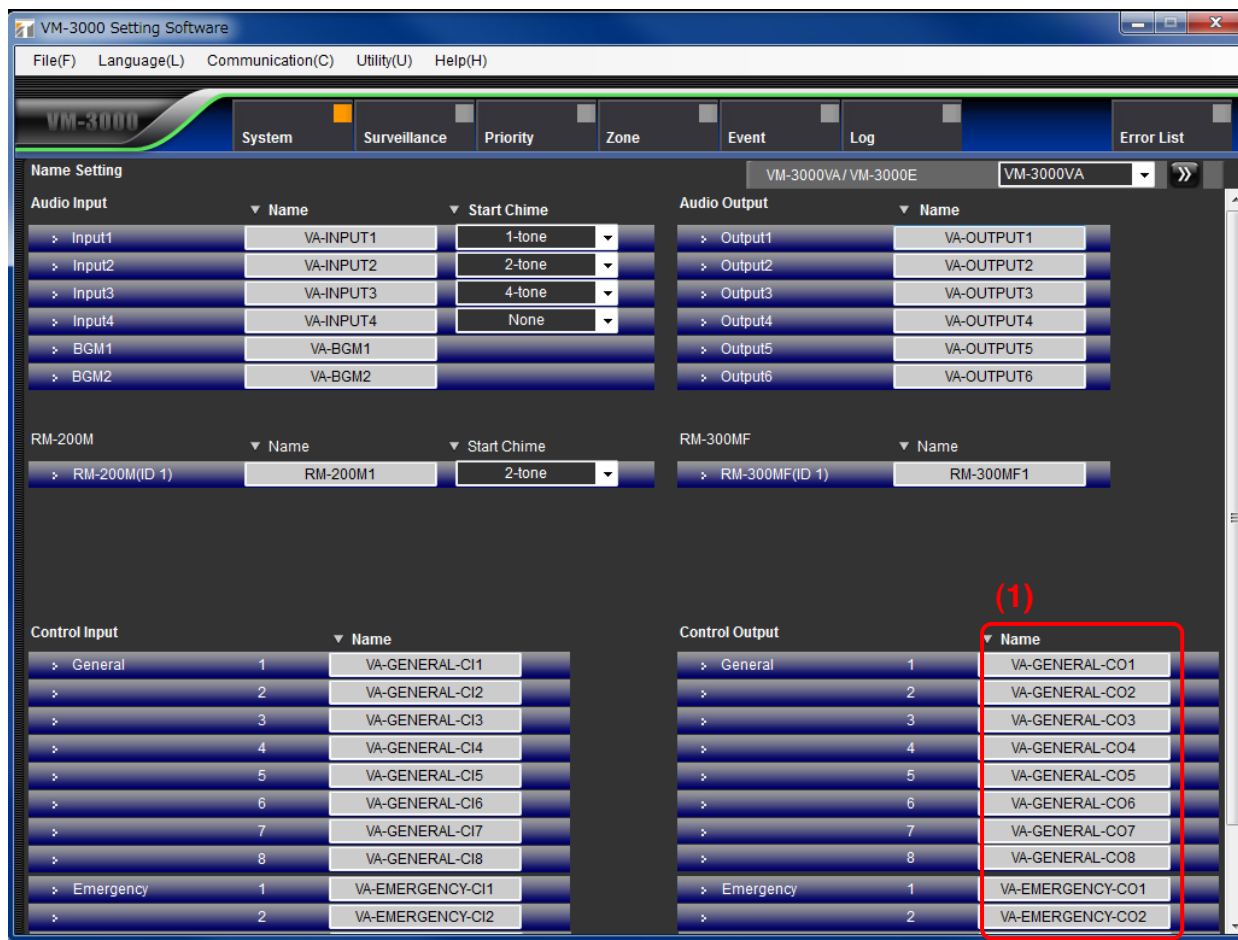

(1) Name

Sets the names for general control outputs and status outputs.

Available Settings	Up to 16 alphanumeric characters (default names are VA-GENERAL-CO* and VA-EMERGENCY-CO*, in which "*" is the terminal number).
--------------------	--

6.6.7. VM-3000VA/VM-3000E setting screen changeover

Click the box or double-arrow button to select the VM-3000VA or VM-3000E to be set. This will cause the display to change to the setting screen for the selected model.

See [page 31](#) for VM-3000E settings.

VM-3000 Setting Software

File(F) Language(L) Communication(C) Utility(U) Help(H)

VM-3000

System Surveillance Priority Zone Event Log Error List

Name Setting

VM-3000VA / VM-3000E VM-3000VA

Audio Input

	Name	Start Chime
> Input1	VA-INPUT1	1-tone
> Input2	VA-INPUT2	2-tone
> Input3	VA-INPUT3	4-tone
> Input4	VA-INPUT4	None
> BGM1	VA-BGM1	
> BGM2	VA-BGM2	

Audio Output

	Name
> Output1	VA-OUTPUT1
> Output2	VA-OUTPUT2
> Output3	VA-OUTPUT3
> Output4	VA-OUTPUT4
> Output5	VA-OUTPUT5
> Output6	VA-OUTPUT6

RM-200M

	Name	Start Chime
> RM-200M(ID 1)	RM-200M1	2-tone

RM-300MF

	Name
> RM-300MF(ID 1)	RM-300MF1

Control Input

	Name
> General 1	VA-GENERAL-CI1
> 2	VA-GENERAL-CI2
> 3	VA-GENERAL-CI3
> 4	VA-GENERAL-CI4
> 5	VA-GENERAL-CI5
> 6	VA-GENERAL-CI6
> 7	VA-GENERAL-CI7
> 8	VA-GENERAL-CI8
> Emergency 1	VA-EMERGENCY-CI1
> 2	VA-EMERGENCY-CI2


Control Output

	Name
> General 1	VA-GENERAL-CO1
> 2	VA-GENERAL-CO2
> 3	VA-GENERAL-CO3
> 4	VA-GENERAL-CO4
> 5	VA-GENERAL-CO5
> 6	VA-GENERAL-CO6
> 7	VA-GENERAL-CO7
> 8	VA-GENERAL-CO8
> Emergency 1	VA-EMERGENCY-CO1
> 2	VA-EMERGENCY-CO2


6.6.8. Returning to the system setting screen from the VM-3000VA setting screen

To return to the system setting screen from the VM-3000VA setting screen, click the "System" button in the menu bar.

"VM-3000VA setting screen"

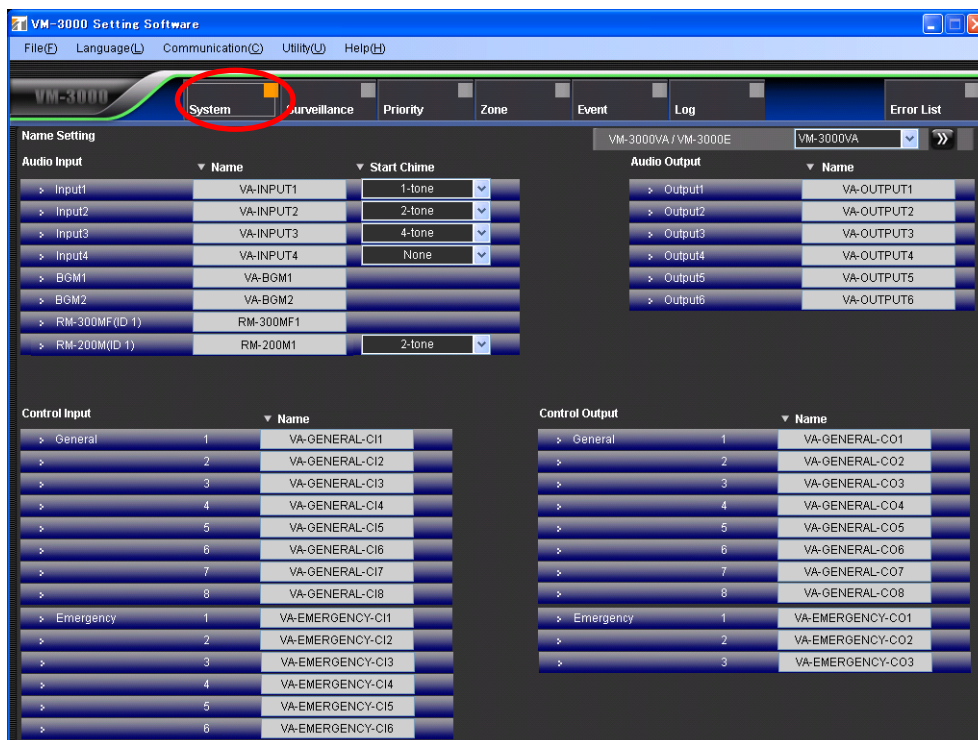


"System setting screen"

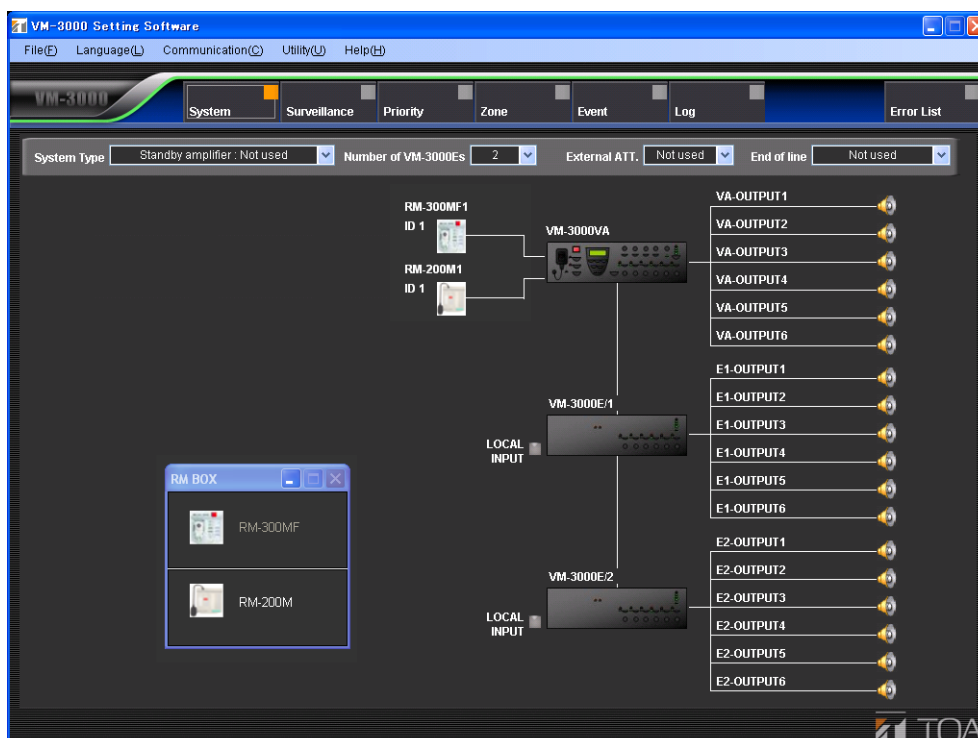


6.7. VM-3000E Settings

Set the audio outputs, as well as control inputs and outputs, for the VM-3000E.

Clicking the VM-3000E/# (in which "#" is an ordinal number) icon on the system setting screen changes the display to the VM-3000E setting screen.

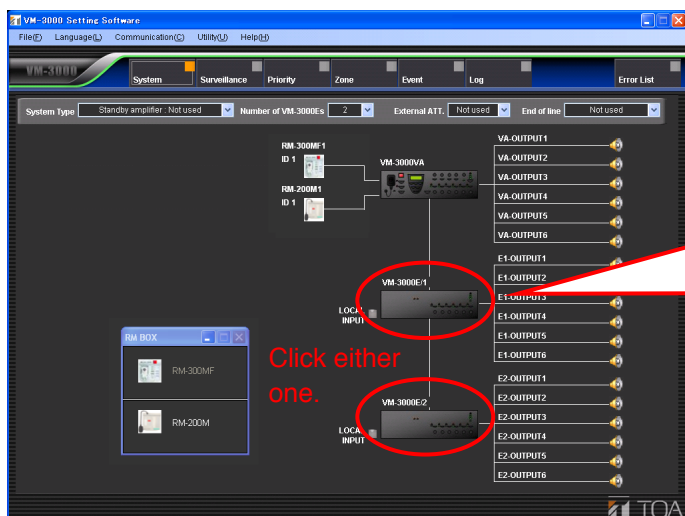

VM-3000E




Click the icon of the VM-3000E to be set.

"VM-3000E Setting Screen"

Changeover to the VM-3000VA/VM-3000E setting screen (p. 35)

Audio output setting (p. 32)

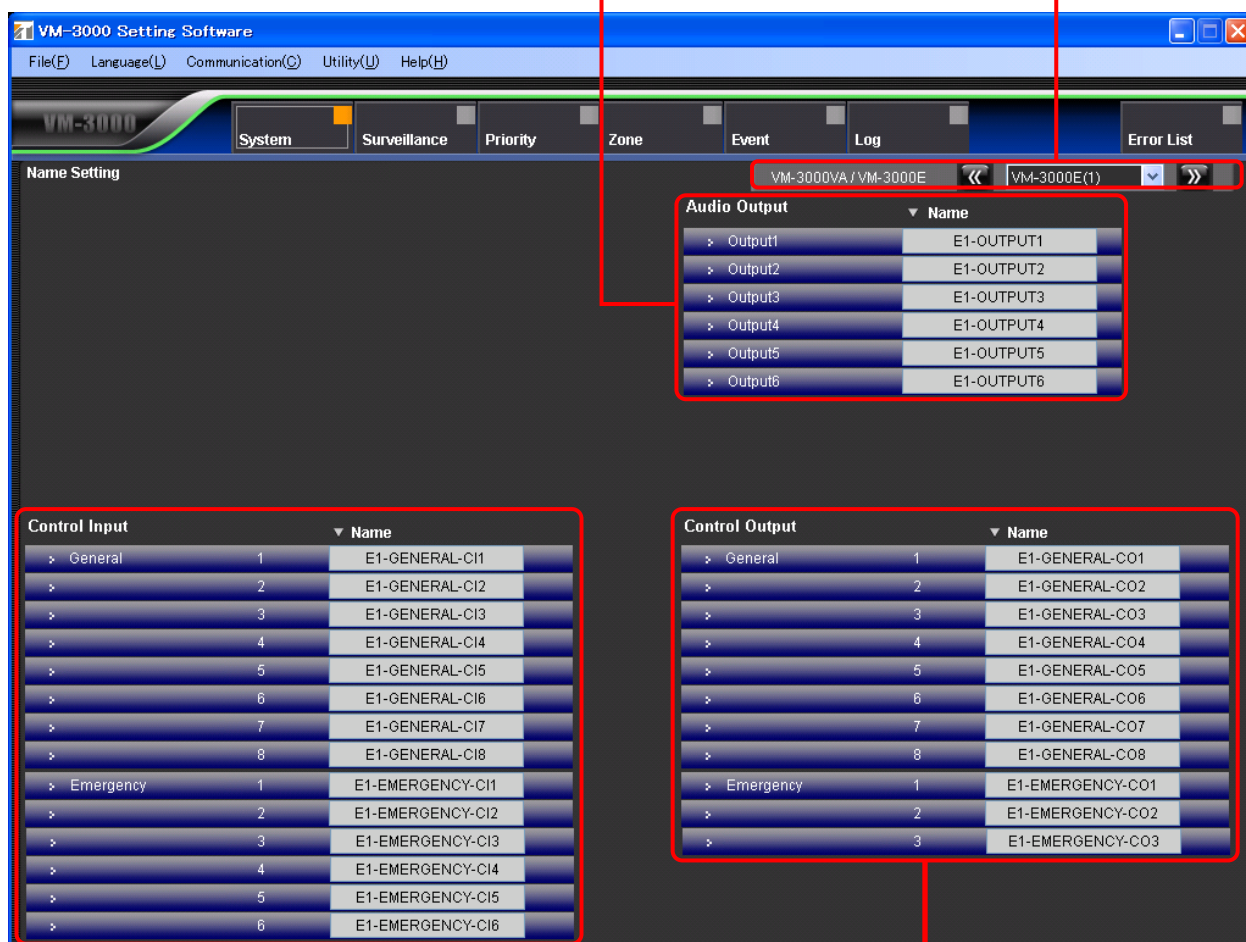


Control input setting (p. 33)

Control output setting (p. 34)

6.7.1. Audio output setting

Set the audio outputs for the VM-3000E.

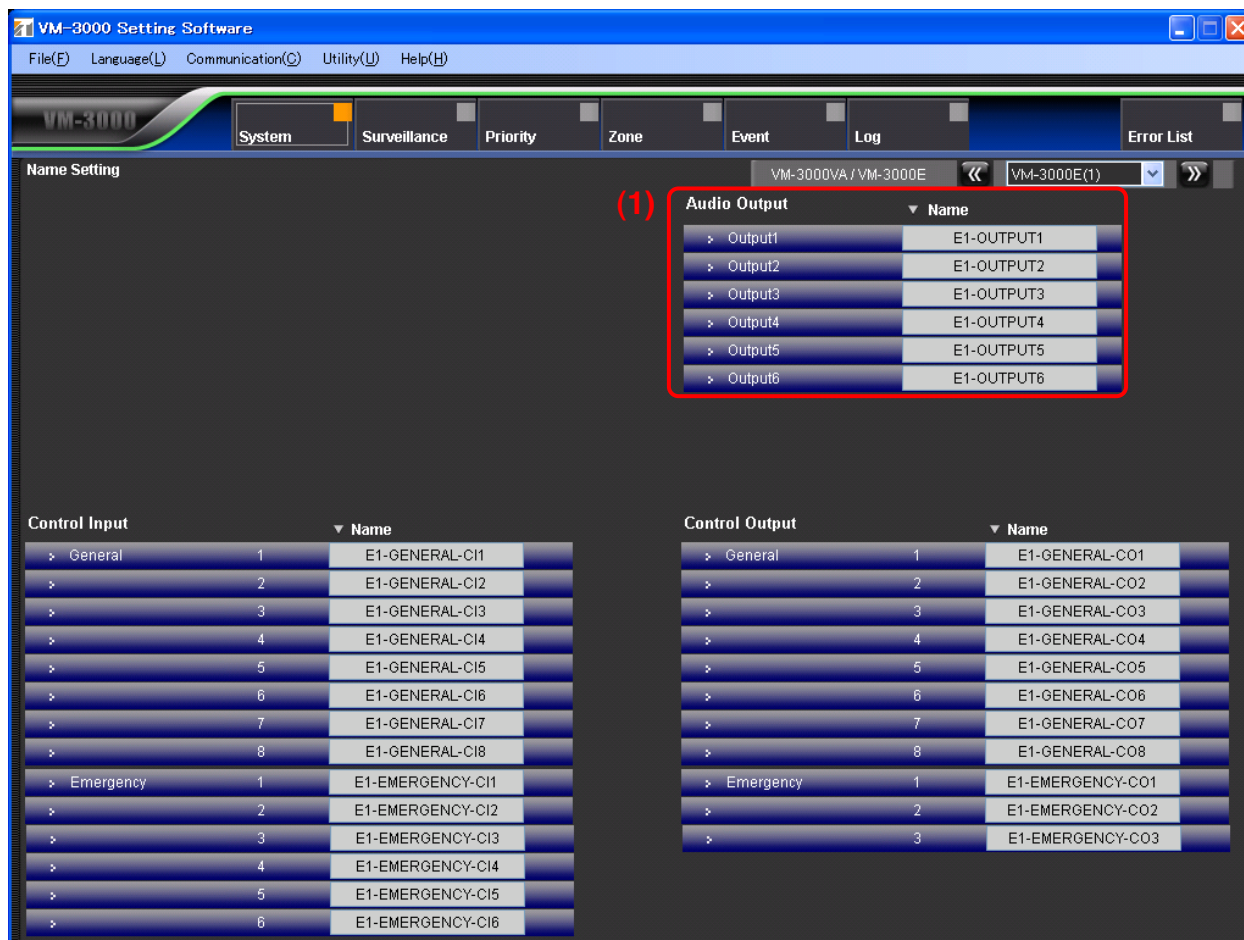

(1) Name


Sets each audio output name.

Available Settings

Up to 16 alphanumeric characters (default names is E#OUTPUT*, in which "#" is an ordinal number and "*" is the terminal number).

6.7.2. Control input settings

Set the control inputs for the VM-3000E.

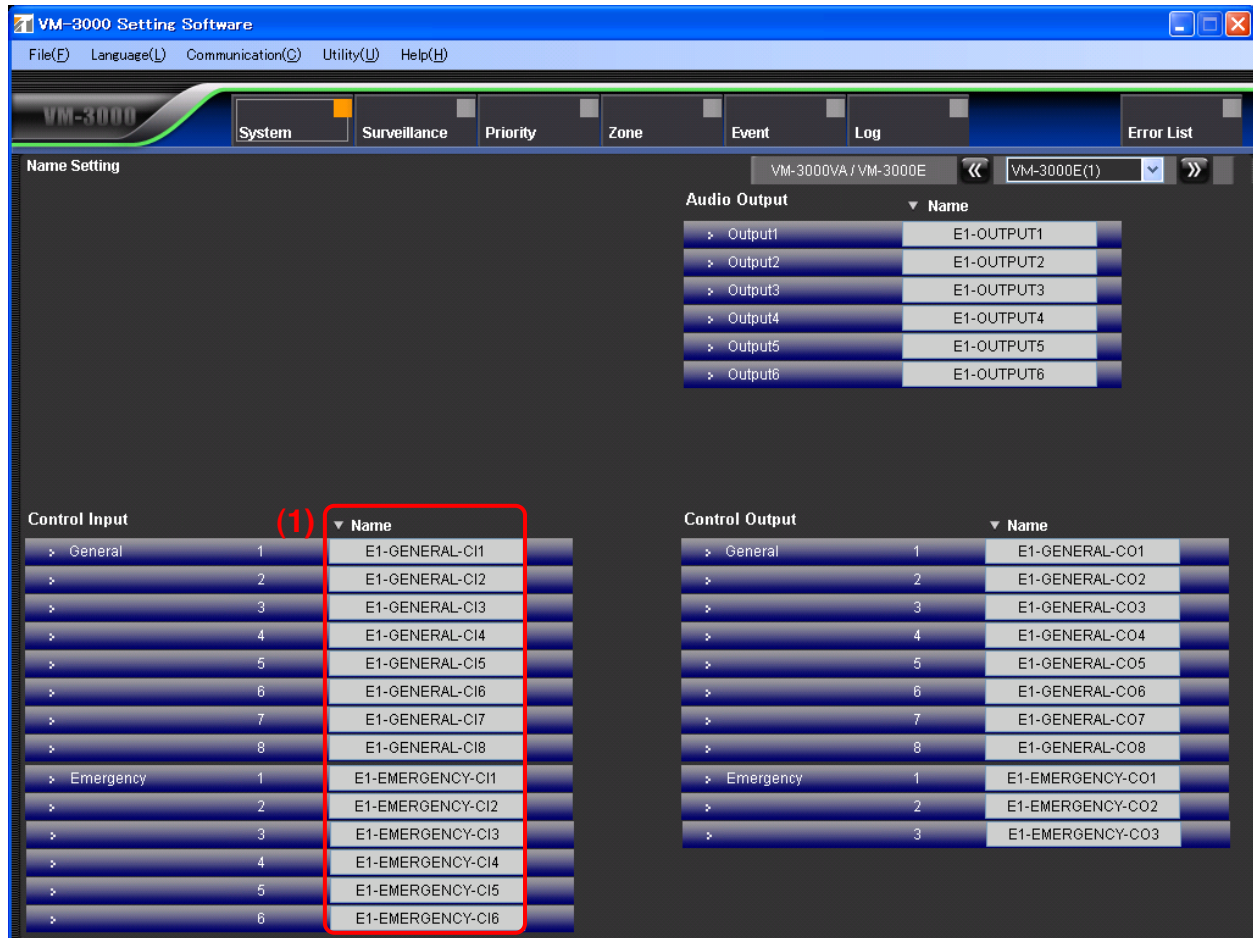

(1) Name

Sets the names for general control inputs and emergency control inputs.

Available Settings	
	Up to 16 alphanumeric characters (default names are E#-GENERAL-CI* and E#-EMERGENCY-CI*, in which "#" is an ordinal number and "*" is the terminal number).

6.7.3. Control output settings

Set the control outputs for the VM-3000E.



(1) Name

Sets the names for general control outputs and status outputs.

Available Settings	Up to 16 alphanumeric characters (default names are E#-GENERAL-CO* and E#-EMERGENCY-CO*, in which "#" is an ordinal number and "*" is the terminal number).
--------------------	---

6.7.4. VM-3000VA/VM-3000E setting screen changeover


Click the box or double-arrow button to select the VM-3000VA or VM-3000E to be set.
This will cause the display to change to the setting screen for the selected model.
See [page 22](#) for VM-3000VA settings.




6.7.5. Returning to the system setting screen from the VM-3000E setting screen

To return to the original system setting screen from the VM-3000E setting screen, click the "System" button in the menu bar.

"VM-3000E setting screen"

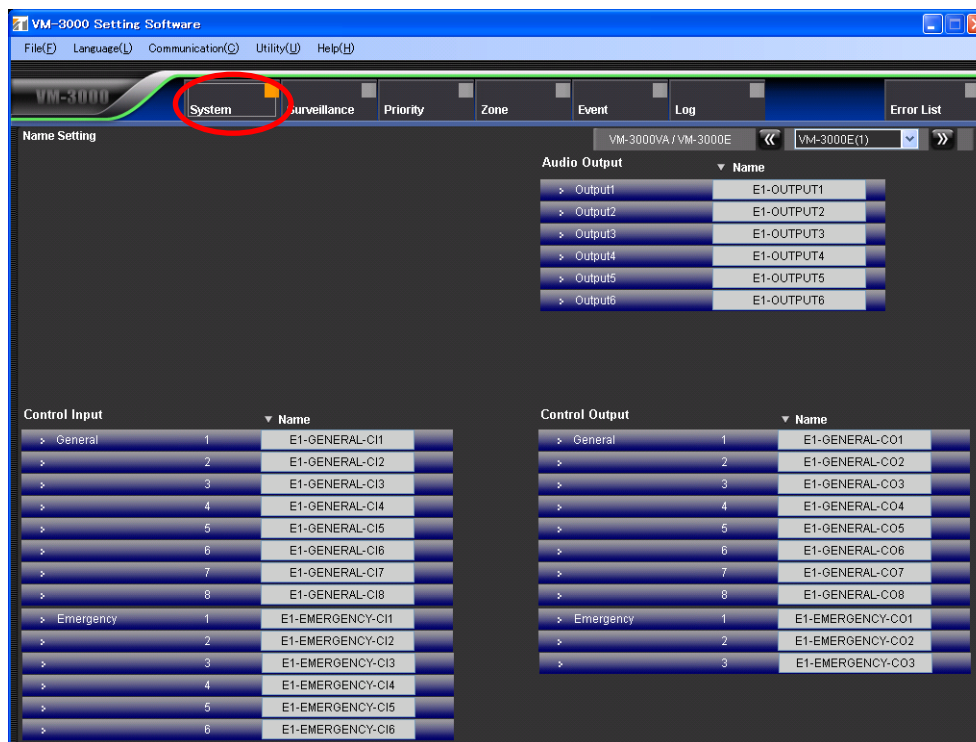

"System setting screen"

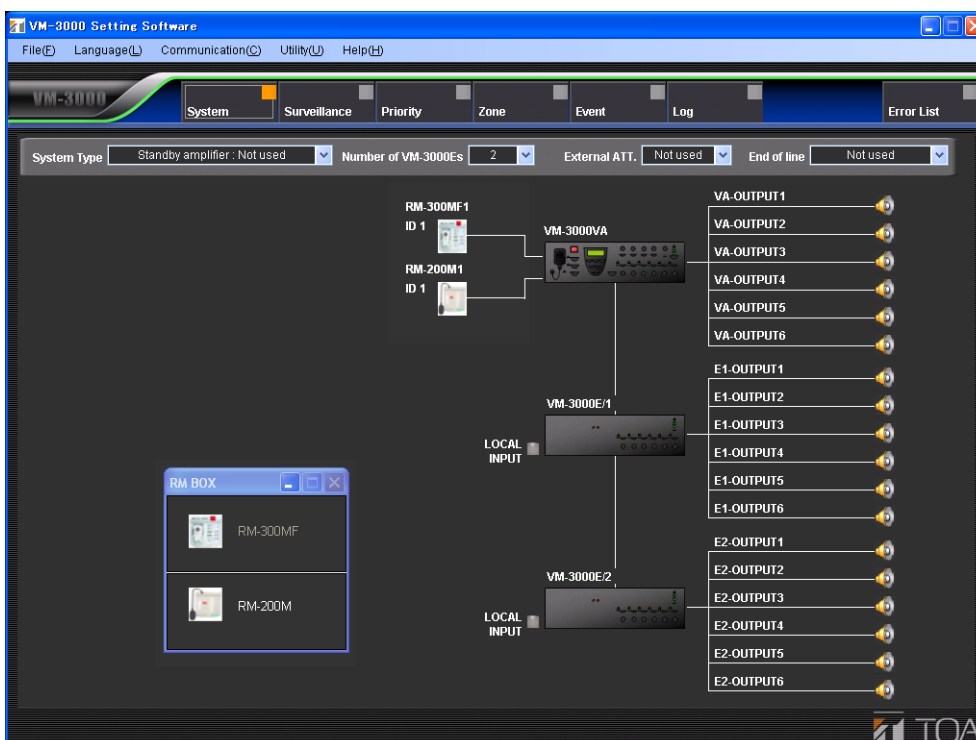

6.8. Local Input Setting

Note


This function can be used only when all the versions of VM-3000VA firmware, VM-3000E firmware, and VM-3000 Setting Software are 2.00 or later.

This setting allows the VM-3000E to make local broadcasts using the local input only within the system that the VM-3000E covers.

Click the VM-3000E's Local Input button on the System Setting screen to activate the local input.

The priority level for the local input source can be set in relation to the input sources of the VM-3000VA. (For priority setting, [refer to p. 43.](#))


The broadcast output channel through the local input is automatically assigned to each corresponding general control input of VM-3000E. ([Refer to p. 52.](#))

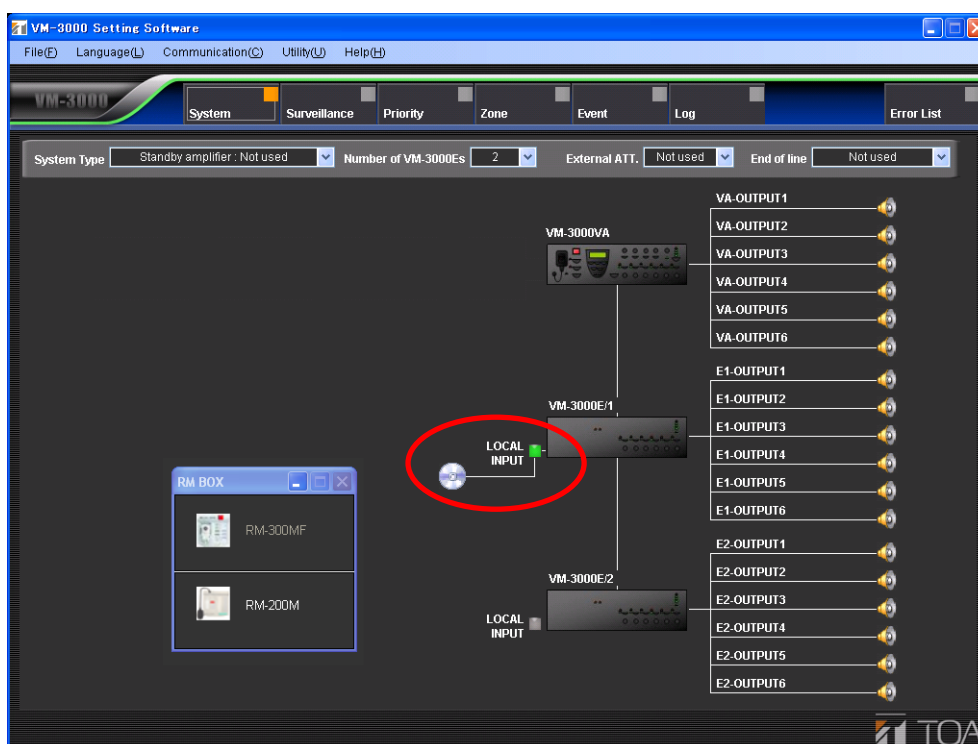

7. SURVEILLANCE SETTINGS


Set individual failure detection items.

Click the Menu item "Surveillance" button to display the surveillance setting screen.

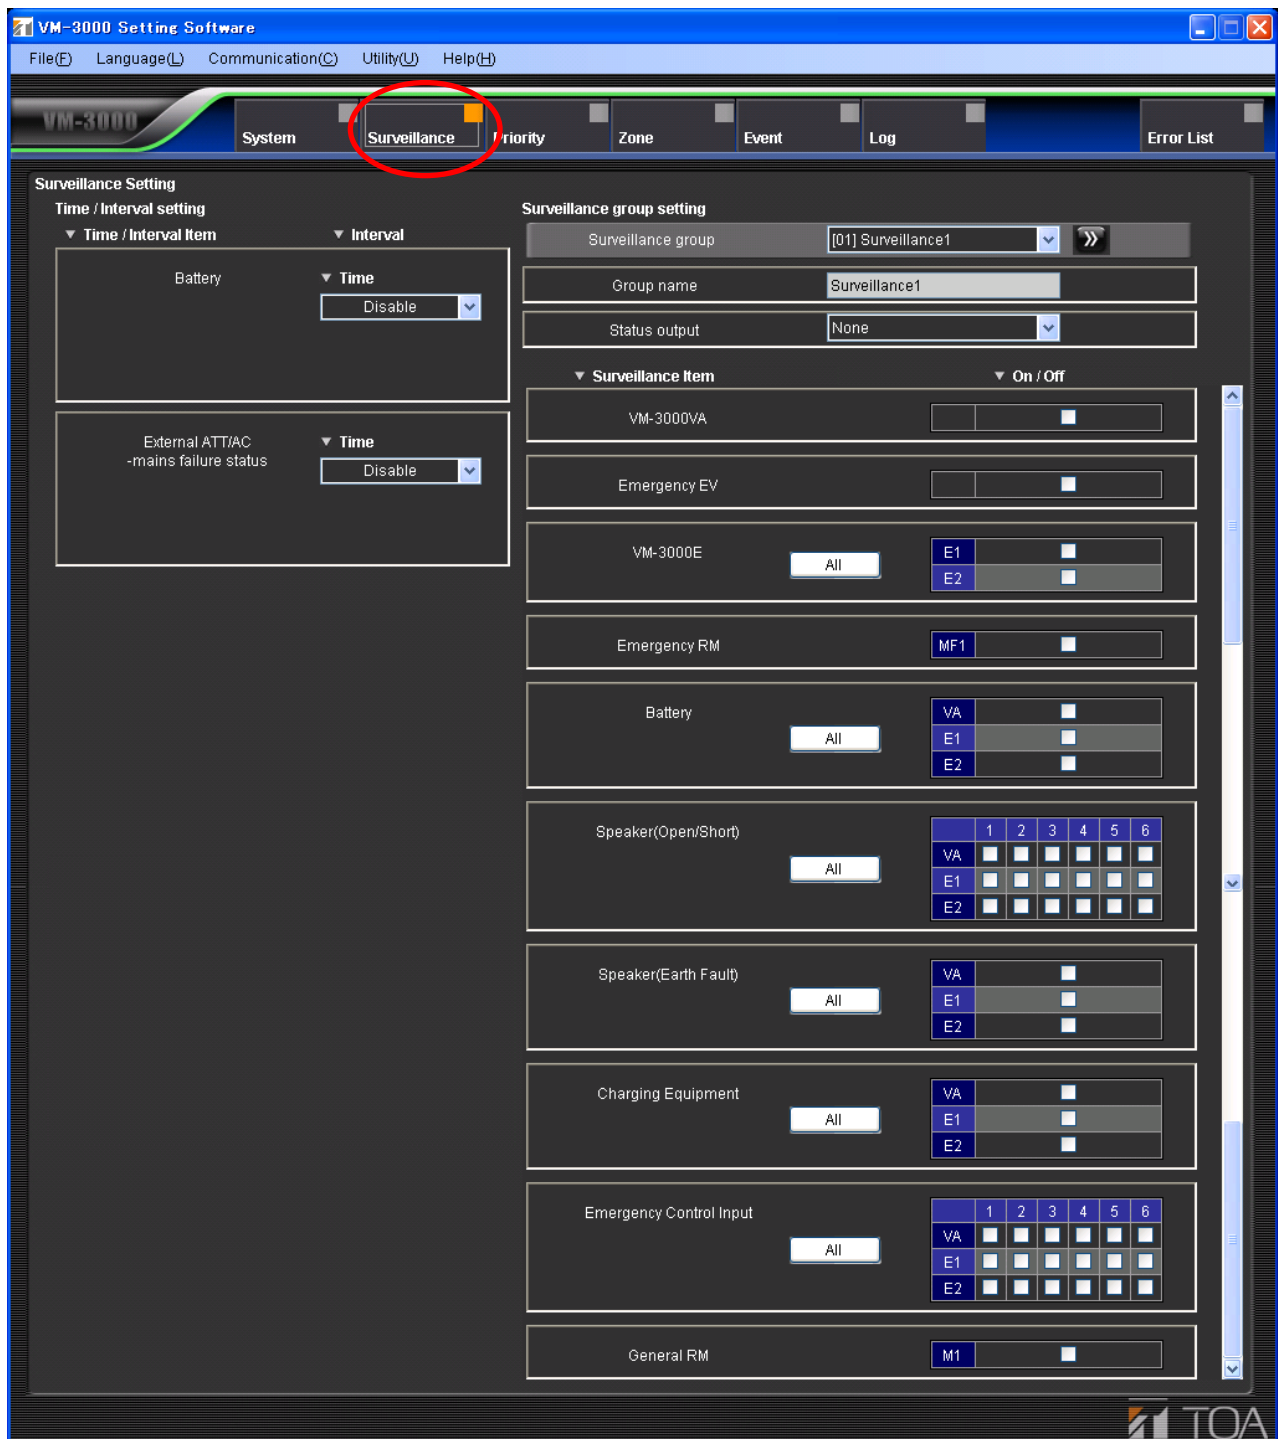

7.1. Time/Interval Setting

Set the start time and interval for battery check, external attenuator-connected speaker line check, and system surveillance at power failure.

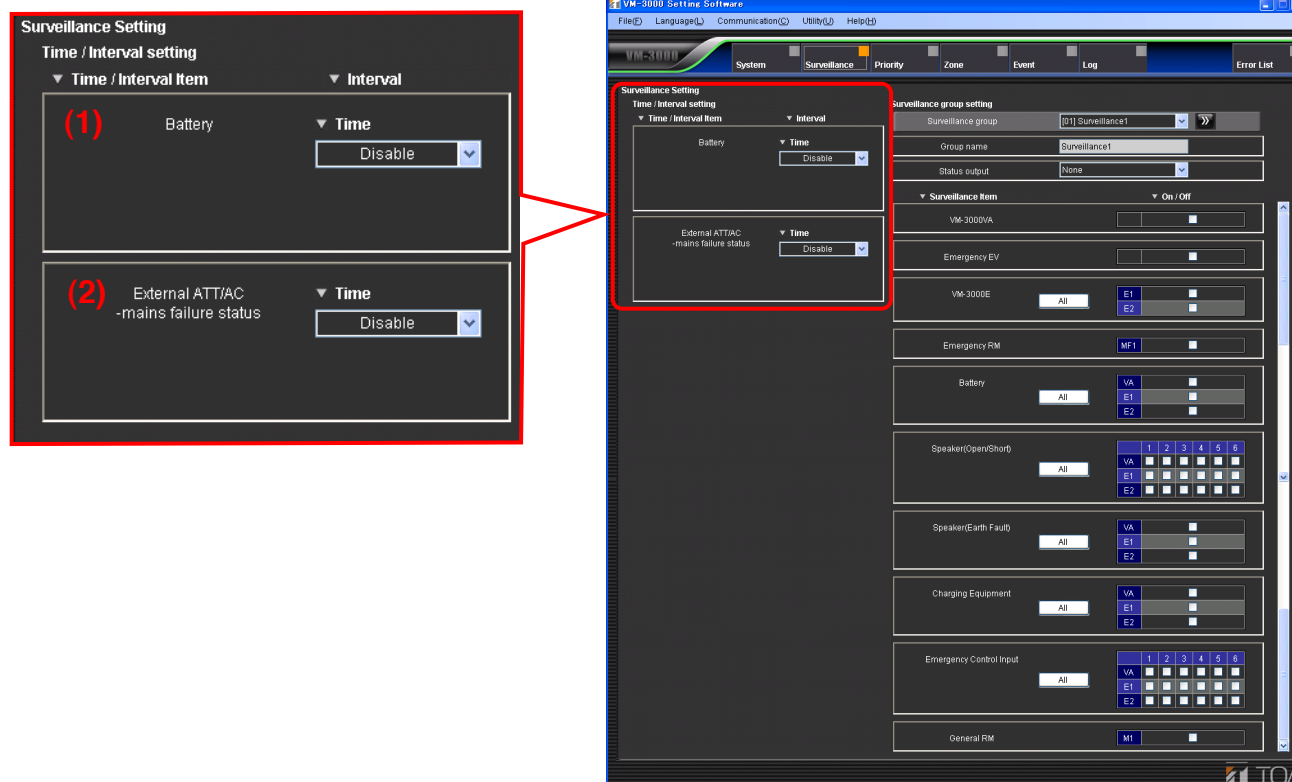

(1) Battery

Sets the start time and interval to check the conditions of the batteries selected in the Battery item of the Surveillance Group Settings (see p. 40).

• Time

Available Settings	Disable (default), 00:00 to 23:00 (in 1-hour steps)
--------------------	---

• Interval (displayed when "Time" item is not set to "Disable.")

Available Settings	4h (default), 24h
--------------------	-------------------

(2) External ATT/AC-main failure status

Sets the start time and interval to check the conditions of the external attenuator-connected speaker lines selected in the Speaker (Open/Short) item of the Surveillance Group Settings (see p. 40).

The Time/Interval set herein also allows all the surveillance items selected in the Surveillance Group Settings to be performed in case of power failure.

• Time

Available Settings	Disable (default), 00:00 to 23:00 (in 1-hour steps)
--------------------	---

• Interval (displayed when "Time" item is not set to "Disable.")

Available Settings	100 sec (default), 4h, 24h
--------------------	----------------------------

Notes

- This function can be used only when all the versions of VM-3000VA firmware, VM-3000E firmware, and VM-3000 Setting Software are 2.00 or later.
- Since broadcast sound volume increases because attenuators are bypassed when the speaker line surveillance is performed during broadcasts, it is recommended that the time and intervals be set for the time zone in which no broadcast is scheduled.


7.2. Surveillance Group Settings

Notes

- Surveillance item grouping function and each group's failure status output function can be used only when all the versions of VM-3000VA firmware, VM-3000 firmware, and VM-3000 Setting Software are 2.00 or later.
- The data previously created on Ver. 1.xx can be imported after being converted.
(For details, see [p. 42.](#))

Individual surveillance items can be registered into up to 64 groups.

If a failure is detected on any item in a group, this can be notified by the indicator on the remote microphone. One failure status control output equipped with the VM-3000VA or VM-3000E can be set for each surveillance group.

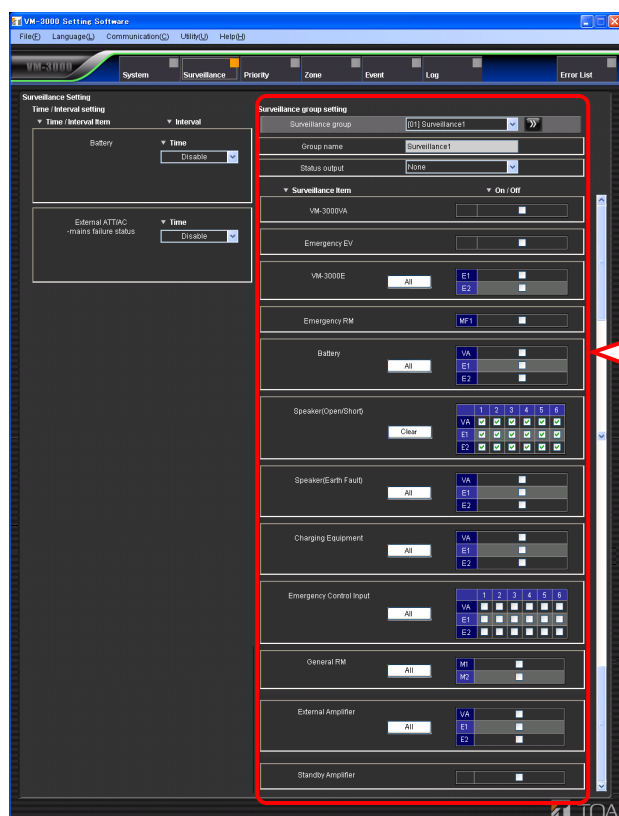

Surveillance group setting

(1) Surveillance group [01] Surveillance1 >>

(2) Group name Surveillance1

(3) Status output None

▼ Surveillance item ▼ On / Off

(4) VM-3000VA ☐ ☐

(5) Emergency EV ☐ ☐

(6) VM-3000E All E1 ☐ E2 ☐

(7) Emergency RM MF1 ☐

(8) Battery All VA ☐ E1 ☐ E2 ☐

(9) Speaker(Open/Short) Clear

	1	2	3	4	5	6
VA	☒	☒	☒	☒	☒	☒
E1	☒	☒	☒	☒	☒	☒
E2	☒	☒	☒	☒	☒	☒

(10) Speaker(Earth Fault) All VA ☐ E1 ☐ E2 ☐

(11) Charging Equipment All VA ☐ E1 ☐ E2 ☐

(12) Emergency Control Input All

	1	2	3	4	5	6
VA	☐	☐	☐	☐	☐	☐
E1	☐	☐	☐	☐	☐	☐
E2	☐	☐	☐	☐	☐	☐

(13) General RM All M1 ☐ M2 ☐

(14) External Amplifier All VA ☐ E1 ☐ E2 ☐

(15) Standby Amplifier ☐ ☐

(1) Surveillance group

Select the surveillance group to be set.

Available Settings	[01] Surveillance 1 - [64] Surveillance 64
--------------------	--

(2) Group name

Sets the names for surveillance groups.

Available Settings	Up to 16 alphanumeric characters (default names are Surveillance*, in which "*" is the group number.)
--------------------	---

(3) Status output

Sets the failure status output of the VM-3000VA or VM-3000E.

The setting is made by designating the unit as only one failure status output is provided with each unit.

Available Settings	NONE (default), All, VM-3000VA, VM-3000E*, in which "*" is the unit number.
--------------------	---

Set to ON or OFF for each function in the following items (4) through (15).

Checking a box turns the function on. (All are off by default.)

Click the "All" button to turn on all failure detection functions corresponding to the displayed surveillance item.

Click the "Clear" button to turn them off.

(4) VM-3000VA

Checks the VM-3000VA's power amplifier, emergency microphone, TALK key, and power supply voltage.

(5) Emergency EV

Checks Alert and Evacuation message files.

(6) VM-3000E

Checks the power amplifier for the relevant VM-3000E, communications functions between the VM-3000VA and VM-3000E, and the power supply voltage.

(7) Emergency RM

Checks the emergency microphone and TALK key for the relevant RM-300MF, communications functions between the VM-3000VA and RM-300MF, and the power supply voltage.

(8) Battery

Checks the condition of the battery of the VX-2000DS connected to the relevant unit.

Note

To perform the battery surveillance, be sure also to set the start time and interval in the Battery item of the Time/Interval Setting (see [p. 39](#)).

(9) Speaker (Open/Short)

Checks for open or shorted conditions in the speaker lines.

This speaker line surveillance timing differs depending on the following speaker lines.

- **Speaker lines with no external attenuators connected**

Surveillance is continuously performed.

- **Speaker lines with external attenuators connected**

Surveillance is performed at the set time and intervals by bypassing external attenuators.

Notes

- This function can be used only when all the versions of VM-3000VA firmware, VM-3000E firmware, and VM-3000 Setting Software are 2.00 or later.
- To perform the surveillance for external attenuator-connected speaker lines, be sure also to set the start time and interval in the External ATT/AC-mains failure status item of the Time/Interval Setting.

(10) Speaker (Earth Fault)

Checks the earth fault of the speaker lines for the relevant unit.

(11) Charging Equipment

Checks the condition of the recharging circuit of the VX-2000DS connected to the relevant unit.

(12) Emergency Control Input

Checks for disconnection or short circuits in the emergency control input lines from external equipment connected to the relevant unit.

(13) General RM

Checks communications between the relevant RM-200M and VM-3000VA.

(14) External Amplifier

Checks external amplifier condition. (Only displayed when the system type is set to "BGM/PAGING System" in the system settings.)

(15) Standby Amplifier

Checks standby amplifier condition. (Only displayed when the system type is set to "Standby amplifier: used" in the system settings.)

Note

The surveillance setting data created by the Ver. 1.xx software are converted according to the following rule when read on the Ver. 2.00 software.

Surveillance item on Ver. 1.xx	Corresponding surveillance group on Ver. 2.00
VM-3000VA	[01] Surveillance 1
Emergency EV	[02] Surveillance 2
VM-3000E	[03] Surveillance 3
Emergency RM	[04] Surveillance 4
Battery	[05] Surveillance 5
Speaker (Open/Short)	[11] Surveillance 11
Speaker (Earth Fault)	[12] Surveillance 12
Charging Equipment	[06] Surveillance 6
Emergency Control Input	[07] Surveillance 7
General RM	[08] Surveillance 8
External Amplifier	[09] Surveillance 9
Standby Amplifier	[10] Surveillance 10

8. PRIORITY SETTINGS

Click the Menu item "Priority" button to display the priority setting screen.



- Pressing the "General Setting" button calls up the screen used to set sound source priorities for general broadcasting. (Refer to page 44.)
- Pressing the "Emergency Setting" button calls up the screen displaying sound source priorities for emergency broadcasting. (Refer to page 46.)

8.1. General Broadcast Sound Source Priority Settings

Pressing the "General Setting" button in the priority setting screen calls up the screen used to set sound source priorities for general broadcasting.

Set the input sound source priorities to be used for general broadcasting.



(1) Input

Displays the VM-3000VA input sound sources (EV1-6 are built-in sound sources).

(2) Name

Displays the names registered in VM-3000VA setting in the system settings (refer to ["Audio input settings" on page 23](#)). Note, however, that the names of EV1 to EV6 and VM-3000E (1) to (9) are fixed.

(3) Priority

Sets general broadcasting sound source priorities. The lower the number, the higher the priority. The priority range possible for a given sound source will differ depending on its type.

Sound Source Type	Priority Setting Range	Default
INPUT 1 - 4	1 - 6, 7 (MIX)	6
EV1 - EV6 (built-in sound sources)	1 - 6	6
RM 1 - 4* ¹	1 - 6	6
BGM 1 - 2	8 (BGM)	8 (BGM)
VM - 3000E (1) - (9)* ²	1 - 6	6

*¹ The number of RM remote microphones will change depending on the settings.

*² This function can be used only when all the versions of VM-3000VA firmware, VM-3000E firmware, and VM-3000 Setting Software are 2.00 or later.

See "General Broadcast Priorities" in the separate manual for more information on general broadcast priority settings.

(4) Internal ATT., External ATT., Master Volume

Volume adjustment operation for the internal attenuator (speaker output volume knob), external attenuator, and master volume control will differ depending on the priority levels.

Priority	Internal ATT.	External ATT.	Master volume
1, 2	Bypass	Bypass	Bypass
3, 4	Bypass	Enable	Bypass
5, 6	Bypass	Enable	Enable
7 (MIX)	Enable	Enable	Enable
8 (BGM)	Enable	Enable	Enable

(5) Priority Control

Selects how to assign priority among multiple general broadcast sound sources all set to the same priority level.

Note

It is not possible to specify a different control system for individual sound sources, or for individual priorities.


Available Settings	FIFO (first in first out), LIFO (last in first out, the default)
--------------------	--

8.2. Emergency Sound Source Priority Display

Pressing the "Emergency Setting" button on the Priority Settings screen displays the priority level of the input sound source to be used for emergency broadcasts.

Note

Priorities are fixed and cannot be changed.

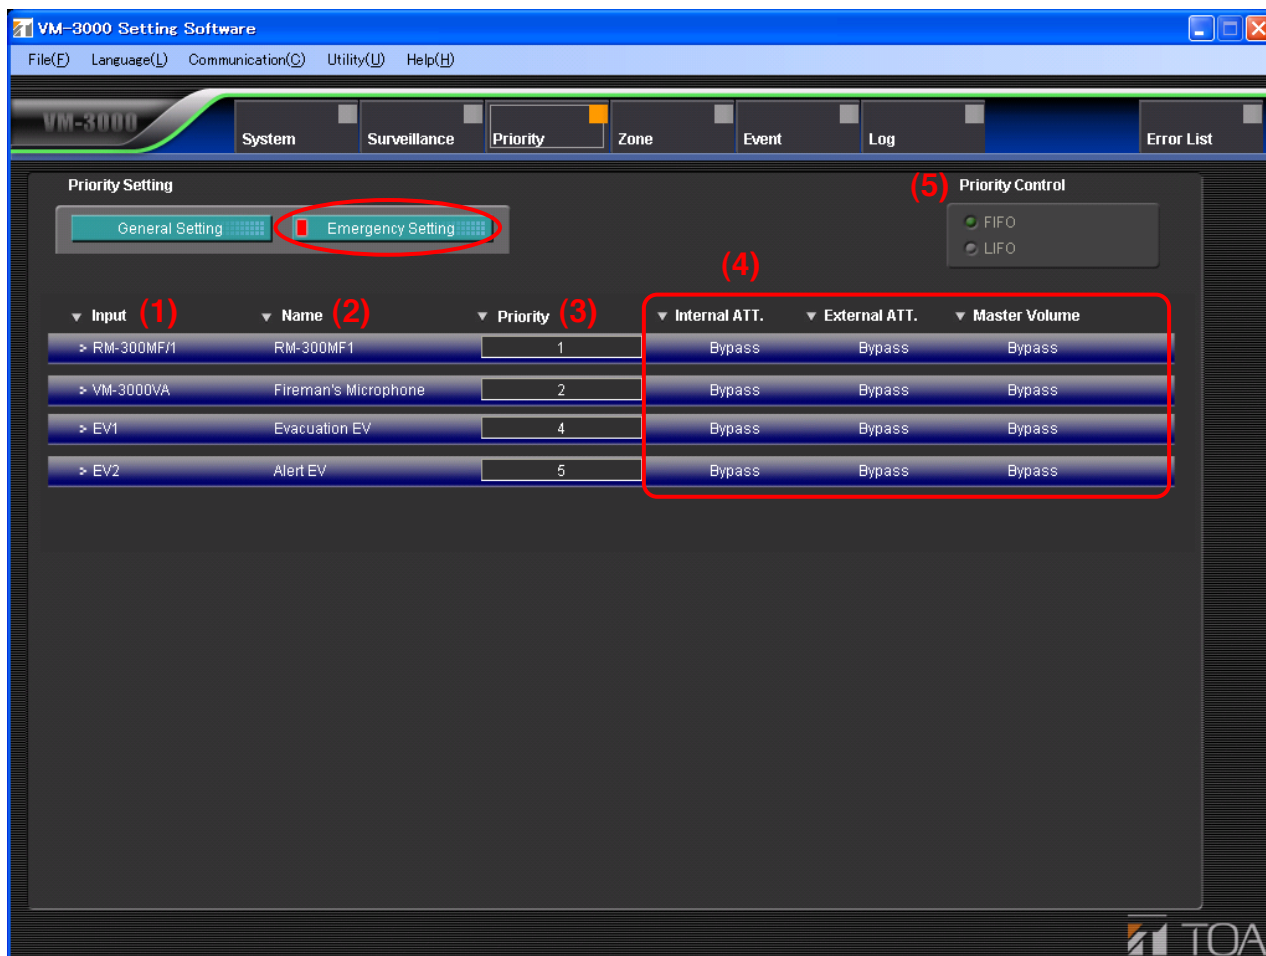

(1) Input

Displays the VM-3000VA's emergency broadcast input source.

- "Fireman's Microphone" refers to the VM-3000VA's front panel-mounted emergency microphone.
- "EV1" and "EV2" are built-in sound sources.

(2) Name

Displays the name of the VM-3000VA's emergency broadcast input sound source. For the RM-300MF, the name registered in the VM-3000VA Settings in the System Settings (refer to [page 23](#); "Audio input settings") is displayed. The names "Fireman's Microphone" and "EV1-2" are fixed.

- "Evacuation EV" is an "Evacuation" message pre-recorded in the VM-3000VA.
- "Alert EV" is an "Alert" message pre-recorded in the VM-3000VA.

(3) Priority

Indicates the priority level of the emergency sound source. This emergency priority level is fixed. The lower the number, the higher the priority.

Sound Source	Priority Level
Live microphone announcement from RM-300MF/ID1 (RM-300MF assigned to ID1 using the setting software)	1
Live microphone announcement from RM-300MF/ID3 (RM-300MF assigned to ID3 using the setting software)	2
Live microphone announcement from VM-3000VA's Fireman's Microphone	3
Live microphone announcement from RM-300MF/ID2 (RM-300MF assigned to ID2 using the setting software)	4
Live microphone announcement from RM-300MF/ID4 (RM-300MF assigned to ID4 using the setting software)	5
EV 1 (Built-in Evacuation message)	6
EV 2 (Built-in Alert message)	7

(4) Internal ATT., External ATT., Master Volume

Displays the volume adjustment operation status of the internal attenuator (speaker output volume control), external attenuator and master volume control when emergency broadcasts are made. Note that the message volume cannot be adjusted during emergency broadcast.

Sound Source	Internal ATT.	External ATT.	Master Volume
RM-300MF/1 (Microphone announcement)	Bypassed	Bypassed	Bypassed
RM-300MF/3 (Microphone announcement)			
VM-3000VA (Microphone announcement)			
RM-300MF/2 (Microphone announcement)			
RM-300MF/4 (Microphone announcement)			
EV 1 (Built-in Evacuation message)			
EV 2 (Built-in Alert message)			


(5) Priority Control

Since the emergency sound source's priorities are fixed, different priorities cannot be set for each emergency sound source.

9. ZONE SETTINGS

Clicking the Menu item "Zone" button displays the Zone Setting screen.

Group multiple speaker lines for the VM-3000VA or VM-3000E and set the group as a broadcast zone. Up to 90 zones can be established.

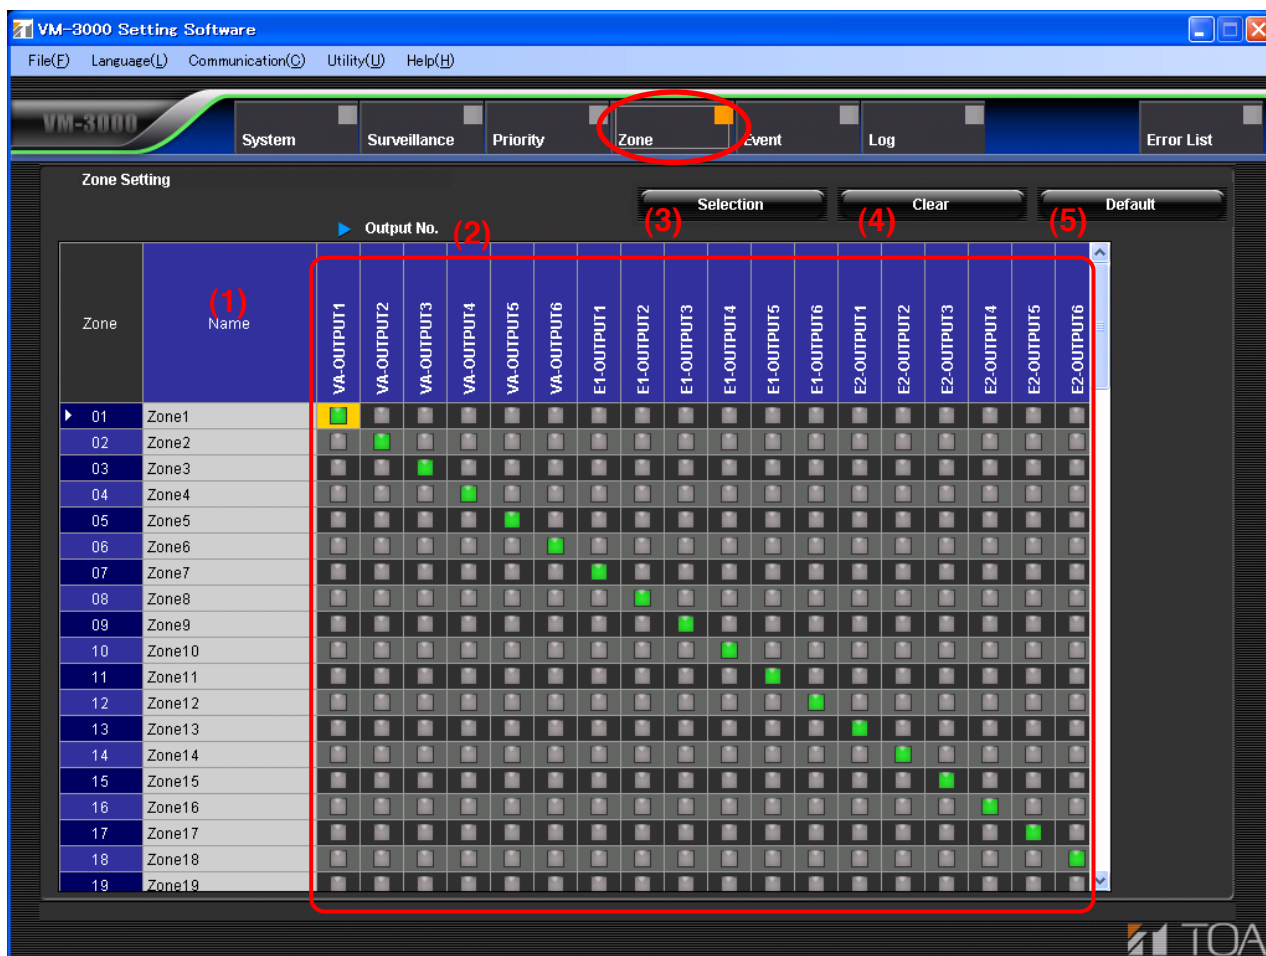

(1) Name

Sets the name for the zone.

Available Settings	16 alphanumeric characters (default name: Zone 1 – 90)
--------------------	--

(2) Output setting button

Selects the output to be assigned to each zone.

Available Settings	Green: Output selected; Gray: Output not selected
--------------------	---

(3) Selection button

Selects all outputs for an arbitrary zone.

Click any desired zone number (leftmost column of the table) to highlight its row. Pressing the "Selection" button in this situation simultaneously selects all outputs in the highlighted row.

(4) Clear button

Clears all outputs selected for an arbitrary zone.


Click any desired zone number (leftmost column of the table) to highlight its row. Pressing the "Clear" button in this situation simultaneously deselects all outputs in the highlighted row.

(5) Default button

Selects the speaker output with the same number as the zone number for all zones. (Example. Speaker output 1 is selected for Zone 1, speaker output 2 selected for Zone 2.... similarly for all other zones.) The screen above shows that the "Default" button has been pressed.

10. EVENT SETTINGS

Clicking the Menu item "Event" button displays the Event Settings screen.

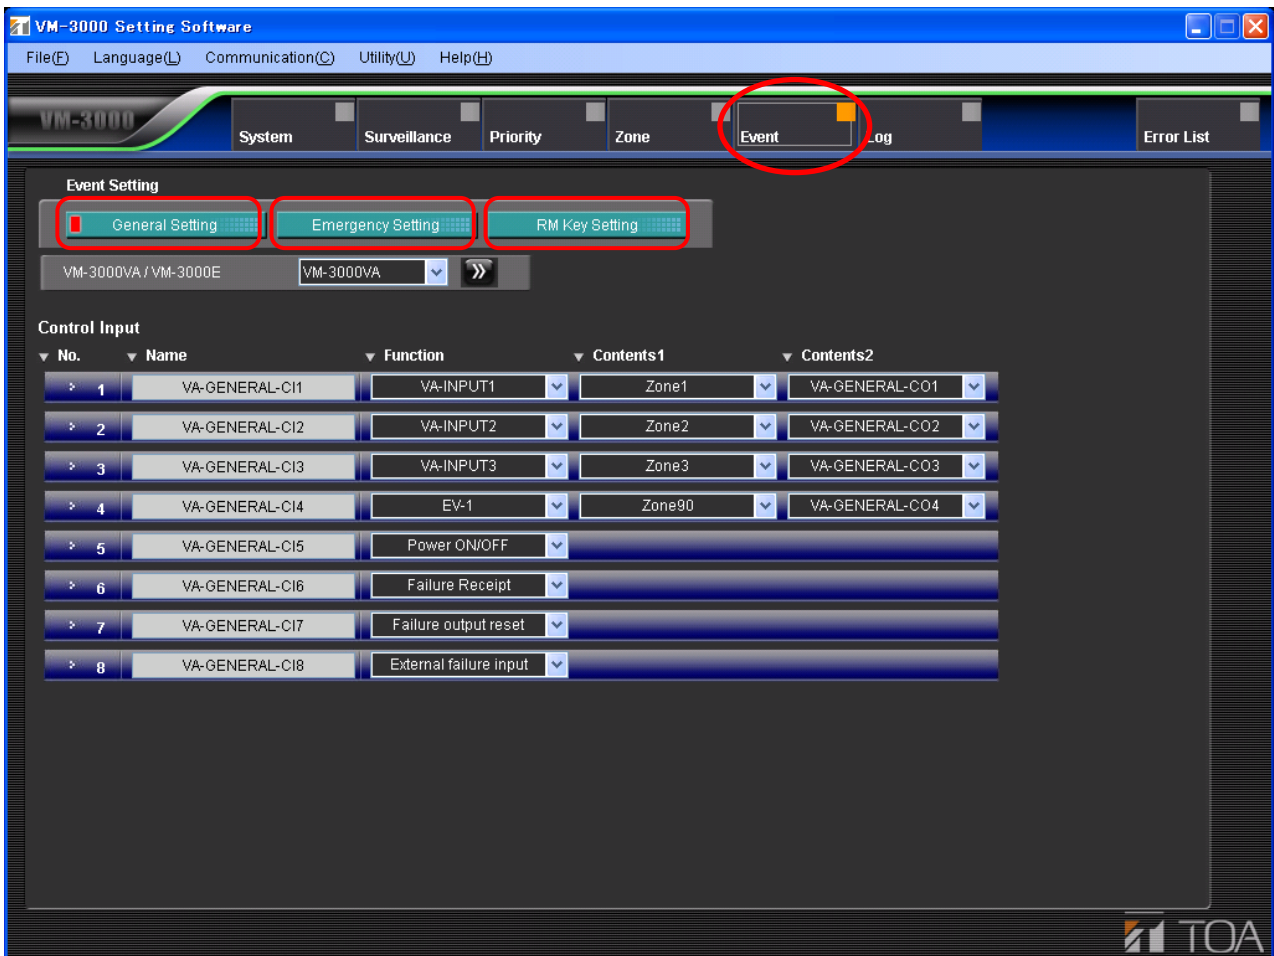


- Pressing the "General Setting" button calls up the screen used to set general control inputs. (Refer to page 50.) Assign functions to the general control inputs for the VM-3000VA or VM-3000E.
- Pressing the "Emergency Setting" button calls up the screen used to set emergency control inputs. (Refer to page 53.) Confirm that the VM-3000VA's Emergency, Evacuation and Alert keys are displayed, then assign a function to each emergency control input for the VM-3000VA and VM-3000E.
- Pressing the "RM Key Setting" button displays the RM key setting screen. (Refer to page 57.) Assign a function to each key of the RM-300MF/RM-320F or RM-200M/RM-210.

10.1. General Control Input Settings

Pressing the "General Setting" button on the Event Setting screen displays the general control input setting screen.

Assign such functions to the general control inputs as broadcast activation and power ON/OFF control.

When setting the broadcast activation function, also set the sound source, broadcast zone, and interlocked control output.

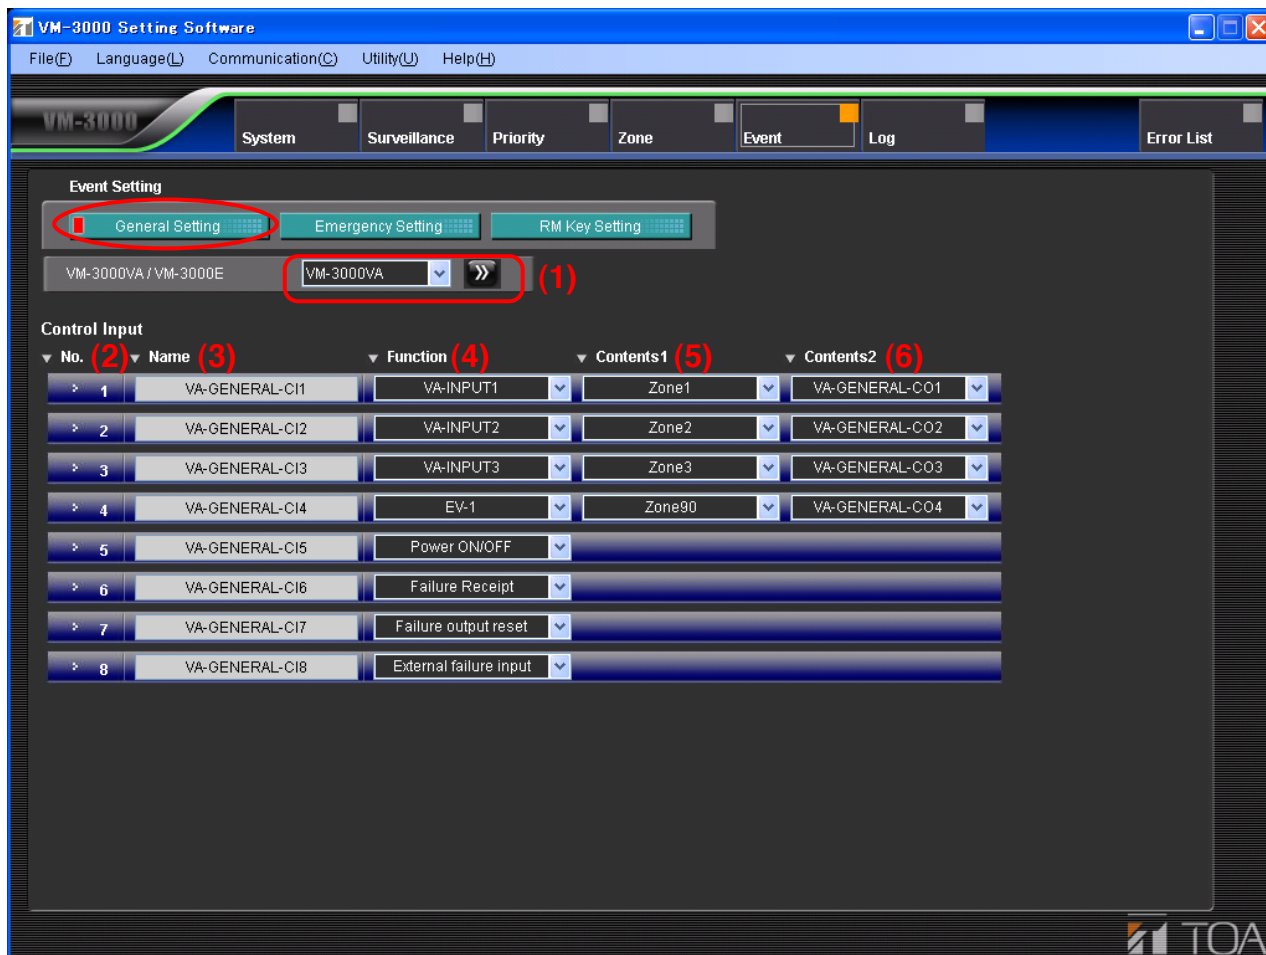

(1) VM-3000VA/VM-3000E

Click the box or double-arrow button to select the VM-3000VA or VM-3000E to be set. The display switches to the setting screen for the selected model. (Note that the setting screen for the VM-3000VA is the same as that for the VM-3000E.)

(2) No.

Represents the number of the general control input terminal located on the rear panel of the VM-3000VA or VM-3000E.

(3) Name

Sets the name for the general control input.

Available Settings	16 alphanumeric characters (default name: "VA-GENERAL-CI*" for the VM-3000VA and "E#-GENERAL-CI*" for the VM-3000E, in which "#" is an ordinal number and "*" is the terminal number.)
--------------------	--

(4) Function

Sets the function.

When a sound source is selected, only the sound source with priority level set for 1 – 6 in the general broadcast sound source priority settings ([page 44](#)) can be set.

Note

In the case of the VM-3000E having the local input, this function is fixed. (Refer to [the next page](#).)

Available Settings	Disable (default), VA-Input 1 – 4, EV1-6, Power ON/OFF*, Failure Receipt*, Failure output reset*, External failure input*
--------------------	---

* Can be set only when all the versions of VM-3000VA firmware, VM-3000E firmware, and VM-3000 Setting Software are 2.00 or later.

(5) Contents 1

- Used to set broadcast zone when "VA - Input 1 - 4" or "EV1 - 6" has been selected in (4) Function settings.

When a broadcast zone is selected, only the zones registered in the Zone setting ([page 48](#)) can be set.

Available Settings	Disable (default), Zone 1 – 90, VA-OUTPUT1-6*, E#-OUTPUT1-6* ("#" is an ordinal number)
--------------------	---

* Can be set only when all the versions of VM-3000VA firmware, VM-3000E firmware, and VM-3000 Setting Software are 2.00 or later.

- Cannot be used when "Disable," "Power ON/OFF," "Failure Receipt," "Failure output reset," or "External failure input" has been selected in (4) Function settings.

(6) Contents 2

- Set the control output to be activated in synchronization with broadcasts when "VA - Input 1 - 4" or "EV1 - 6" has been selected in (4) Function settings. The control outputs of the VM-3000VA (refer to [page 28](#); "Control output settings") or the VM-3000E (refer to [page 34](#); "Control output settings") selected in the System settings can be set.

Available Settings	Disable (default), VA-GENERAL-CO* and E#-GENERAL-CO*" in which "#" is an ordinal number and "*" is the terminal number.
--------------------	---

- Cannot be used when "Disable," "Power ON/OFF," "Failure Receipt," "Failure output reset," or "External failure input" has been selected in (4) Function settings.

[Function setting for the VM-3000E having the local input]

Note

This function can be used only when all the versions of VM-3000VA firmware, VM-3000E firmware, and VM-3000 Setting Software are 2.00 or later.

In the case of the VM-3000E having the local input, functions assigned to the unit's individual general control inputs are fixed as follows, and cannot be changed to any other function.

General Control Input 1: Allows for broadcasts to the corresponding VM-3000E's OUTPUT 1.

General Control Input 2: Allows for broadcasts to the corresponding VM-3000E's OUTPUT 2.


⋮

General Control Input 6: Allows for broadcasts to the corresponding VM-3000E's OUTPUT 6.

General Control Input 7: Allows for broadcasts to the corresponding VM-3000E's all OUTPUTS 1 - 6.

General Control Input 8: Not used

(VM-3000E's General Control Input Setting screen)

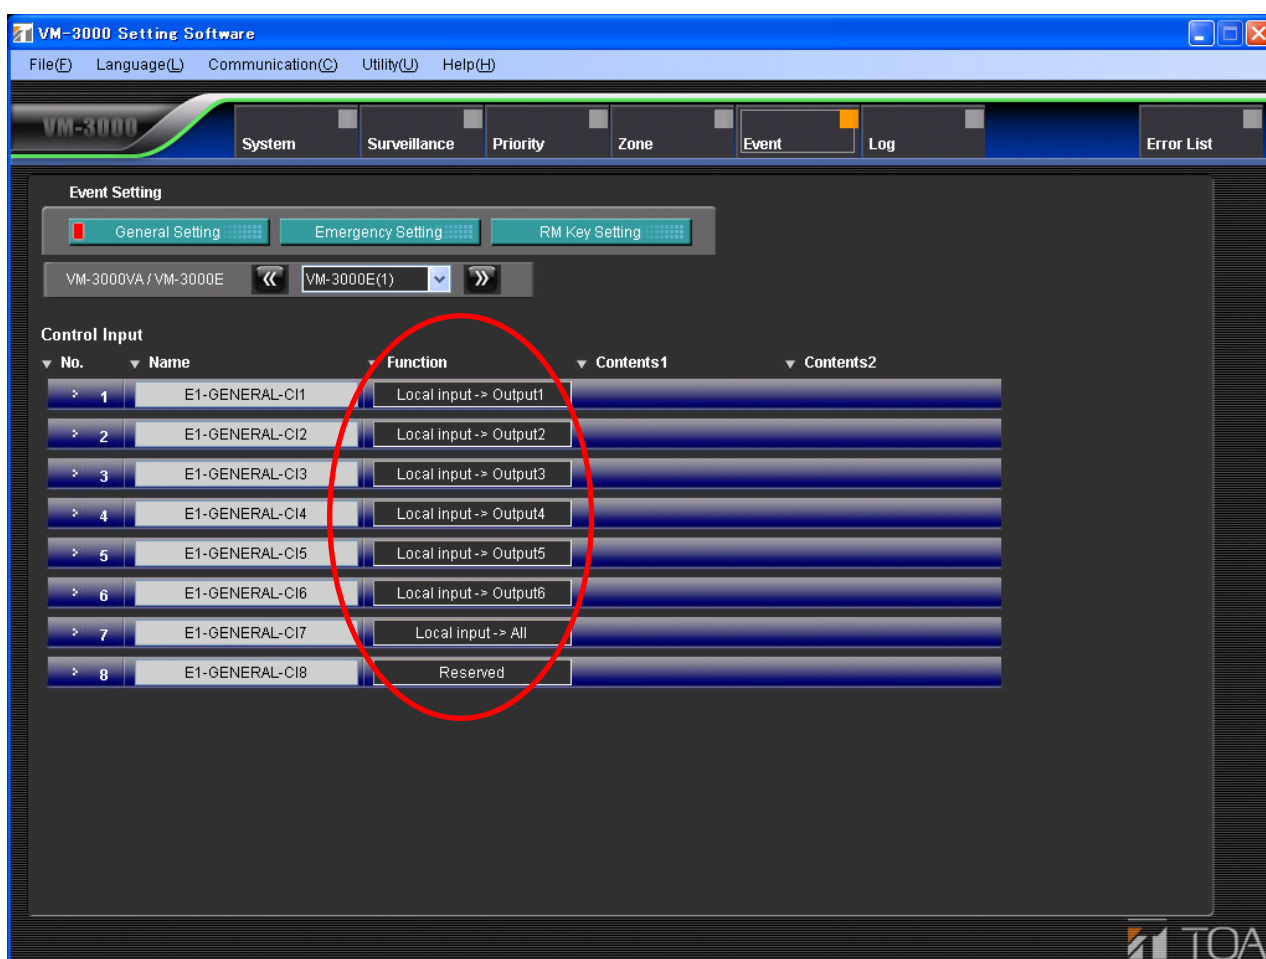


10.2. Emergency Control Input Settings

Pressing the "Emergency Setting" button on the Event Setting screen displays the emergency control input setting screen.

Set whether or not to use the VM-3000VA's Emergency, Evacuation, and Alert keys.

Assign such functions to the emergency control inputs as broadcast activation and End of line function.

When setting the broadcast activation function, also set the sound source, broadcast zones, and interlocked control outputs.

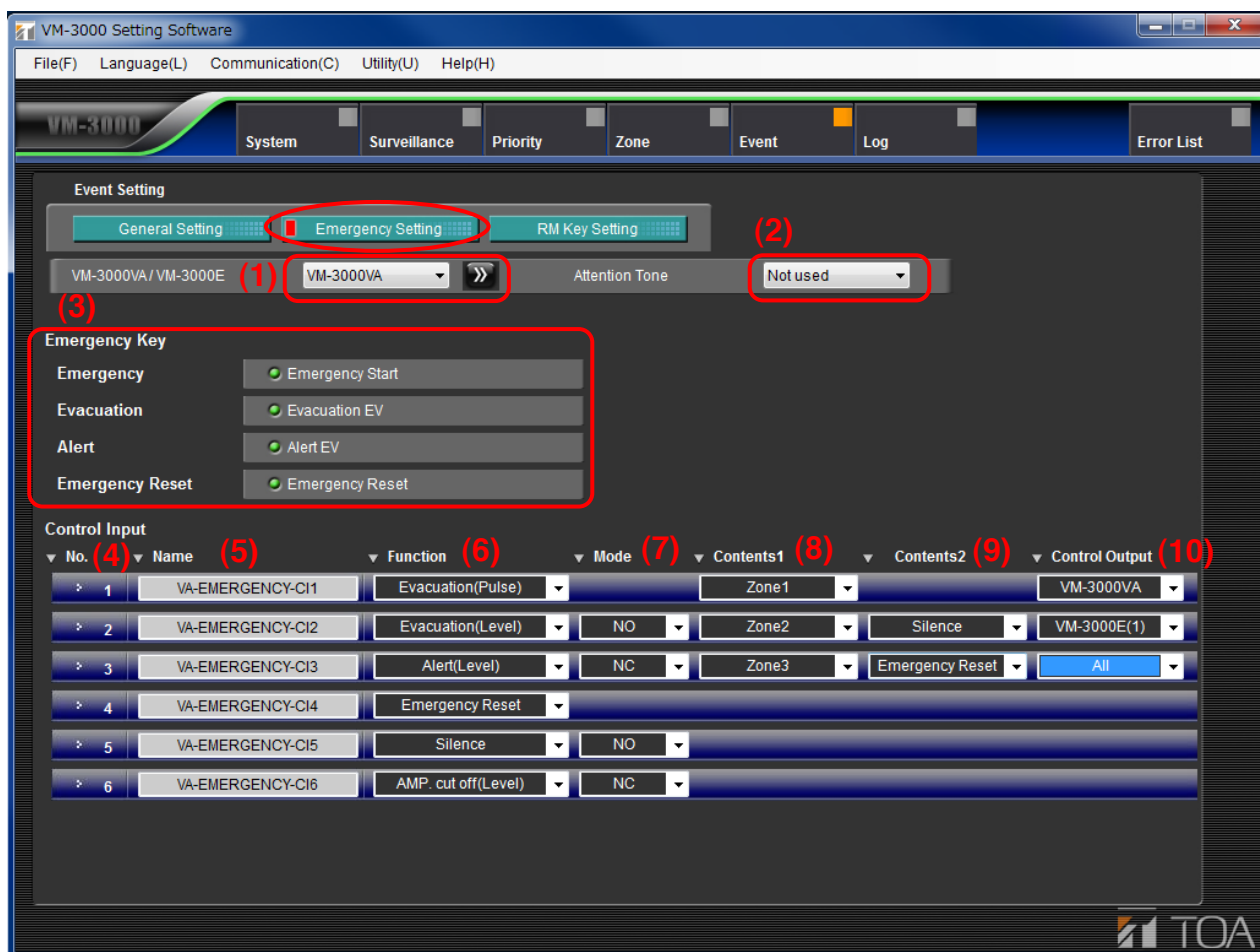

(1) VM-3000VA/VM-3000E

Click the box or double-arrow button to select the VM-3000VA or VM-3000E to be set. The display switches to the setting screen for the selected model. (Note that the setting screen for the VM-3000VA is the same as that for the VM-3000E.)

(2) Emergency attention tone

Sets whether or not to use the emergency attention tone when the emergency microphone's Press-to-talk switch is pressed.

Available Settings	Not used (default), Used
--------------------	--------------------------

Note

This function can be set only when all the versions of VM-3000VA firmware, VM-3000E firmware, and VM-3000 Setting Software are 3.00 or later.

(3) Emergency Key Functions (Applicable only to the VM-3000VA)

Set the functions of the VM-3000VA's front panel-mounted keys related to emergency broadcasts.

Each function of Emergency Start, Evacuation EV, and Alert EV can be switched to ON (indicated green) or OFF (indicated gray) with each click of the radio button.

(4) No.

Represents the number of the emergency control input terminal located on the rear panel of the VM-3000VA or VM-3000E.

Inputs 1 to 5 are contact inputs while Input 6 is a voltage control input to be activated when the polarity of 24 V DC kept being normally applied is reversed.

(5) Name

Sets the name for the emergency control input.

Available Settings	16 alphanumeric characters (default name: "VA-EMERGENCY-CI*" for the VM-3000VA and "E#-EMERGENCY-CI*" for the VM-3000E, in which "#" is an ordinal number and "*" is the terminal number.
--------------------	---

(6) Function

Assigns a function to the emergency control input.

Settable items for the (7) through (10) change as shown below depending on this setting content.

Available Settings	Disable (default), Evacuation (Pulse)* ¹ , Evacuation (Level)* ¹ , Alert (Pulse)* ¹ , Alert (Level)* ¹ , Emergency Reset, Silence* ¹ , AMP cut off (Pulse)* ¹ , AMP cut off (Level)* ¹ , End of line* ²
--------------------	---

Note

The "End of line" function cannot be set to the emergency control Input 6.

*¹ Can be set only when all the versions of VM-3000VA firmware, VM-3000E firmware, and VM-3000 Setting Software are 3.00 or later.


*² Can be set only when all the versions of VM-3000VA firmware, VM-3000E firmware, and VM-3000 Setting Software are 2.00 or later.

Note that indications of the selection items differ from those appearing when the versions are 2.00, as shown below.

Evacuation (Pulse) → Evacuation EV

Alert (Pulse) → Alert EV

AMP cut off (Pulse) → Amplifier cut off

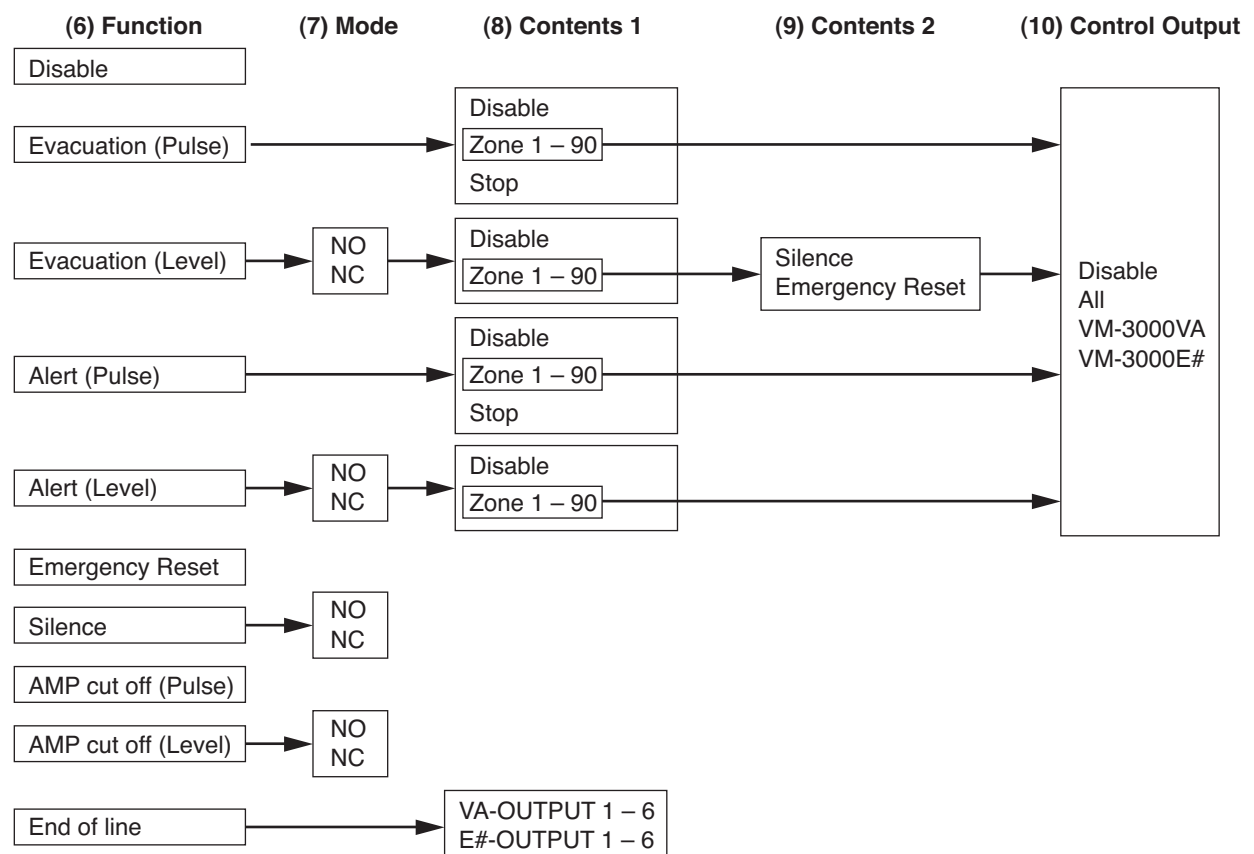

(7) Mode

[When "Disable," "Evacuation (Pulse)," "Alert (Pulse)," "Emergency Reset," "AMP cut off (Pulse)," or "end of line" has been selected in (6) Function settings]

Cannot be set.

[When "Evacuation (Level)," "Alert (Level)," "Silence," "AMP cut off (Level)," has been selected in (6) Function settings]

Sets either "Normally open (NO)" or "Normally closed (NC)" when Level activation is selected.

Available Settings	NO (default), NC
--------------------	------------------

This function can be used only when all the versions of VM-3000VA firmware, VM-3000E firmware, and VM-3000 Setting Software are 3.00 or later.

(8) Contents 1

[When "Disable," "Emergency Reset," "Silence," "AMP cut off (Pulse)," or "AMP cut off (Level)" has been selected in (6) Function settings]

Cannot be set.

[When "Evacuation (Pulse)" or "Alert (Pulse)" has been selected in (6) Function settings]

Used to set broadcast zones. Only the zones registered in the Zone Settings ([page 48](#)) can be set.

Available Settings	Disable (default), Zone 1 – 90, STOP* ²
--------------------	--

*² Can be set only when all the versions of VM-3000VA firmware, VM-3000E firmware, and VM-3000 Setting Software are 2.00 or later.

[When "Evacuation (Level)" or "Alert (Level)" has been selected in (6) Function settings]

Used to set broadcast zones. Only the zones registered in the Zone Settings ([page 48](#)) can be set.

Available Settings	Disable (default), Zone 1 – 90
--------------------	--------------------------------

This function can be used only when all the versions of VM-3000VA firmware, VM-3000E firmware, and VM-3000 Setting Software are 3.00 or later.

[When "End of line" has been selected in (6) Function settings]

Select the output of the VM-3000VA/VM-3000E.

Available Settings	VA - OUTPUT1 - 6*, E# - OUTPUT1 - 6* ("#" is an ordinal number)
--------------------	---

This function can be used only when all the versions of VM-3000VA firmware, VM-3000E firmware, and VM-3000 Setting Software are 3.00 or later.

(9) Contents 2

[When "Disable," "Evacuation (Pulse)," "Emergency Reset," "Silence," "AMP cut off (Pulse)," "AMP cut off (Level)," or "End of line" has been selected in (6) Function settings]

Cannot be set.

[When "Evacuation (Level)" has been selected in (6) Function settings]

Sets whether emergency mode is reset (Emergency Reset) or not reset (Silence) when broadcast is stopped.

Available Settings	Silence (default), Emergency reset
--------------------	------------------------------------

This function can be used only when all the versions of VM-3000VA firmware, VM-3000E firmware, and VM-3000 Setting Software are 3.00 or later.

(10) Control Output

[When "Disable," "Emergency Reset," "Silence," "AMP cut off (Pause)," "Amp cut off (Level)," or "End of line" has been selected in (6) Function settings and when "Stop" has been selected in (8) Contents 1 after "Evacuation (Pause)" or "Alert (Pause)" had been selected in (6) Function settings]

Cannot be set.

[When "Evacuation (Level)" or "Alert (Level)" has been selected in (6) Function settings and when "Zone 1 – 90" has been selected in (8) Contents 1 after "Evacuation (Pulse)" or "Alert (Pulse)" had been selected in (6) Function settings]

One emergency status output equipped with each VM-3000VA/VM-3000E can be interlocked.

Selecting the unit designates the emergency status output to interlock.


Available Settings	Disable (default), All*, VM-3000VA*, VM-3000E (#)* ("#" is an ordinal number)
--------------------	--

* Can be set only when all the versions of VM-3000VA firmware, VM-3000E firmware, and VM-3000 Setting Software are 2.00 or later.

10.3. RM Function Key Settings

Pressing the "RM Key Setting" button on the Event Setting screen displays the RM key setting screen. Assign the function to each remote microphone key.


Click the "RM-300MF/RM-200M" selection box or double-arrow button to select the RM-300MF or RM-200M to be set.

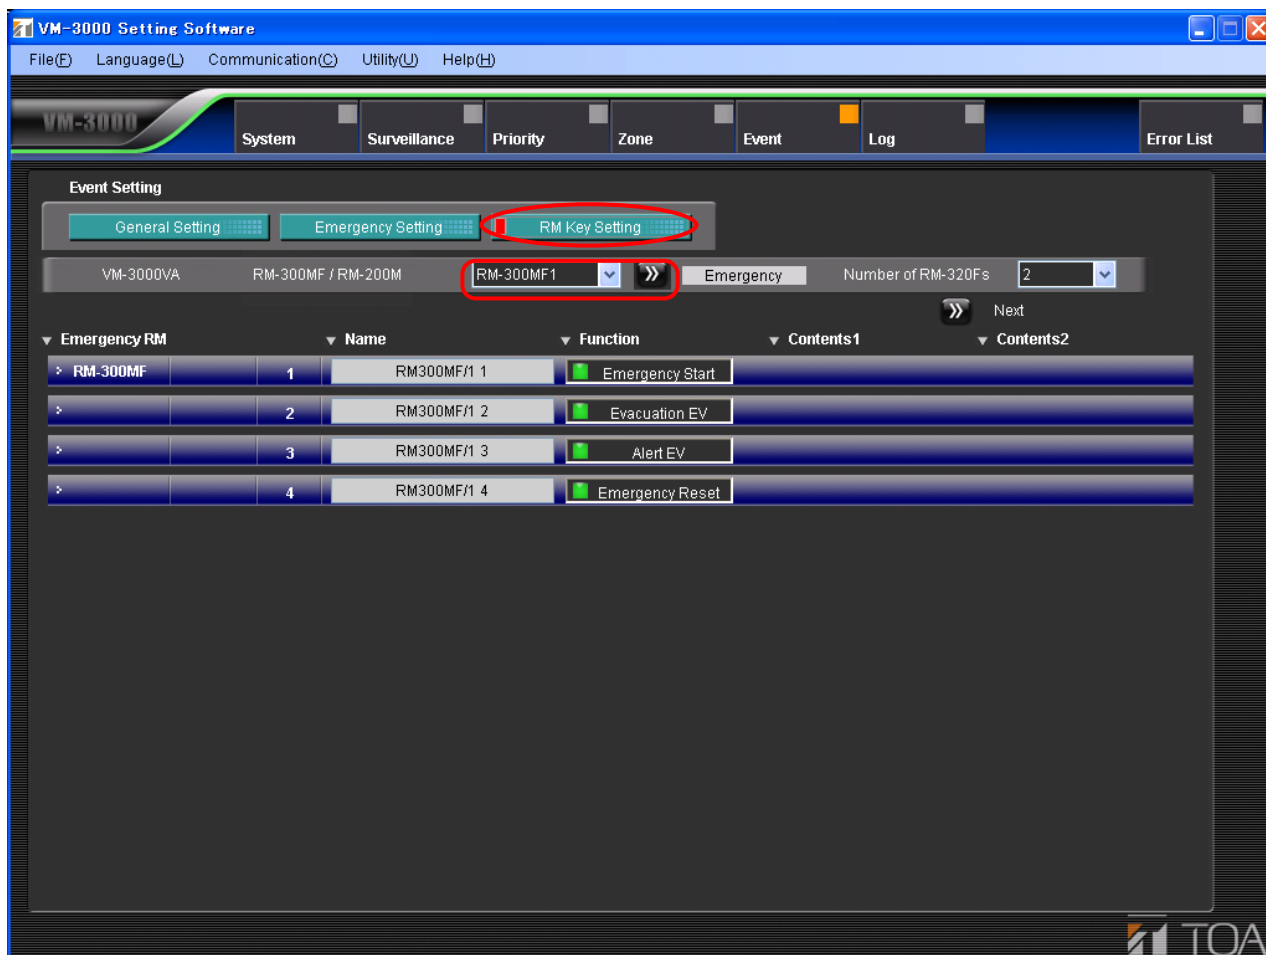

- If the RM-300MF is selected, the screen for setting its key names will be displayed. (Refer to page 58.) If the "Next" button on this screen is clicked, the screen for setting the RM-320F's key functions will be displayed. (Refer to page 60.)
- If the RM-200M is selected, the screen for setting its key functions will be displayed. (Refer to page 62.) If the "Next" button on this screen is clicked, the screen for setting the RM-210's key functions will be displayed. (Refer to page 64.)

10.3.1. RM-300MF settings

Clicking the "RM-300MF/RM-200M" selection box or double-arrow button on the RM Setting screen to select the RM-300MF to be set displays the screen for setting its key functions.

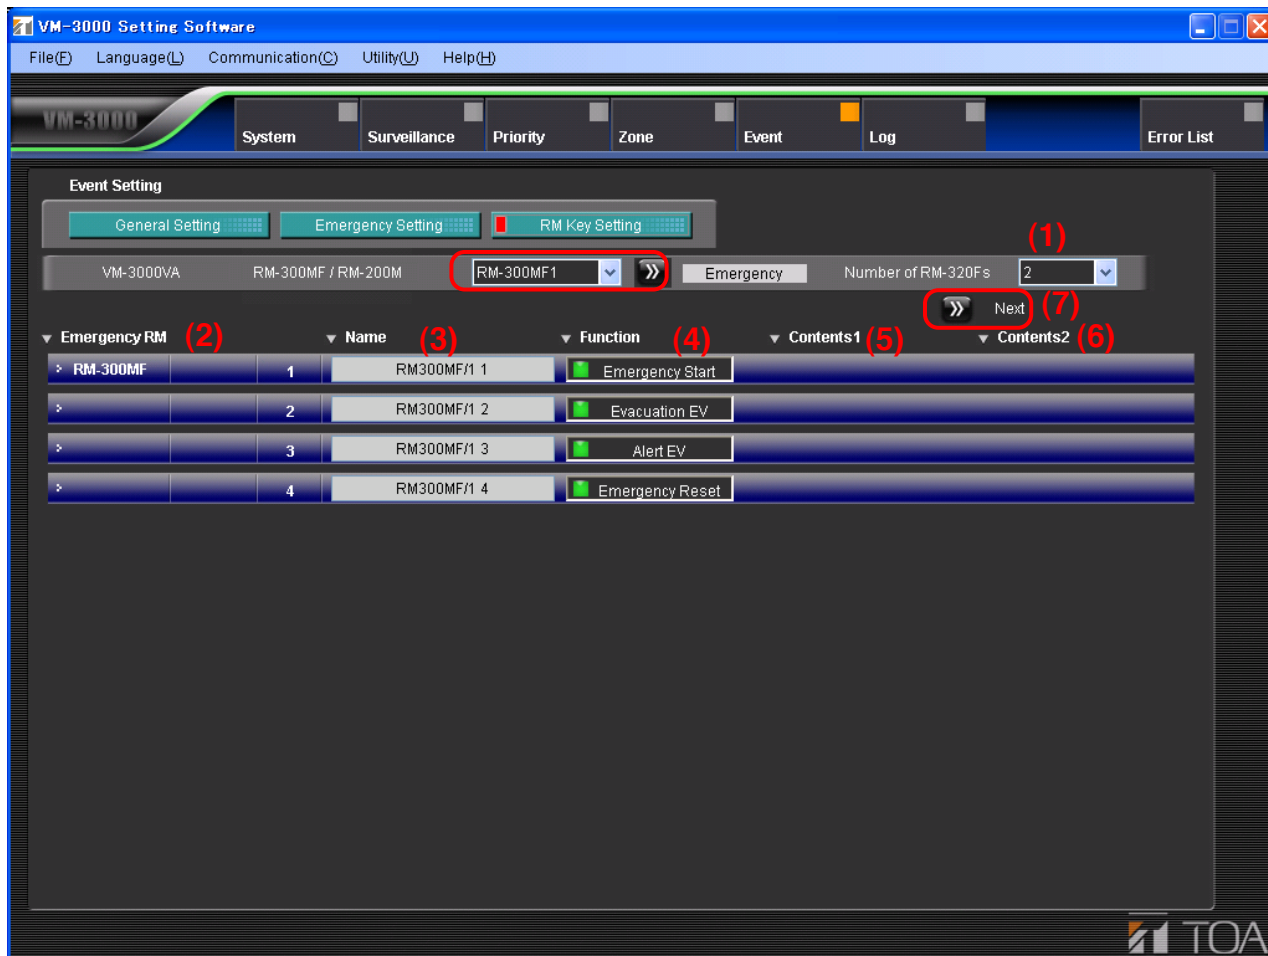



(1) Number of RM-320Fs

Sets the number of RM-320F remote microphone expansion units. The "Next" button (7) can be used if the number of units is set to 1 or more.

Available Settings	0 – 3 (default: 0)
--------------------	--------------------

(2) Emergency RM

Displays the model number (RM-300MF) and key number of the remote microphone currently being set.

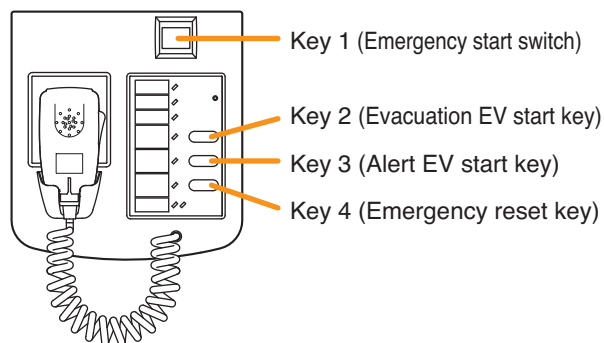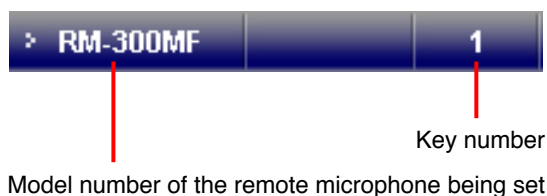

(3) Name

Sets the name for the key.

Available Settings	16 alphanumeric characters (default name: RM300MF/#*, in which "#" is the RM-300MF's ID number, and "*" is the key number).
--------------------	---

(4) Function

Each key function is fixed as follows.

Key 1: Emergency Start

Key 2: Evacuation EV

Key 3: Alert EV

Key 4: Emergency Reset

Each function can be switched to ON (indicated green) or OFF (indicated gray) with each click of the button.

Note

Each function key ON/OFF setting can be enabled only when both versions of VM-3000VA firmware and VM-3000 Setting Software are 2.00 or later.

(5) Contents 1

Cannot be used.

(6) Contents 2


Cannot be used.

(7) Next button

This button can be enabled if "Number of RM-320Fs" (1) is set to 1 or more. Pressing this button moves the display to the screen for setting the functions of the RM-320F's keys. ([Refer to the next page.](#))

10.3.2. RM-320F settings

Pressing the "Next" button on the [RM-300MF key function setting screen \(page 58\)](#) displays the screen for setting the RM-320F's key functions.

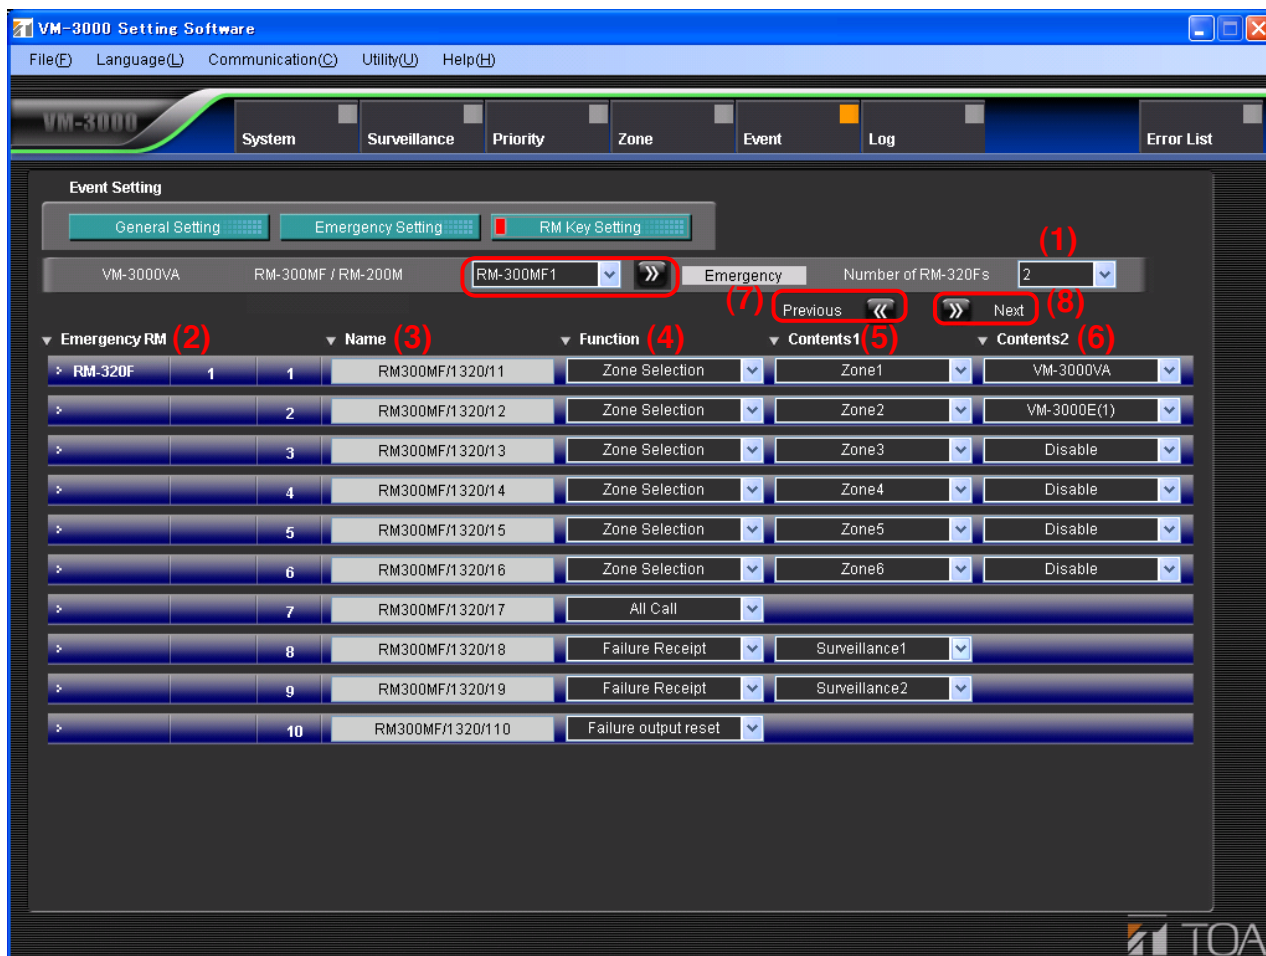



Click the "RM-300MF/RM-200M" selection box or double-arrow button to select the RM-300MF or RM-200M. The display switches to the screen for setting the selected device.

(1) Number of RM-320Fs

It is possible to change the number of RM-320F units set on the [RM-300MF setting screen \(page 58\)](#). Changing the number of units here automatically returns the display to the RM-300MF screen, while allowing the set contents to remain unchanged.

(2) Emergency RM

Displays the remote microphone's model number, ordinal number and key number of the RM-320MF remote microphone being set.

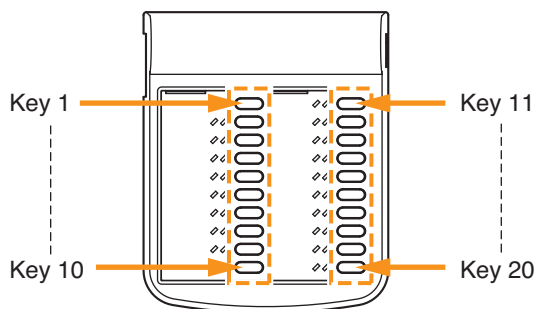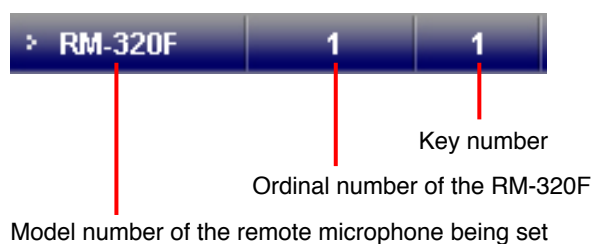

(3) Name

Sets the name for the key.

Available Settings	16 alphanumeric characters (default name: RM300MF/#320/\$*, in which "#" is the RM-300MF's ID number, "\$" is the ordinal number of the RM-320F and "*" is the key number.)
--------------------	---

(4) Function

Sets the function to be assigned to the key.

Available Settings	Disable (default), Zone Selection, Failure Receipt, All Call, Failure output reset*
--------------------	---


* Can be set only when all the versions of VM-3000VA firmware, VM-3000E firmware, and VM-3000 Setting Software are 2.00 or later.

(5) Contents 1

- Cannot be used when "Disable," "All Call," or "Failure output reset" has been selected in the Function settings (4).
- Used to set broadcast zones when "Zone Selection" has been selected in (4) Function settings. Only the zones registered in the [Zone settings \(page 48\)](#) can be set.

Available Settings	Disable (default), Zone 1 – 90
--------------------	--------------------------------

- Used to set the surveillance group for the failure indicator corresponding to this key when "Failure Receipt" has been selected in (4) Function settings. The detection items are the surveillance items referred to in the [Surveillance settings \(page 40\)](#).

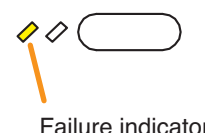

Available Settings	Surveillance group name (default names are Surveillance*, in which "*" is the group number.)
--------------------	---

(6) Contents 2

- Can be set when "Zone Selection" has been selected in (4) Function settings.
- Selecting the unit designates the emergency status output to interlock.

Available Settings	Disable (default), All*, VM-3000VA*, VM-3000E (#)* ("#" is an ordinal number)
--------------------	--

* Can be set only when all the versions of VM-3000VA firmware, VM-3000E firmware, and VM-3000 Setting Software are 2.00 or later.

(7) Previous button

Pressing this button returns the display to the previous key function setting screen for the RM-320F or the key function display screen for the RM-300MF.

(8) Next button

Pressing this button moves the display to the next key function setting screen for the RM-320F.

10.3.3. RM-200M settings

Clicking the "RM-300MF/RM-200M" selection box or double-arrow button to select the RM-200M to be set displays the screen for setting its key functions.



(1) Number of RM-210s

Sets the number of RM-210 remote microphone expansion units. The [Next] button (7) can be used if the number of units is set to 1 or more.

Available Settings	0 – 4 (default: 0)
--------------------	--------------------

(2) General RM

Displays the model number (RM-200M) and the key number of the remote microphone being set.


Note

Keys L1 - L4 cannot be used.



Model number of the remote microphone being set.

Key number

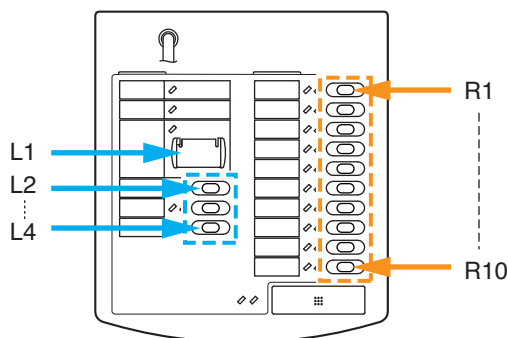

(3) Name

Sets the name for the key.

Note

Keys L1 – L4 are not used, however only their names can be set.

Available Settings	16 alphanumeric characters (default name: RM200M/#R*, in which [#] is the RM-200M's ID number and [*] is the key number.)
--------------------	---

(4) Function

Sets the function to be assigned to the key.

Available Settings	Disable (default), Zone Selection, EV Start
--------------------	---

(5) Contents 1

Cannot be used when "Disable" has been selected in the Function settings (4).

Used to set broadcast zones when "Zone Selection" is selected in (4) Function settings.
Only the zones registered in the [Zone settings \(page 48\)](#) can be set.

Available Settings	Disable (default), Zone 1 – 90
--------------------	--------------------------------

If "EV Start" has been selected in the function setting (4), set the desired EV (electronic voice announcing) message (built-in sound source).

Available Settings	EV-1 to EV-6 (default: EV-1)
--------------------	------------------------------

(6) Contents 2

Cannot be used when "Disable" and "EV Start" have been selected in the Function settings (4).

If "Zone Selection" has been selected in the Function settings (4), set the control output to be activated.

Available Settings	Disable (default), VA-GENERAL-CI 1 - 8 and E#-GENERAL-CI 1 - 8, in which "#" is the ID number.
--------------------	--


(7) Next button

This button can be used if "Number of RM-210s" is set to 1 or more.

Pressing this button moves the display to the RM-210 key function setting screen. ([Refer to the next page.](#))

10.3.4. RM-210 settings

Pressing the "Next" button on the [RM-200M key function setting screen \(page 62\)](#) displays the screen for setting the functions of the RM-210 keys.

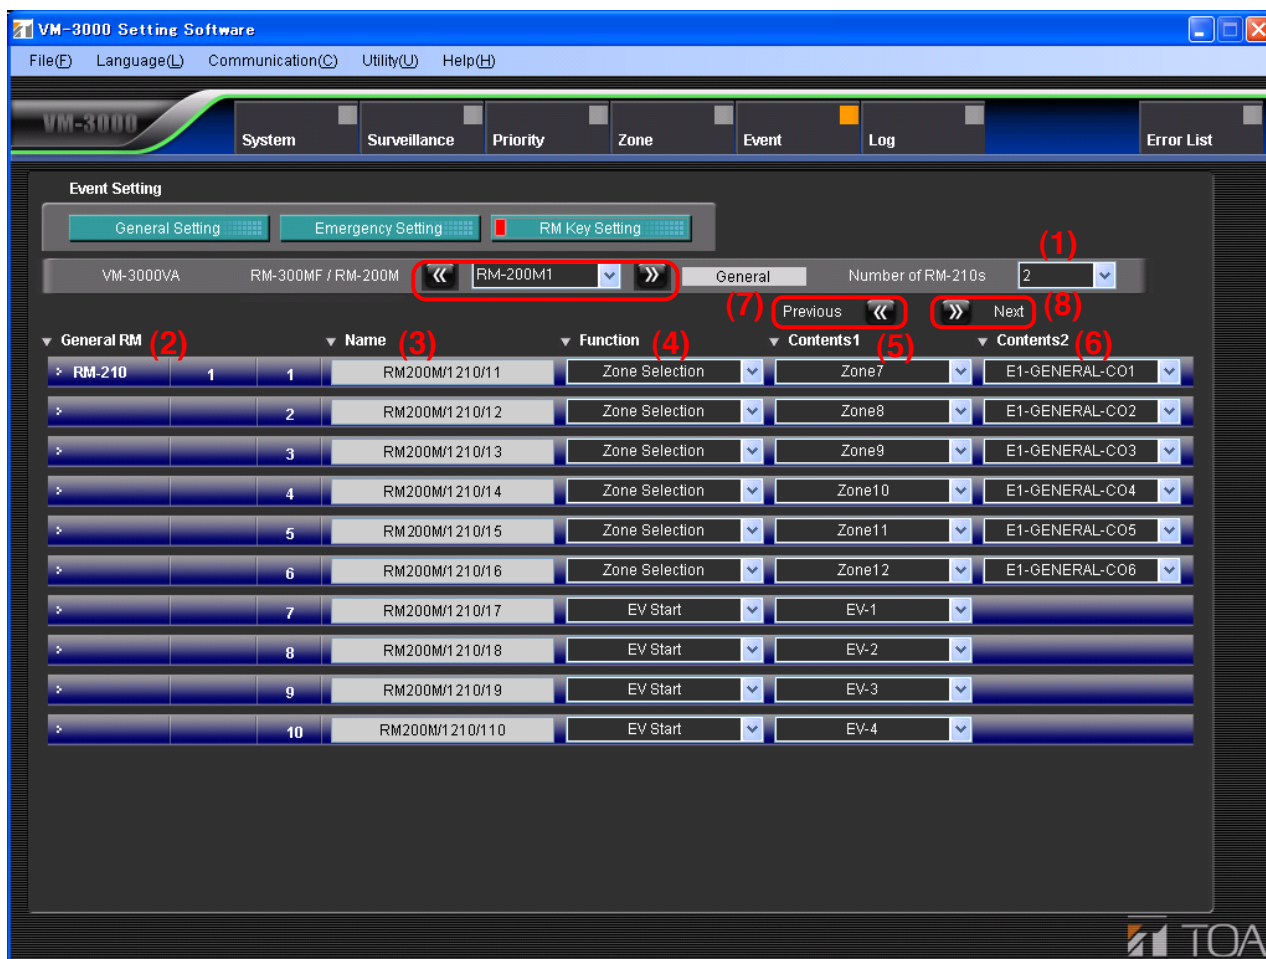



Click the "RM-300MF/RM-200M" selection box or double-arrow button to select the RM-300MF or RM-200M. The display switches to the screen for setting the selected device.

(1) Number of RM-210s

It is possible to change the number of RM-210 units set on the [RM-200M setting screen \(page 62\)](#). Changing the number of units here automatically returns the display to the RM-200M screen, while allowing the set contents to remain unchanged.

(2) General RM

Displays the remote microphone's model number, ordinal number and the key number of the RM-210 remote microphone being set.

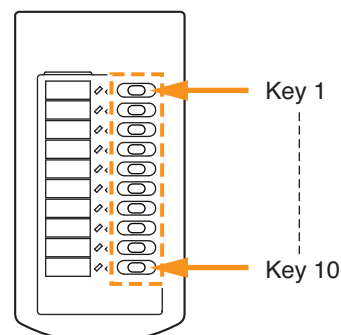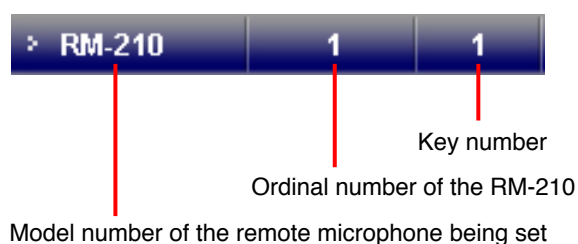

(3) Name

Sets the name for the key.

Available Settings	16 alphanumeric characters (default name: RM200M/# 210/\$*, in which "#" is the RM-200M's ID number, "\$" RM-210's is ordinal number, and "*" is the key number.
--------------------	--

(4) Function

Sets the function to be assigned to the key.

Available Settings	Disable (default), Zone Selection, EV Start
--------------------	---

(5) Zone

Cannot be set when "Disable" has been selected in the Function settings (4).

- Used to set broadcast zones when "Zone Selection" is selected in (4) Function settings. Only the zones registered in the [Zone settings \(page 48\)](#) can be set.

Available Settings	Disable (default), Zone 1 – 90
--------------------	--------------------------------

- If "EV Start" has been selected in the Function settings (4), set the desired EV message (built-in sound source).

Available Settings	EV-1 to EV-6 (default: EV-1)
--------------------	------------------------------

(6) Control Output

- Cannot be used when "Disable" or "EV Start" has been selected in the Function settings (4).
- If "Zone Selection" has been selected in the Function settings (4), set the control output to be activated.

Available Settings	Disable (default), VA-GENERAL-CI 1 – 8, E#-GENERAL-CI 1 – 8, in which "#" is the VM-3000E's ordinal number.)
--------------------	--

(7) Previous Button

Pressing this button returns the display to the previous key function setting screen for the RM-200M or RM-210 unit.


(8) Next Button

Pressing this button moves the display to the next key function setting screen for the RM-210.

11. LOG DISPLAY

Clicking the Menu item [Log] button displays the log screen.

Operation histories recorded in the VM-3000 system can be displayed using setting software. It is also possible to save displayed log data to a PC and read it from the PC. There are two types of log data: one that records all operations (All Log) and one that only records failures (Failure Log). A total of up to 1,000 histories can be recorded for both operation and failure logs, but up to 100 histories out of them can be recorded for failure logs.

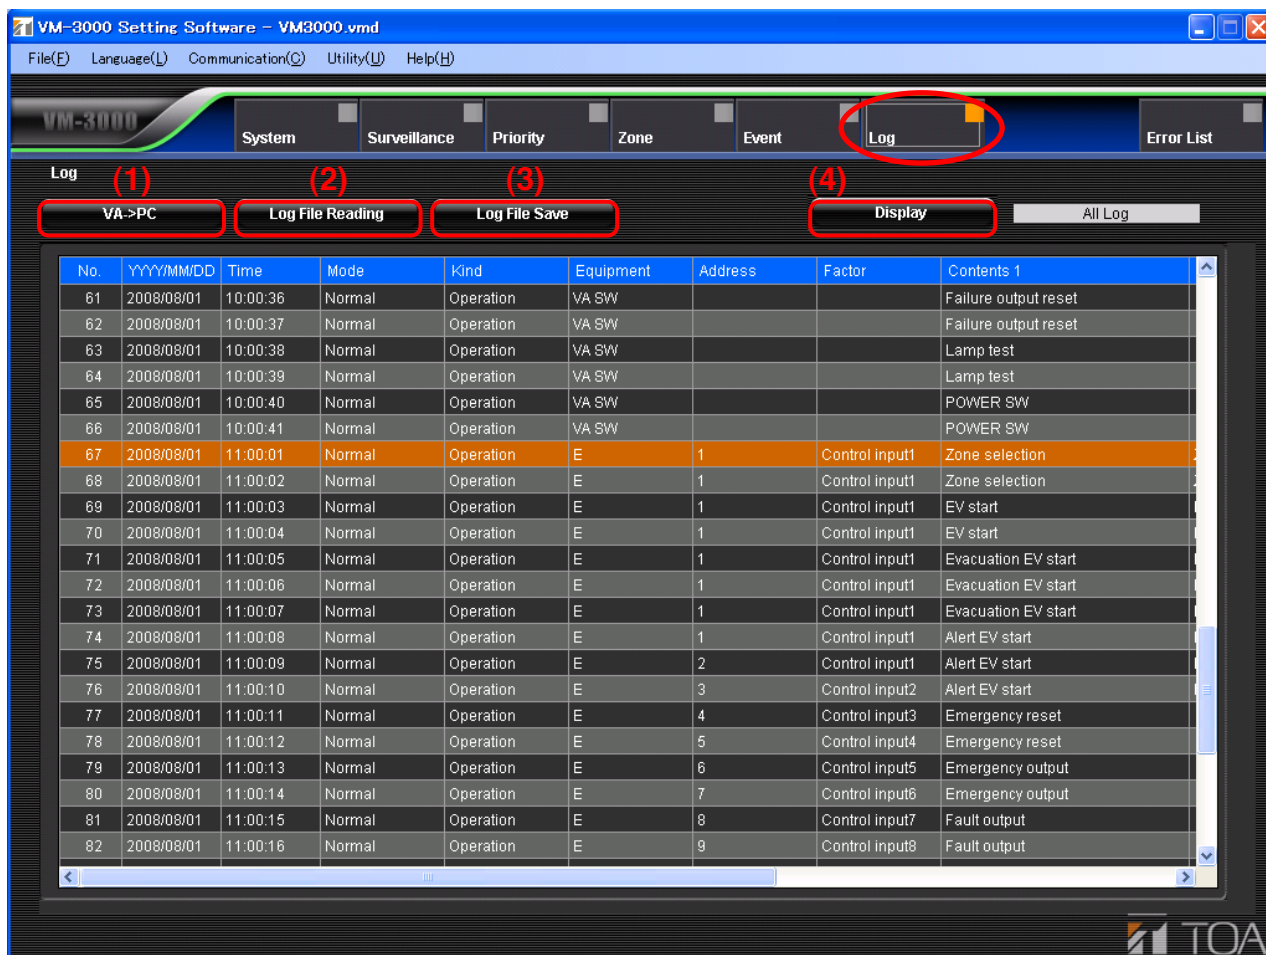

(1) VA -> PC button

Used to load log data from the VM-3000VA to a PC.

Note

Since this operation is conducted with the VM-3000VA connected to the PC, be sure network settings are performed in advance (page 84).

Further, log data transfer operation is required on the VM-3000VA as well. You may not perform key operations on the VM-3000VA only when both versions of VM-3000VA firmware and VM-3000 Setting Software are 3.00 or later. For more information, please read "Configuration Settings" in the separately issued instruction manual.

(2) Log File Reading button

Reads out log data stored in the PC.

Press the "Log File Reading" button to select and read the log files stored in the PC.

(3) Log File Save button


Used to save log files to a PC.

Press the "Log File Save" button. As the screen designating the destination to save is displayed, save the log file.

(4) Display button


The display switches between the All Log screen (upper figure) and the Failure Log screen (lower figure) each time this button is pressed.

All Log screen

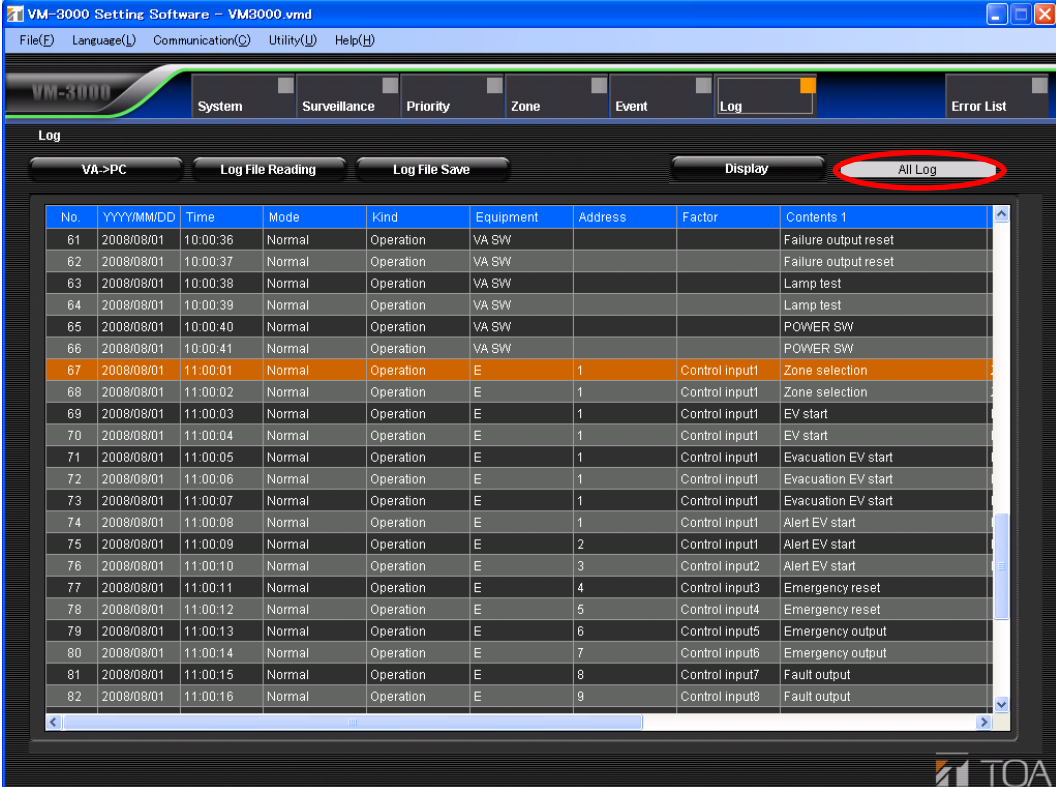

No.	YYYY/MM/DD	Time	Mode	Kind	Equipment	Address	Factor	Contents 1
61	2008/08/01	10:00:36	Normal	Operation	VA SW			Failure output reset
62	2008/08/01	10:00:37	Normal	Operation	VA SW			Failure output reset
63	2008/08/01	10:00:38	Normal	Operation	VA SW			Lamp test
64	2008/08/01	10:00:39	Normal	Operation	VA SW			Lamp test
65	2008/08/01	10:00:40	Normal	Operation	VA SW			POWER SW
66	2008/08/01	10:00:41	Normal	Operation	VA SW			POWER SW
67	2008/08/01	11:00:01	Normal	Operation	E	1	Control input1	Zone selection
68	2008/08/01	11:00:02	Normal	Operation	E	1	Control input1	Zone selection
69	2008/08/01	11:00:03	Normal	Operation	E	1	Control input1	EV start
70	2008/08/01	11:00:04	Normal	Operation	E	1	Control input1	EV start
71	2008/08/01	11:00:05	Normal	Operation	E	1	Control input1	Evacuation EV start
72	2008/08/01	11:00:06	Normal	Operation	E	1	Control input1	Evacuation EV start
73	2008/08/01	11:00:07	Normal	Operation	E	1	Control input1	Evacuation EV start
74	2008/08/01	11:00:08	Normal	Operation	E	1	Control input1	Alert EV start
75	2008/08/01	11:00:09	Normal	Operation	E	2	Control input1	Alert EV start
76	2008/08/01	11:00:10	Normal	Operation	E	3	Control input2	Alert EV start
77	2008/08/01	11:00:11	Normal	Operation	E	4	Control input3	Emergency reset
78	2008/08/01	11:00:12	Normal	Operation	E	5	Control input4	Emergency reset
79	2008/08/01	11:00:13	Normal	Operation	E	6	Control input5	Emergency output
80	2008/08/01	11:00:14	Normal	Operation	E	7	Control input6	Emergency output
81	2008/08/01	11:00:15	Normal	Operation	E	8	Control input7	Fault output
82	2008/08/01	11:00:16	Normal	Operation	E	9	Control input8	Fault output


Failure Log screen

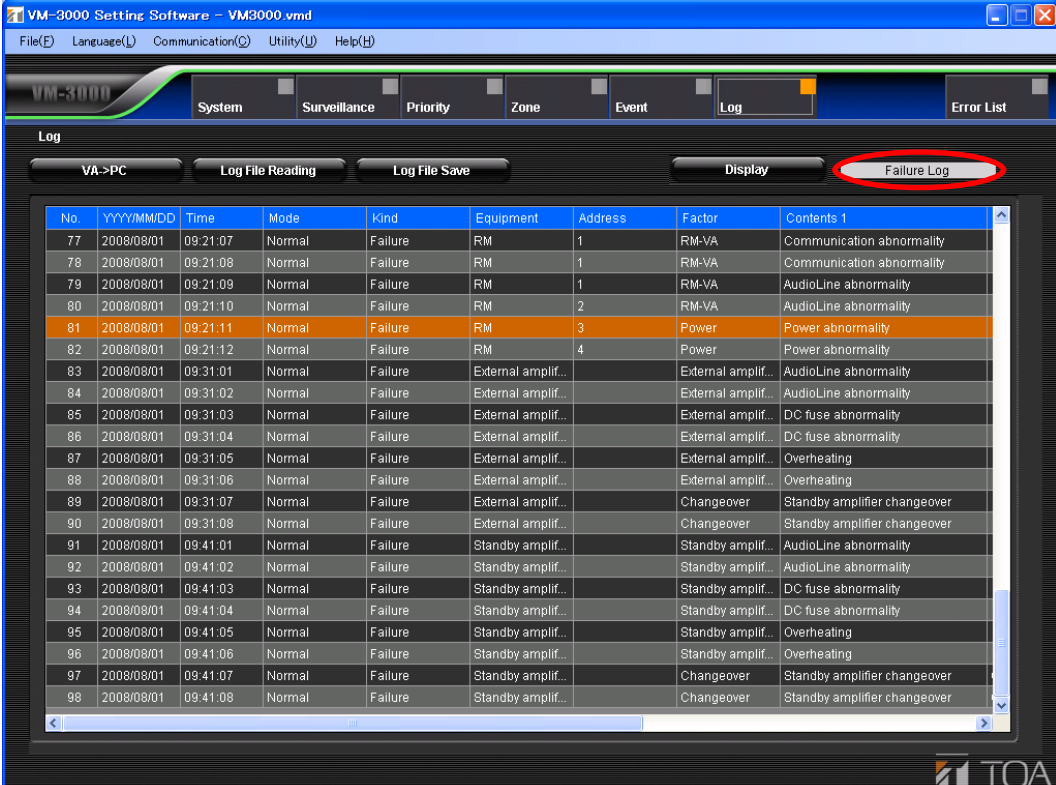

No.	YYYY/MM/DD	Time	Mode	Kind	Equipment	Address	Factor	Contents 1
77	2008/08/01	09:21:07	Normal	Failure	RM	1	RM-VA	Communication abnormality
78	2008/08/01	09:21:08	Normal	Failure	RM	1	RM-VA	Communication abnormality
79	2008/08/01	09:21:09	Normal	Failure	RM	1	RM-VA	AudioLine abnormality
80	2008/08/01	09:21:10	Normal	Failure	RM	2	RM-VA	AudioLine abnormality
81	2008/08/01	09:21:11	Normal	Failure	RM	3	Power	Power abnormality
82	2008/08/01	09:21:12	Normal	Failure	RM	4	Power	Power abnormality
83	2008/08/01	09:31:01	Normal	Failure	External amplif...		External amplif...	AudioLine abnormality
84	2008/08/01	09:31:02	Normal	Failure	External amplif...		External amplif...	AudioLine abnormality
85	2008/08/01	09:31:03	Normal	Failure	External amplif...		External amplif...	DC fuse abnormality
86	2008/08/01	09:31:04	Normal	Failure	External amplif...		External amplif...	DC fuse abnormality
87	2008/08/01	09:31:05	Normal	Failure	External amplif...		External amplif...	Overheating
88	2008/08/01	09:31:06	Normal	Failure	External amplif...		External amplif...	Overheating
89	2008/08/01	09:31:07	Normal	Failure	External amplif...		Changeover	Standby amplifier changeover
90	2008/08/01	09:31:08	Normal	Failure	External amplif...		Changeover	Standby amplifier changeover
91	2008/08/01	09:41:01	Normal	Failure	Standby amplif...		Standby amplif...	AudioLine abnormality
92	2008/08/01	09:41:02	Normal	Failure	Standby amplif...		Standby amplif...	AudioLine abnormality
93	2008/08/01	09:41:03	Normal	Failure	Standby amplif...		Standby amplif...	DC fuse abnormality
94	2008/08/01	09:41:04	Normal	Failure	Standby amplif...		Standby amplif...	DC fuse abnormality
95	2008/08/01	09:41:05	Normal	Failure	Standby amplif...		Standby amplif...	Overheating
96	2008/08/01	09:41:06	Normal	Failure	Standby amplif...		Standby amplif...	Overheating
97	2008/08/01	09:41:07	Normal	Failure	Standby amplif...		Changeover	Standby amplifier changeover
98	2008/08/01	09:41:08	Normal	Failure	Standby amplif...		Changeover	Standby amplifier changeover

12. ERROR LIST DISPLAY

Pressing the Menu item "Error List" button displays the error list screen that shows errors and other discrepancies detected in the set data. By displaying the settings correction screen, individual data can be corrected or all data corrected at once.

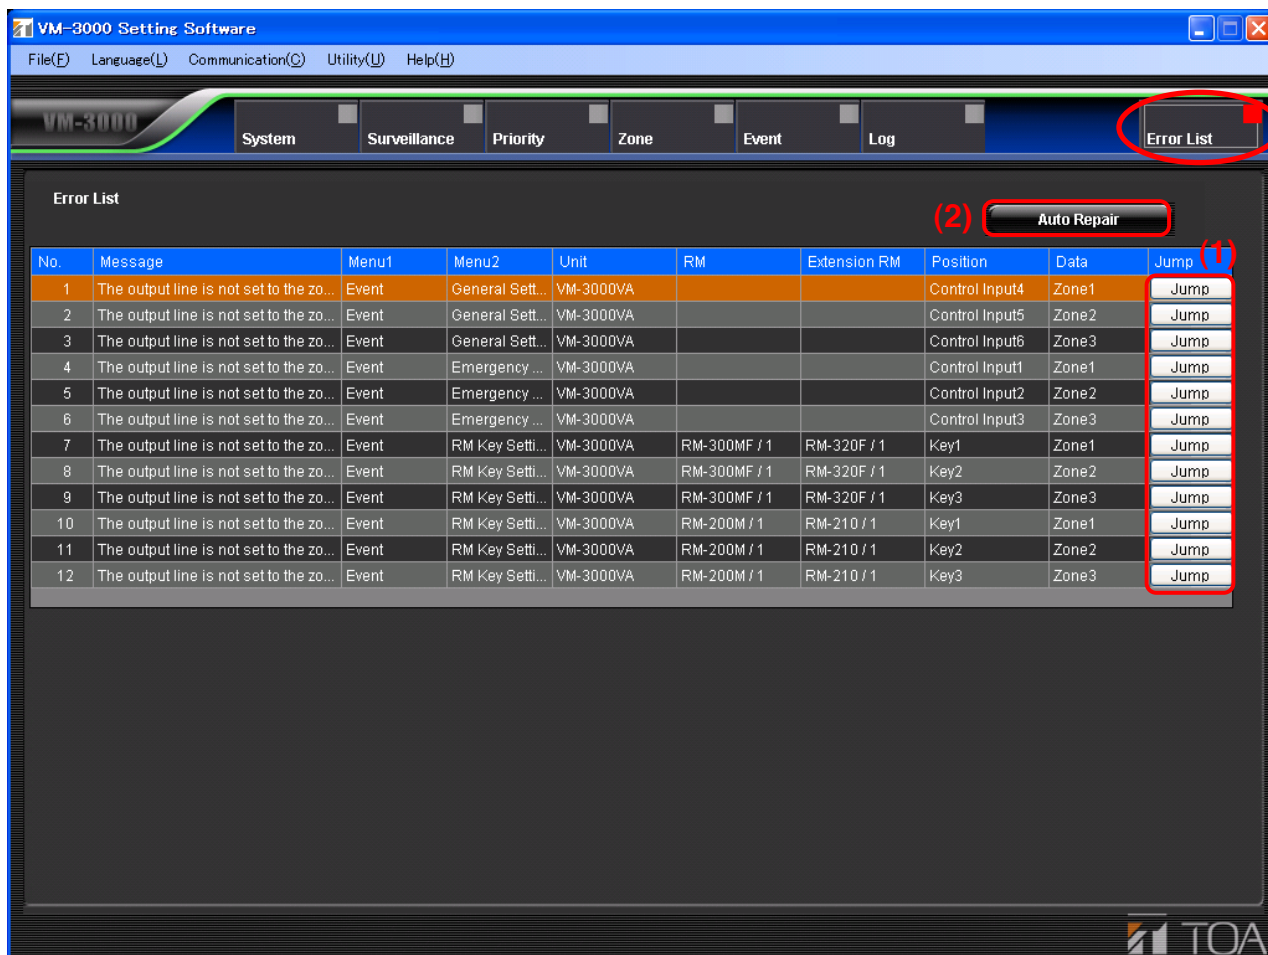

(1) Jump button

The display switches to the settings correction screen and all data that require correction are displayed in gray.

Press the "Error List" button again to return to the original error list screen after the correction is completed.

(2) Auto Repair button

Used to automatically correct all displayed data at once.

Press this button if simultaneous correction is found to be possible after confirming each data item by pressing the "Jump" button. This button is convenient when multiple identical errors (example: incorrect settings for the number of RM-200M units) are displayed in the list.

Note

If errors of different causes exist together, unexpected items could also be automatically corrected. In such cases, correct each data item manually using the "Jump" button.

13. MENU ITEM OPERATIONS FROM THE MENU BAR


13.1. Creating a New Setting File

Abandon the currently-set data and create a new one.


Note

When creating a new file partway through a setting, save the data being set as required. ([Refer to "Saving Set Files" on page 73.](#)) Creating a new file without saving causes the data that was edited just before the start of new file creation to be deleted.

Step 1. Select [File → New] from the menu bar of the Setting Software screen.

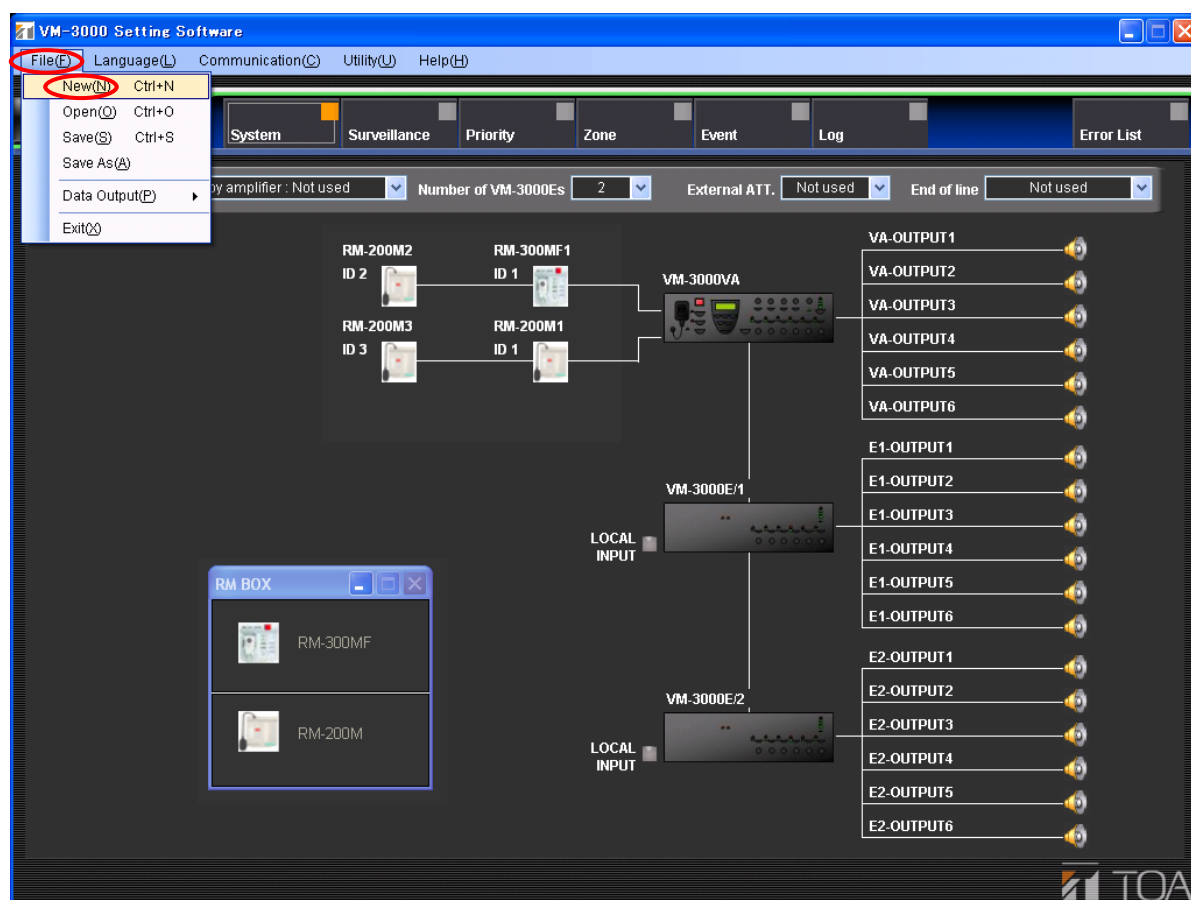

A confirmation dialog will be displayed.

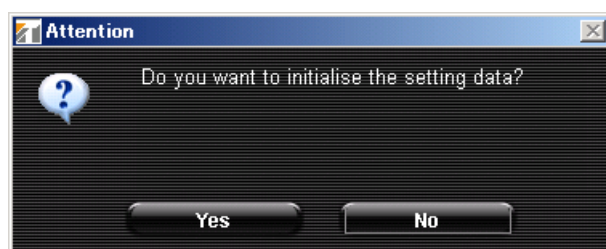


Step 2. Click the "Yes" button.

Currently-set data will be initialized.

Note: Pressing the "No" button returns the display to the currently-displayed setting screen.

The following screen is displayed after completion of initialization.

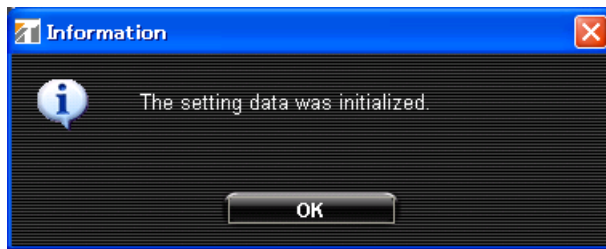


Pressing the "OK" button displays the screen for new setting file creation.


13.2. Loading Set Files

Load the PC-stored set data file into the setting software.

Step 1. Select [File → Open] from the menu bar of the Setting Software screen.

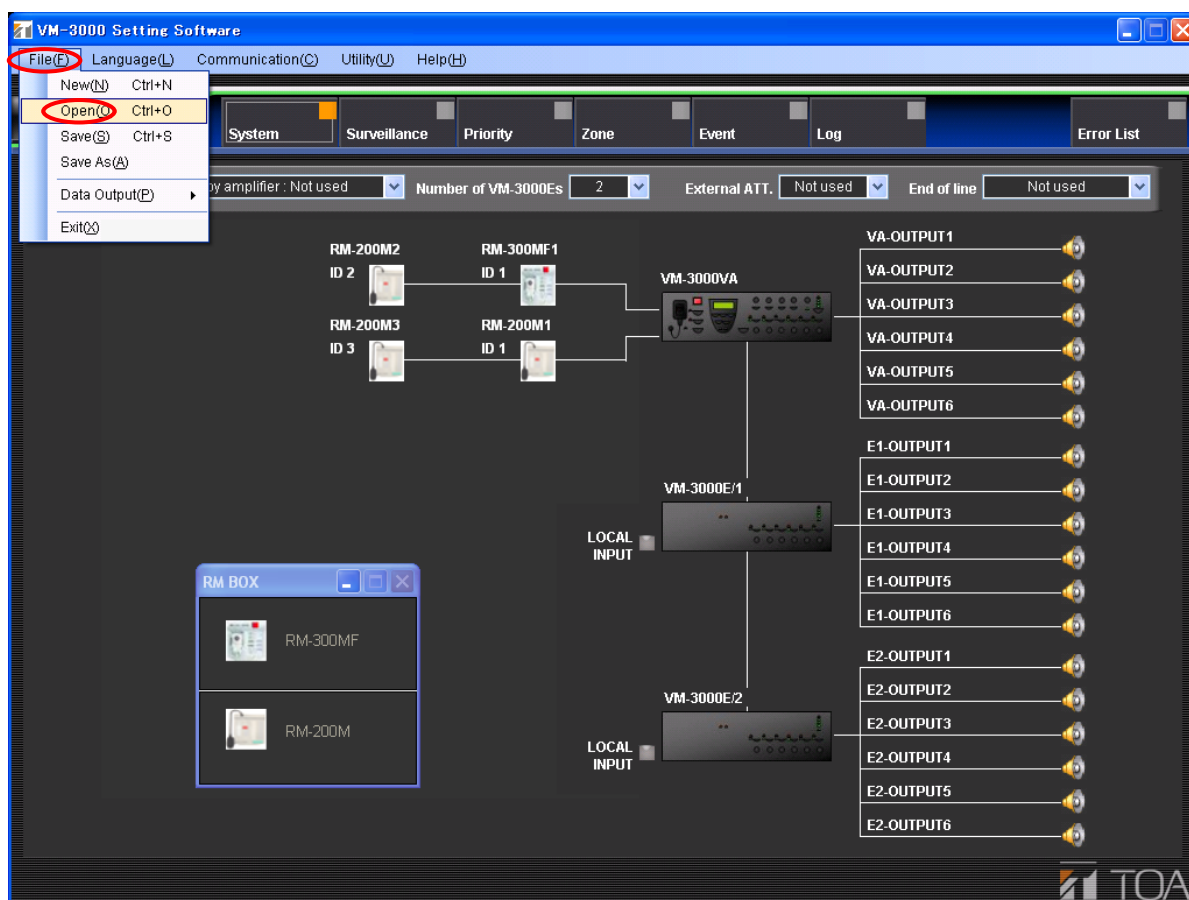


A dialog for opening the set file will be displayed.

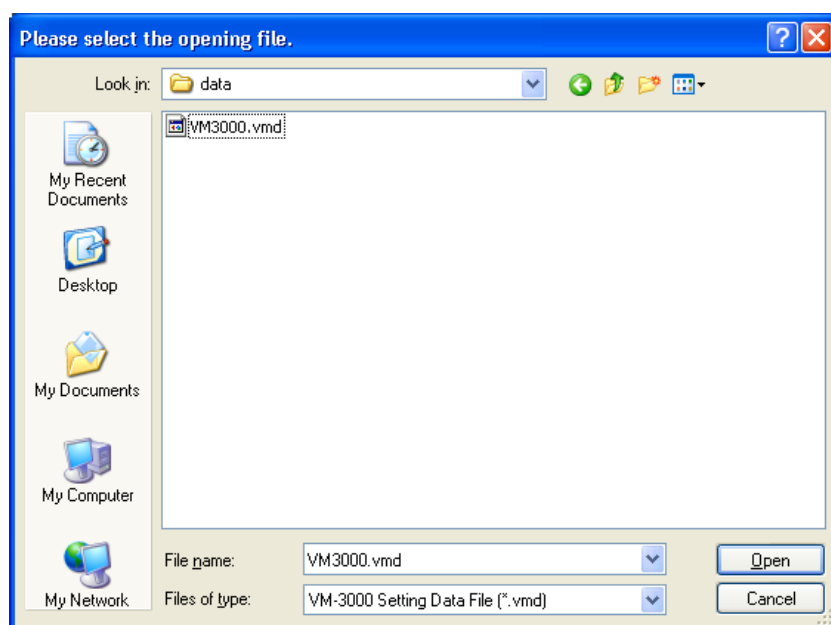

Step 2. Select the desired file and click the "Open" button.
Loading of the selected set file will begin.

The following screen is displayed after completion of loading.

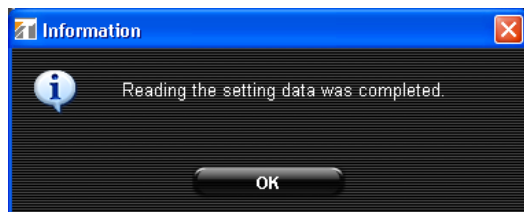


Step 3. Press the "OK" button.
The current display switches to the screen for the loaded file.

13.3. Saving Set Files

Output the software-edited data in data format (.vmd) to be used in the VM-3000 system.


13.3.1. Overwriting an existing file

Step 1. Select [File → Save] from the menu bar of the Setting Software screen.

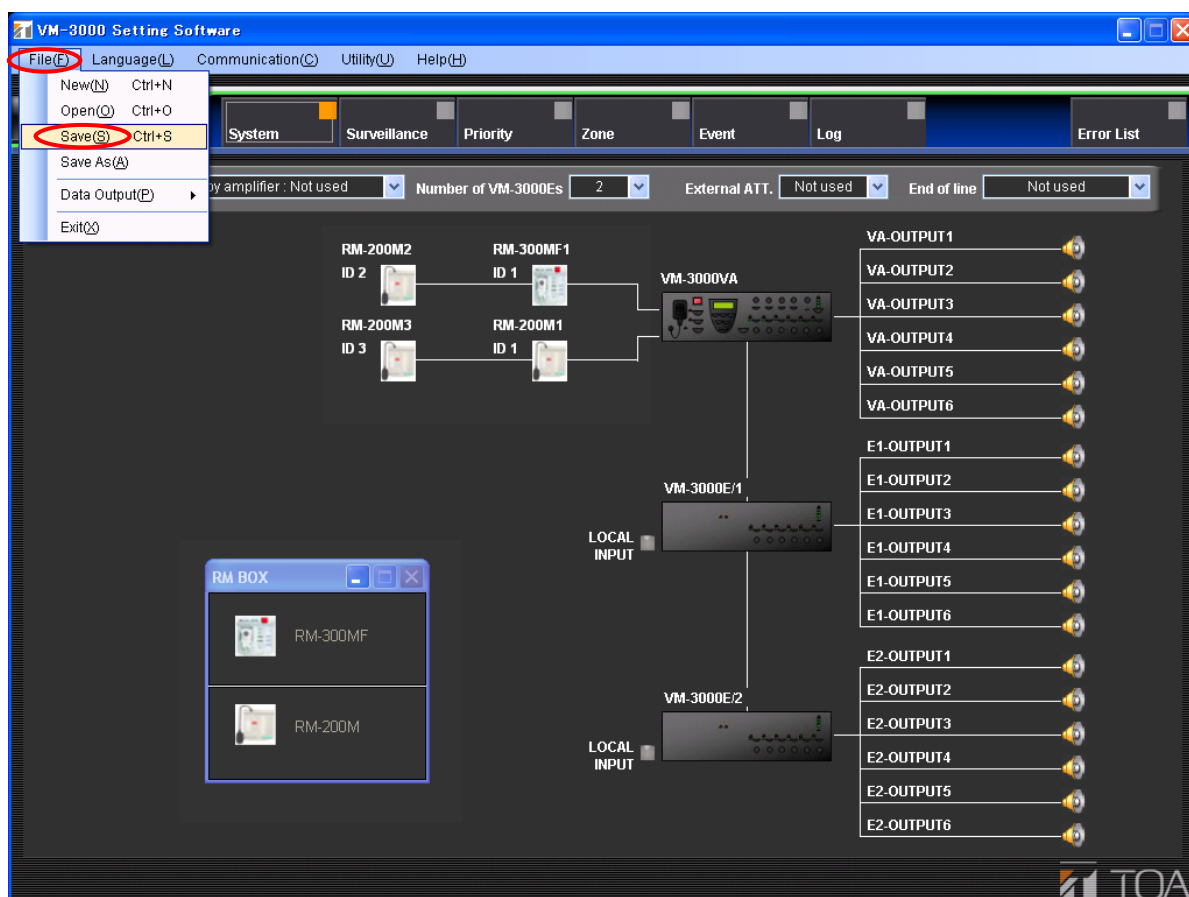

The currently-opened file is overwritten and saved.

The following screen is displayed after save completion.

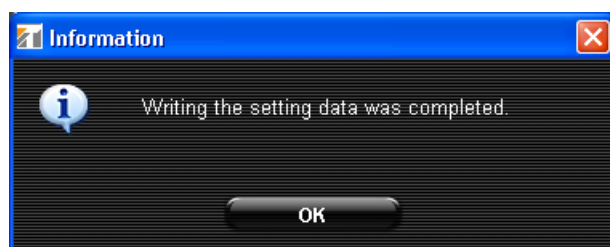


Step 2. Press the "OK" button.


The display returns to the currently displayed screen.

13.3.2. Saving new set files

Step 1. Select [File → Save As] from the menu bar of the Setting Software screen.

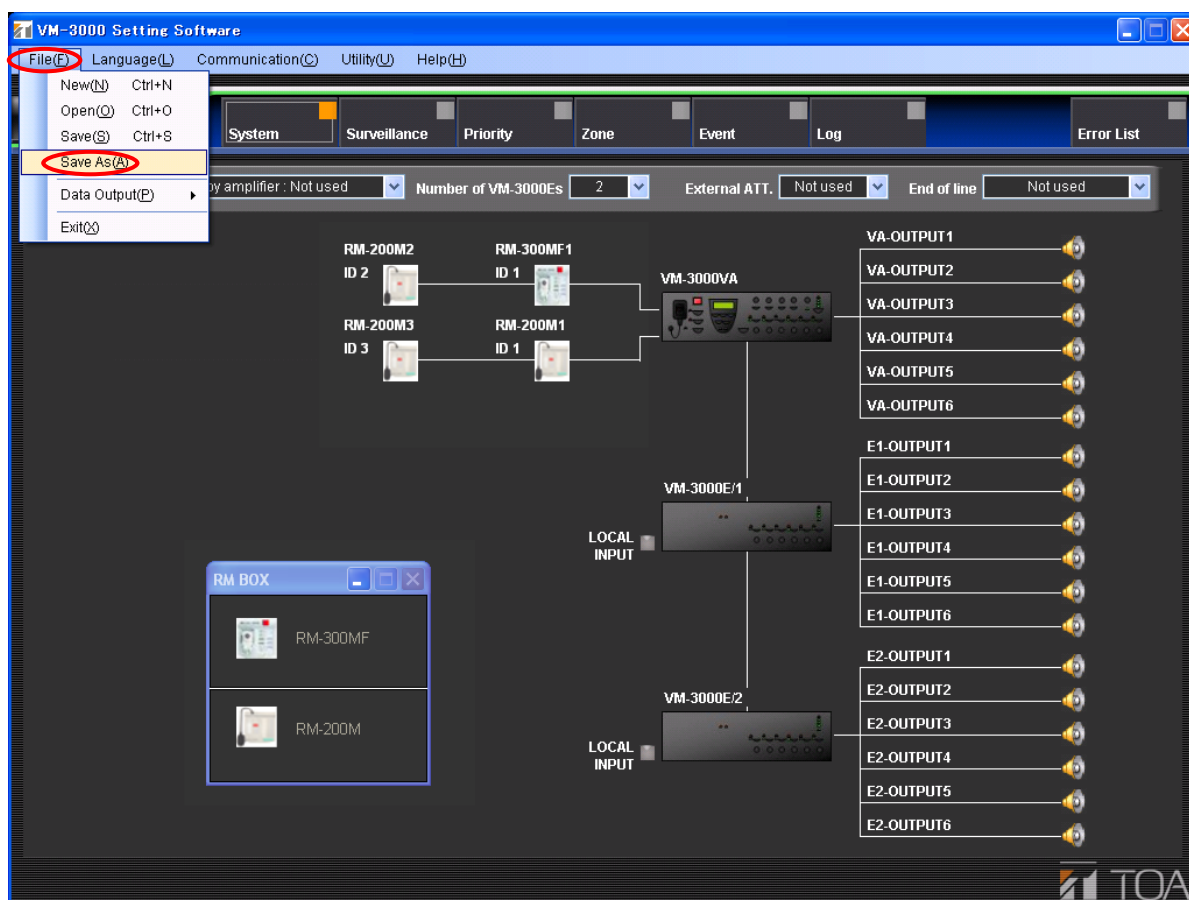

A dialog for designating the destination for the set file will be displayed.

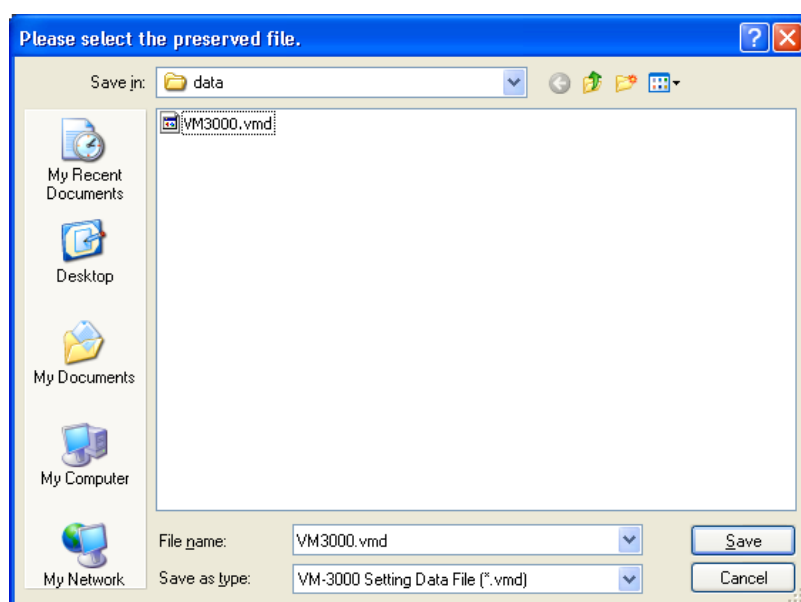

Step 2. Assign a filename. (Default name: VM3000.vmd)

Note

When changing the filename, be sure to include the correct filename extension (vmd).
(Example: Set file.vmd)

Step 3. Click the "Save" button.

The following screen is displayed after save completion.




Step 4. Press the "OK" button.

The display returns to the currently displayed screen.


13.4. Printing Set Data

Print the set data.

Step 1. Select [File → Data Output → Print Setting Data] from the menu bar of the Setting Software screen.

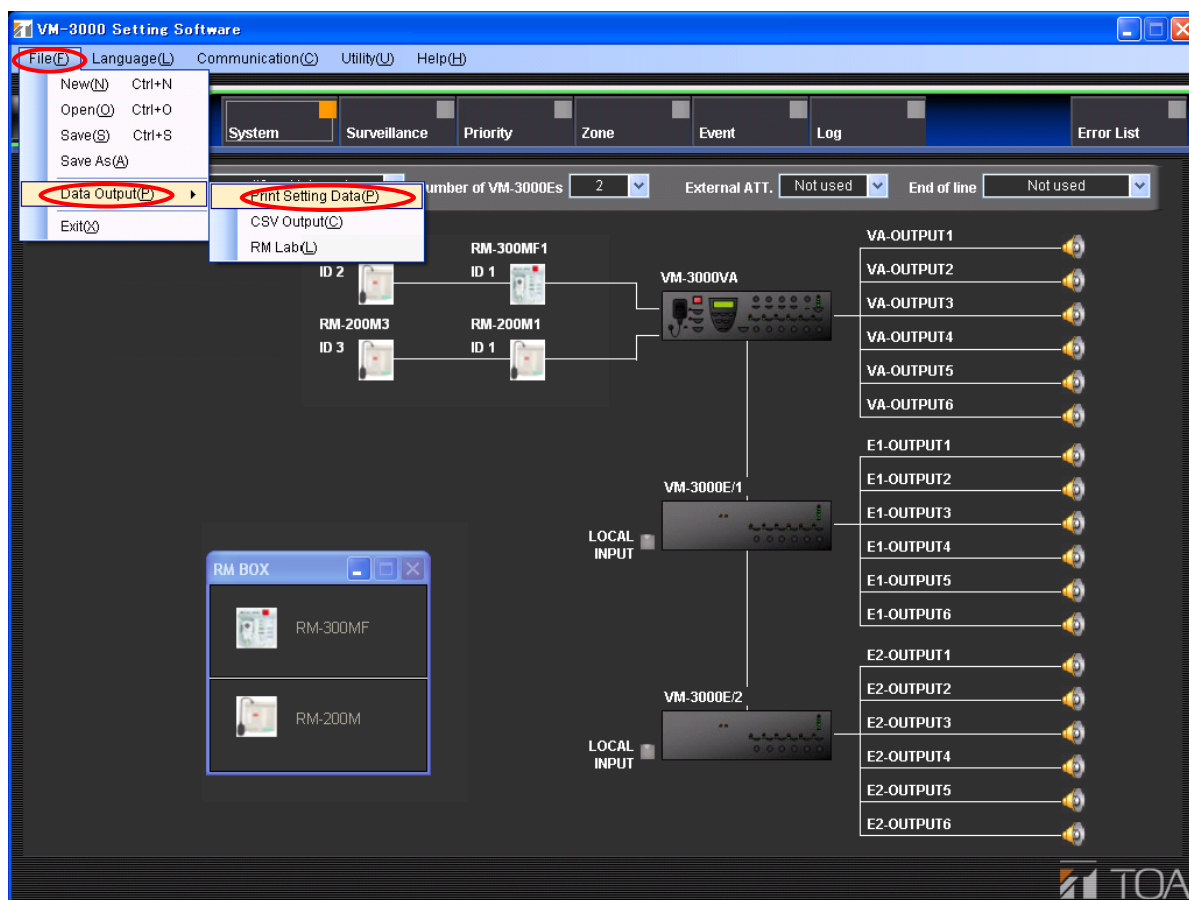


The print preview for the set data will be displayed.

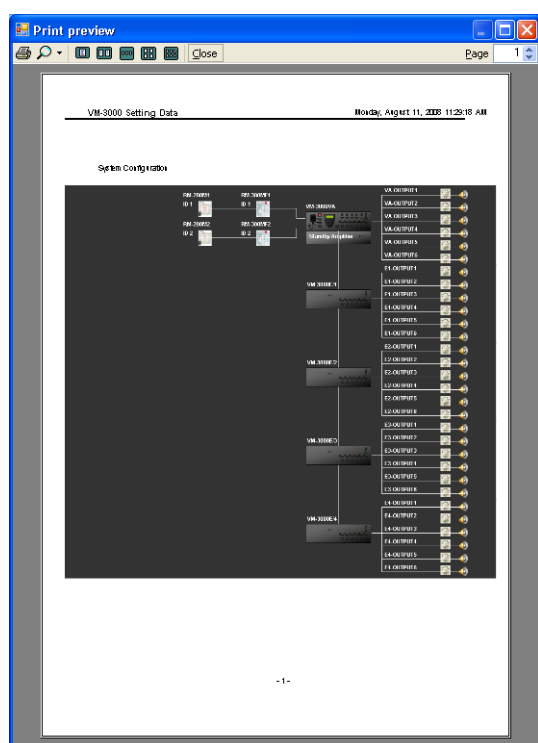

The print preview of the system configuration shown at left is printed, followed by a list showing the set content (its previewed screen is omitted).

- Step 2.** Click the printer icon.
The print setting screen will be displayed.

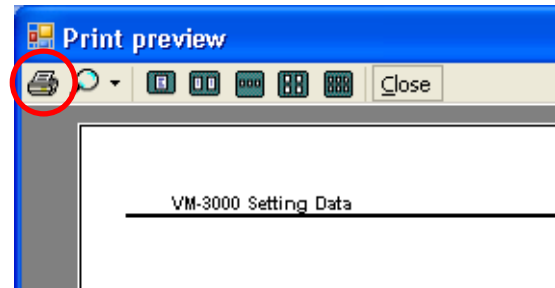


- Step 3.** Perform printing setting, then print the set data.
The display returns to the currently displayed screen after print completion.


13.5. Exporting Printed Data in CSV Format

It is possible to output set data as a CSV format file for use in spreadsheet programs such as Microsoft Excel.

Step 1. Select [File → Data Output → CSV Output] from the menu bar of the Setting Software screen.

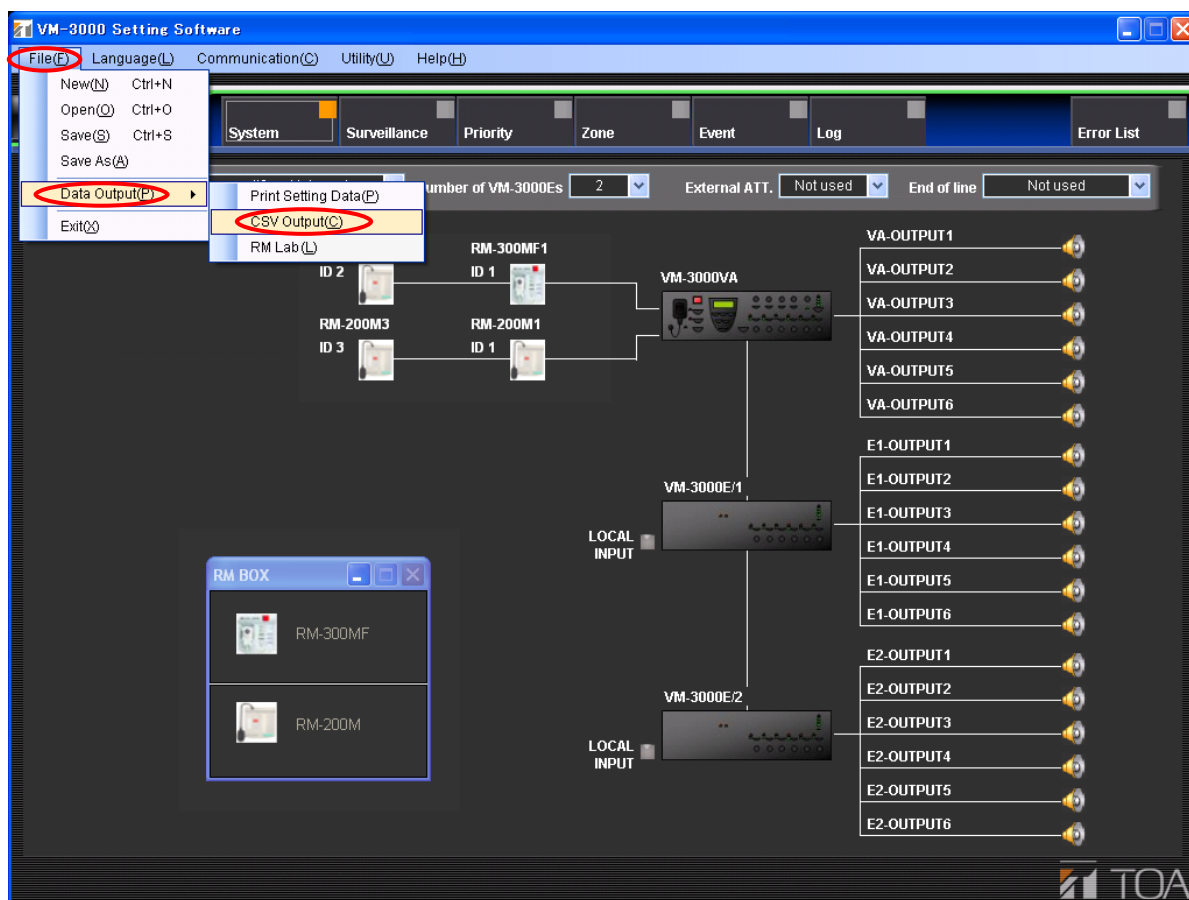

A dialog for designating the destination for the set file is displayed.

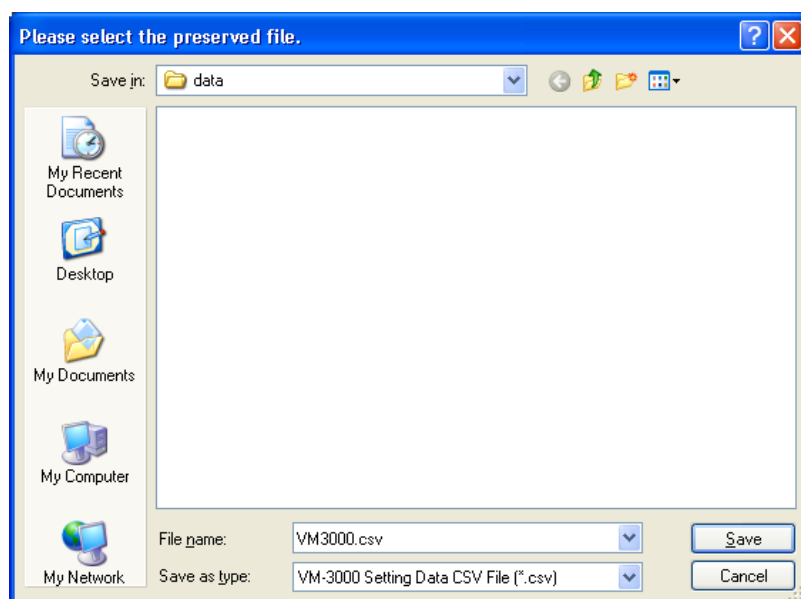

Step 2. Assign a filename. (Default name: VM3000.csv)

Note

When changing the filename, be sure to include the correct filename extension (csv).
(Example: Set file.csv)

Step 3. Click the "Save" button.

The following screen is displayed after save completion.




Step 4. Press the "OK" button.

The display returns to the currently displayed screen.


13.6. Printing Remote Microphone Labels

Remote microphone labels can be designed and printed.


Print the label for the name assigned to the remote microphone key currently being set using the setting software.

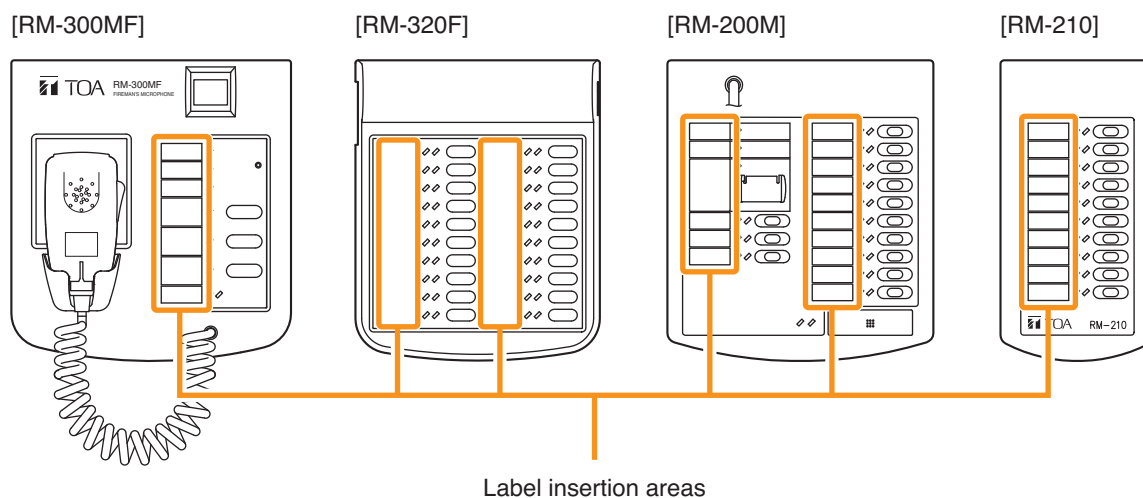


Step 1. Select "File → Data Output → RM Label" from the menu bar of the Setting Software screen.

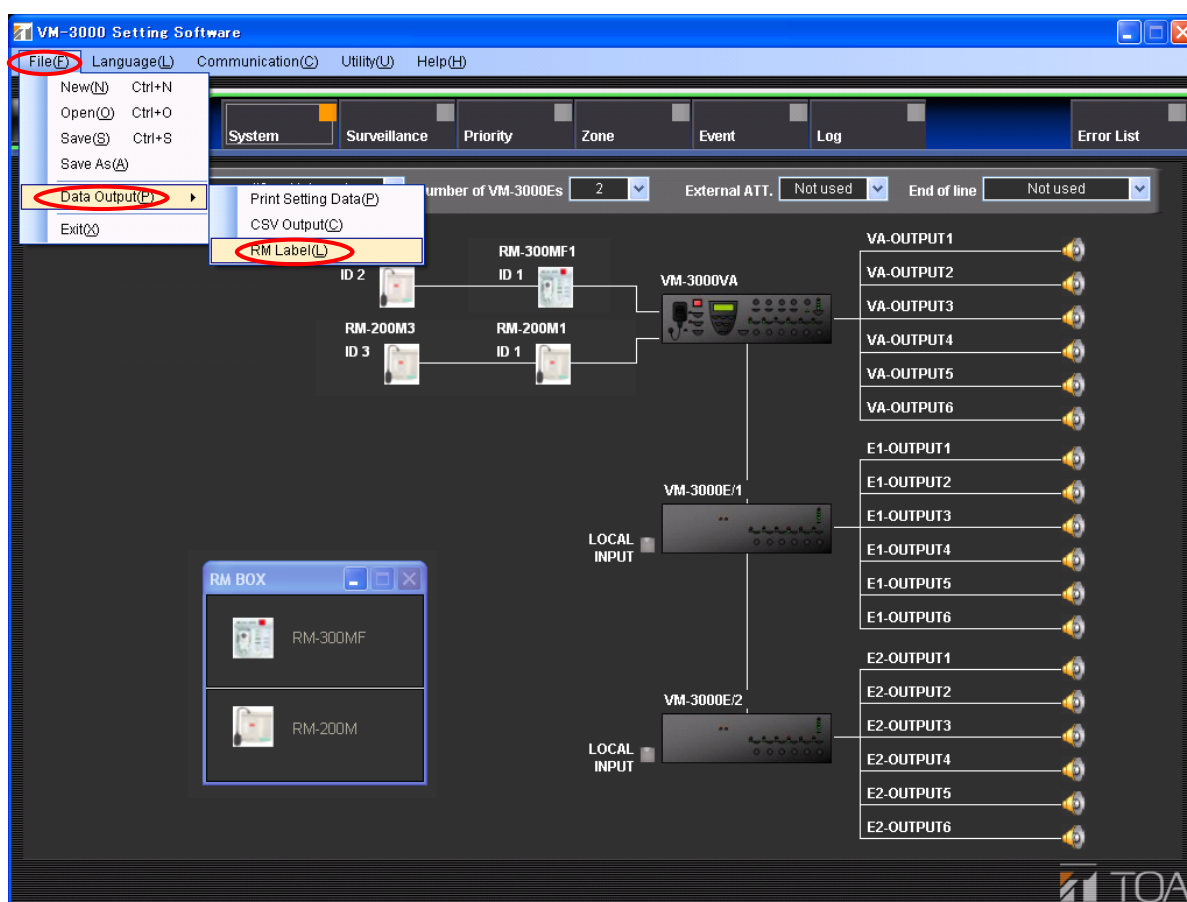

The print preview for the printed labels of all connected remote microphones is displayed.

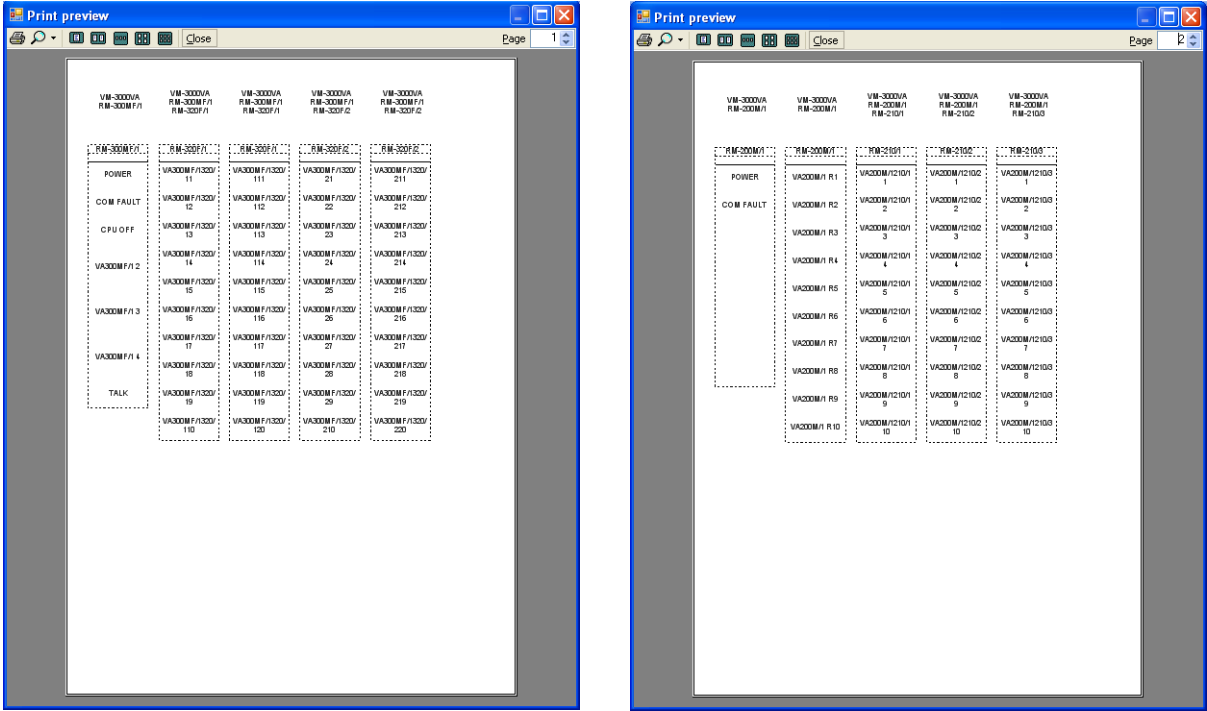

Step 2. Click the printer icon.
The print setting screen will be displayed.

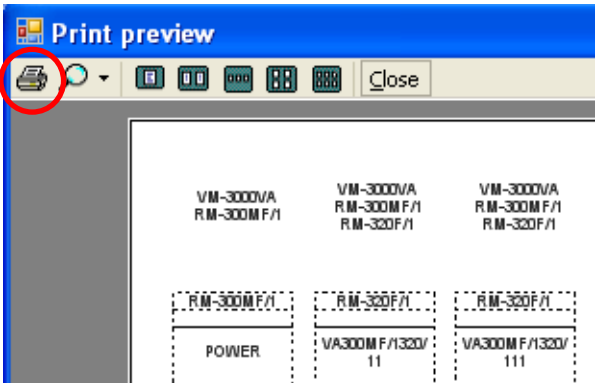

Step 3. Perform print settings and print out the page.

Notes


- Depending upon the type of printer used, the printed results of the output area or label width may differ.
- Use paper less than 0.2 mm thick.

The display returns to the currently displayed screen after print completion.


13.7. Exiting Setting Software

Exit the setting software after completing all settings and required file output production.

Select "File → Exit" from the menu bar of the Setting Software screen.

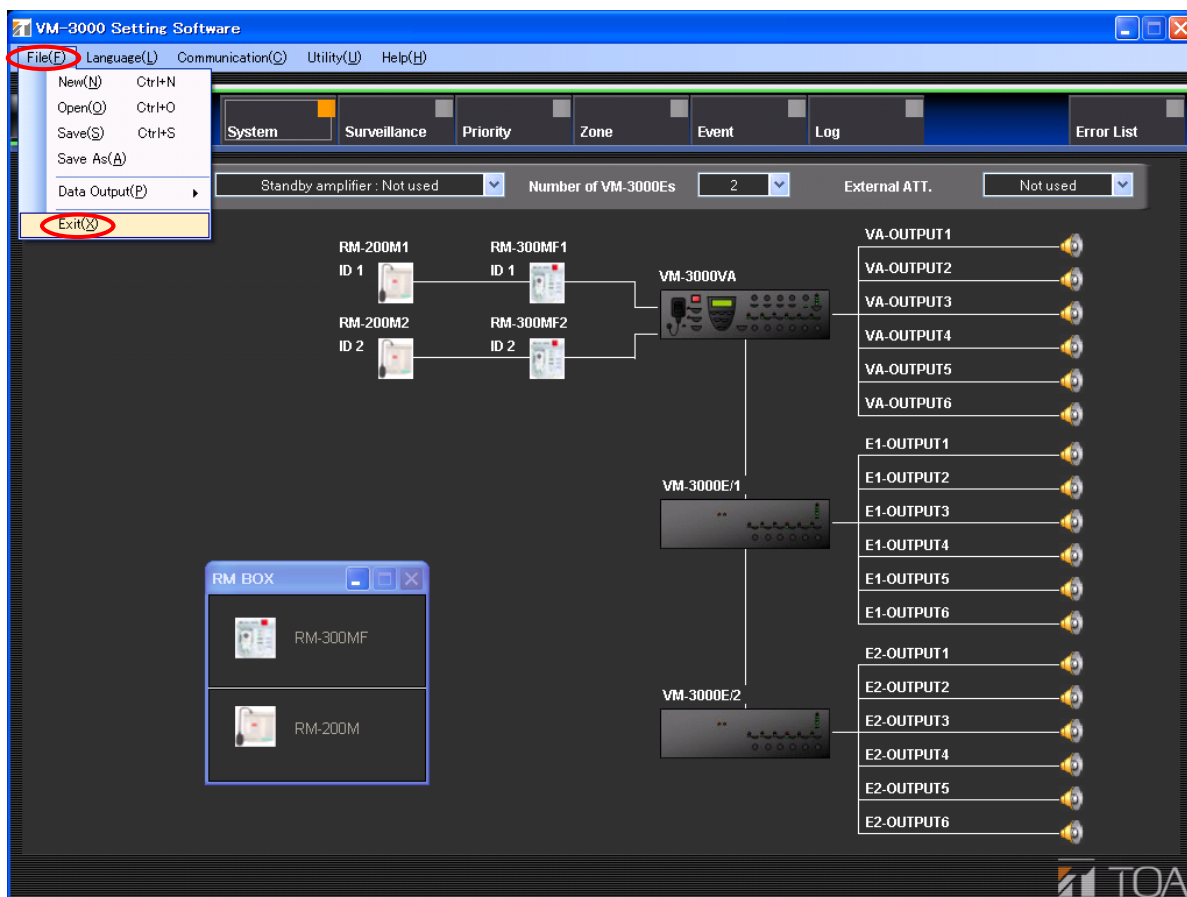

If the set data has not been saved, the following dialog is displayed.

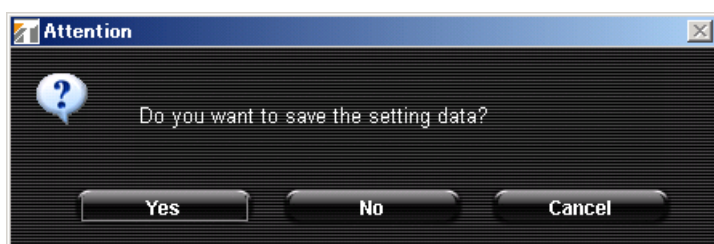

Pressing the "Yes" button displays a dialog for saving the set data. Assign a filename and save the data. (Refer to "Saving Set Files" on page 73.)


If the "No" button is pressed, the setting software is terminated without saving the set data.

Pressing the "Cancel" button returns the display to the currently displayed screen.


13.8. Selecting the Setting Software Display Language

It is possible to select the language to be used for displaying the setting software.

Step 1. Select "Language → Select" from the menu bar of the Setting Software screen.

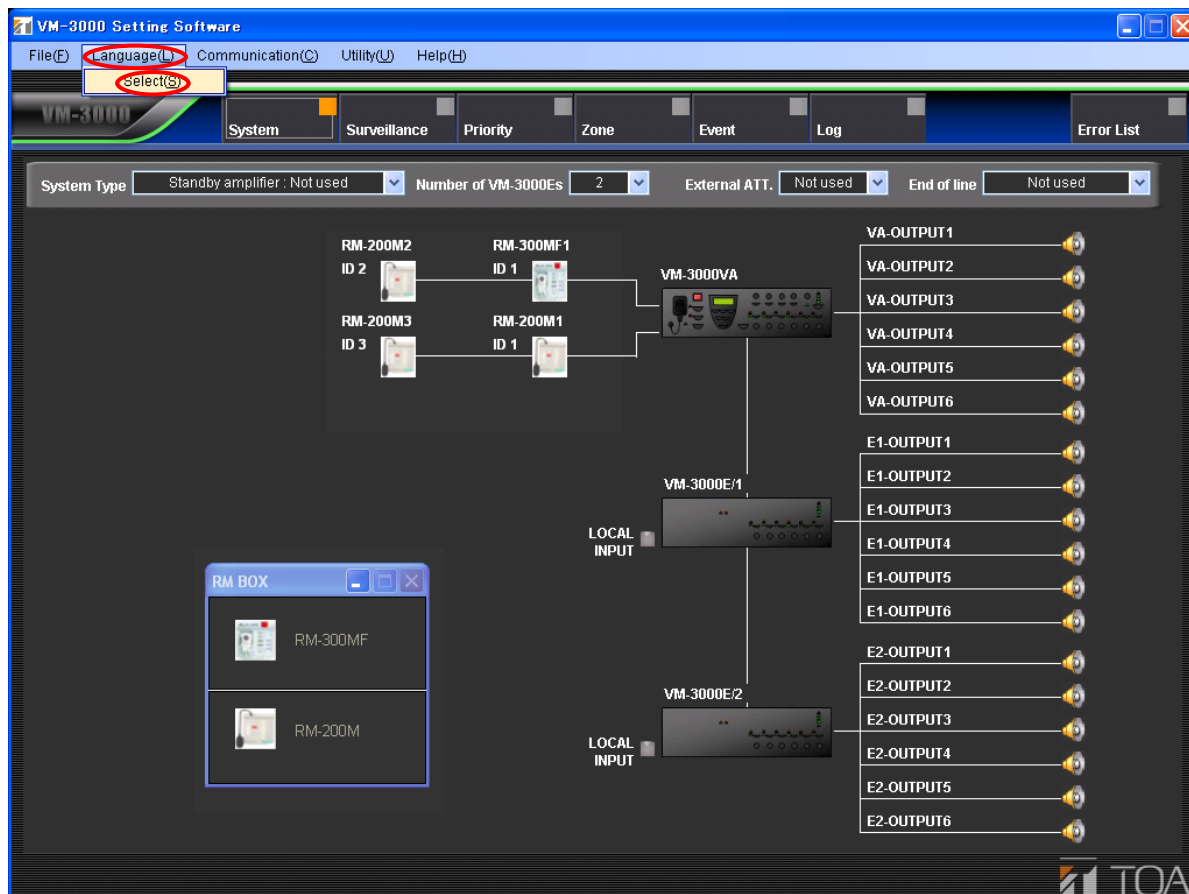

The language selection screen is displayed.

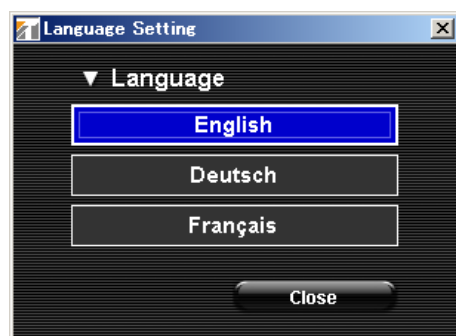

Step 2. Select the desired language.
The display switches to the selected language.

Step 3. Click the "Close" button.


13.9. Network Settings between Setting Software and VM-3000VA

Perform network settings (IP address settings) necessary for communication between the setting software and the VM-3000VA.


Note

Be sure to perform this setting in advance when transferring data between the VM-3000VA and a PC.

Step 1. Select "Communication → Network Setting" from the menu bar of the Setting Software screen.

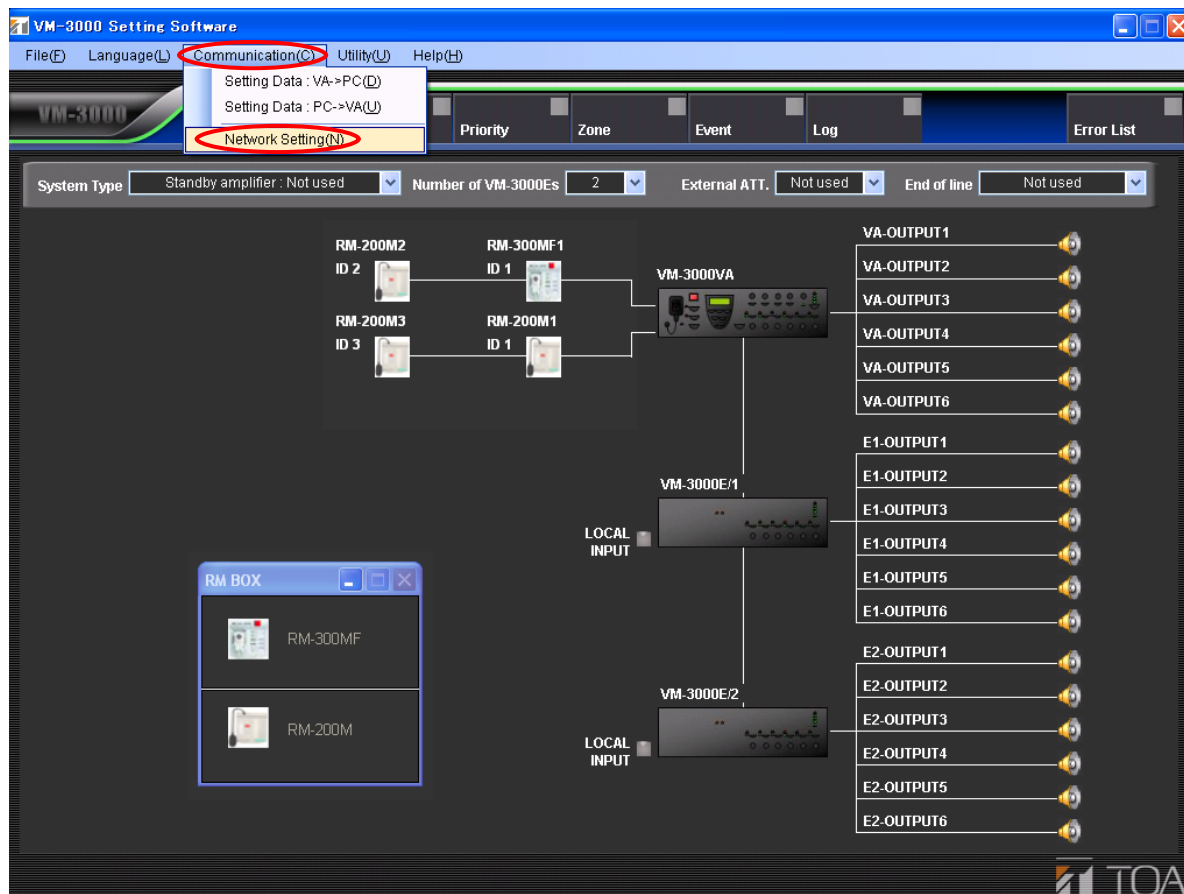

The network setting screen is displayed.

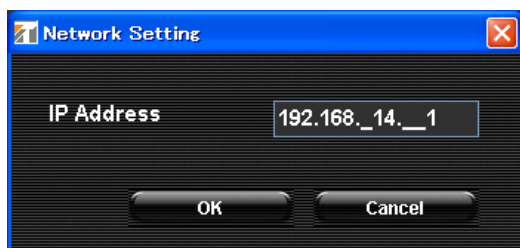

Step 2. Set the VM-3000VA's IP address. (Default IP address: 192.168.14.1)
For details, please contact a network administrator.

Step 2. Click the "OK" button.

The display reverts to the original screen.

To cancel the setting, click the "Cancel" button.

Note

The following dialog is displayed if connections between the VM-3000VA and the PC are not correctly made or if the network setting is not correctly performed. In such cases, click the "OK" button and correctly reconnect the VM-3000VA to the PC or remedy the incorrect network setting.



13.10. Transferring Data Edited by PC between the VM-3000VA and a PC

Data edited with a PC can be written into the VM-3000VA or the same data written into the VM-3000VA can be loaded into the PC.


Notes

- Data edited using the VM-3000VA's LCD screen cannot be transferred. Only the data that has been set using the PC setting software can be transferred.
- To use this function, be sure to perform network settings in advance ([page 84](#)).
- To transfer set data, the setting software must be operated. Also, operations for transferring the set data are required on the VM-3000VA side with a PC connected to the VM-3000VA. You may not perform key operations on the VM-3000VA only when both versions of VM-3000VA firmware and VM-3000 Setting Software are 3.00 or later. (For details, please read the separately issued instruction manual.)

The following are operations based on the setting software.

13.10.1. Loading set VM-3000VA data into a PC

Select "Communication → Setting Data: VA->PC" from the menu bar of the Setting Software screen.

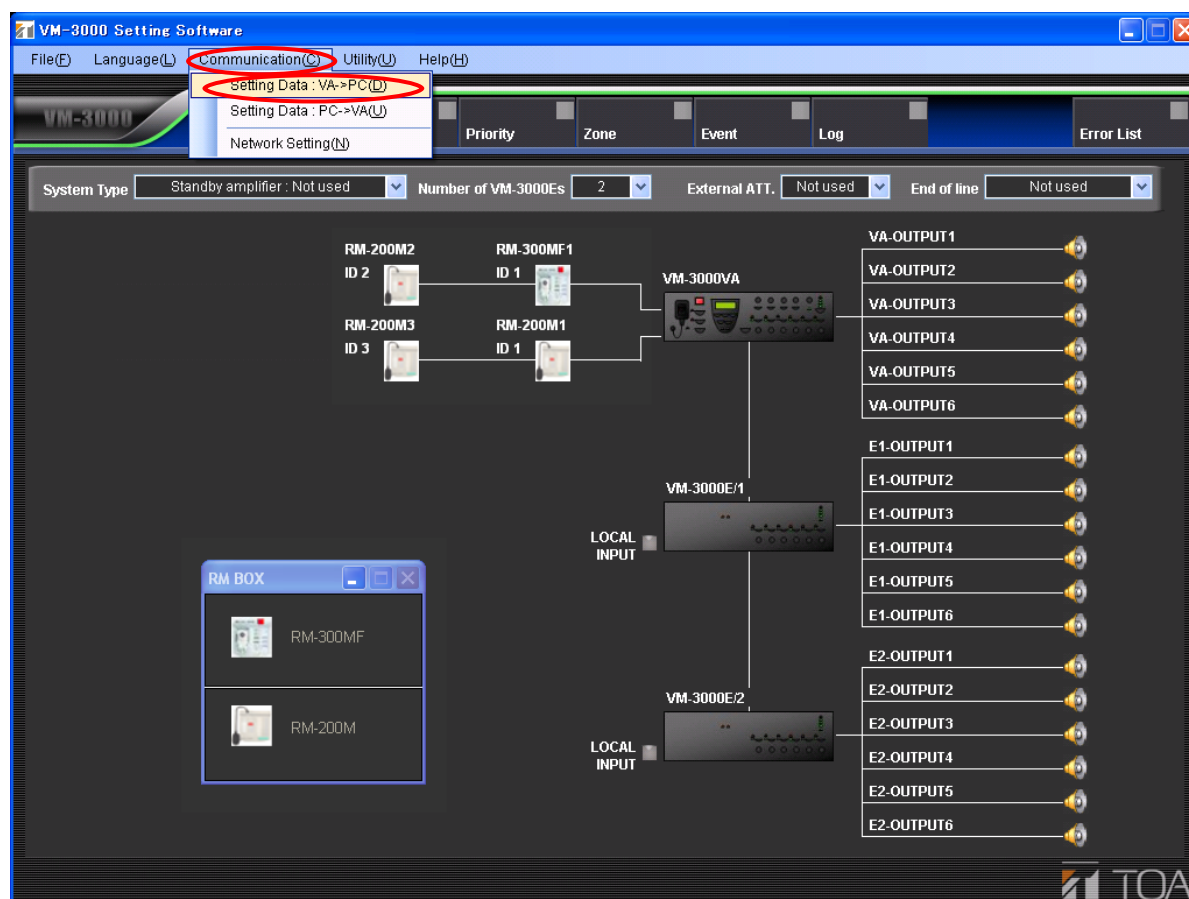


The transferred setting content is displayed on the current setting screen when the data has been transferred. In this event, the VM-3000VA's LCD screen displays as follows:

**TRANSMITTING
COMPLETE**

13.10.2. Writing PC-edited data into the VM-3000VA

Select "Communication → Setting Data: PC->VA" from the menu bar of the Setting Software screen.

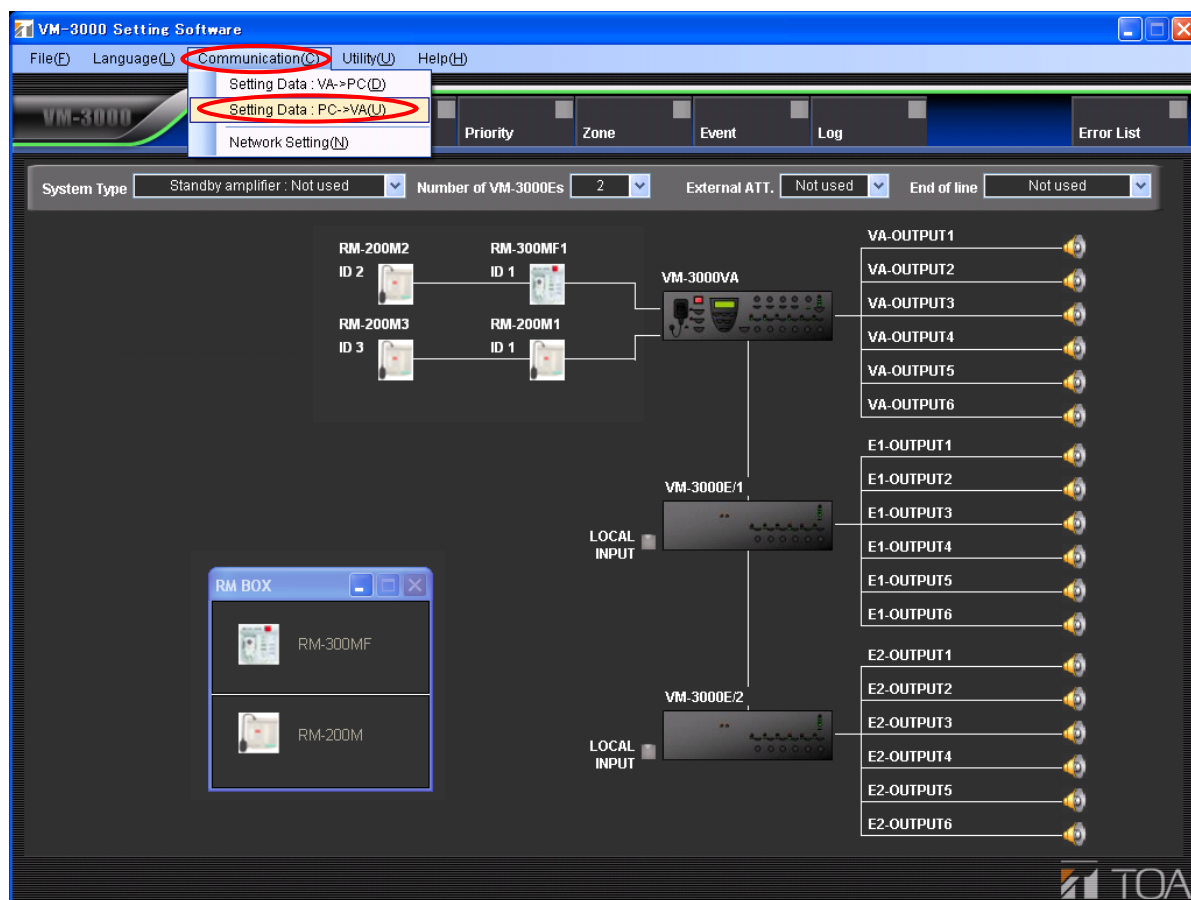

Currently displayed set data is written into the VM-3000VA.

The VM-3000VA's LCD screen displays as follows when the data has been transferred.

**RECEIVING
COMPLETE**

13.11. Transferring EV Message Files between the VM-3000VA/VM-3000E and a PC


EV message files to be used by the VM-3000VA/VM-3000E can be written into the VM-3000VA/VM-3000E from a PC or loaded into the PC from the VM-3000VA/VM-3000E.

Notes

- This function is independent from the set data transfer function ([page 86](#)).
- To use this function, be sure to perform network settings in advance ([page 84](#)).
- To transfer set data, the setting software must be operated. Also, operations for transferring the set data are required on the VM-3000VA side with a PC connected to the VM-3000VA. You may not perform key operations on the VM-3000VA only when both versions of VM-3000VA firmware and VM-3000 Setting Software are 3.00 or later. (For details, please read "Configuration Settings" in the separately issued instruction manual.)
- The same emergency announcement must be written into the VM-3000VA and VM-3000E.

13.11.1. EV file registration screen transfer operation

Select "Utility → EV" from the menu bar of the Setting Software screen.

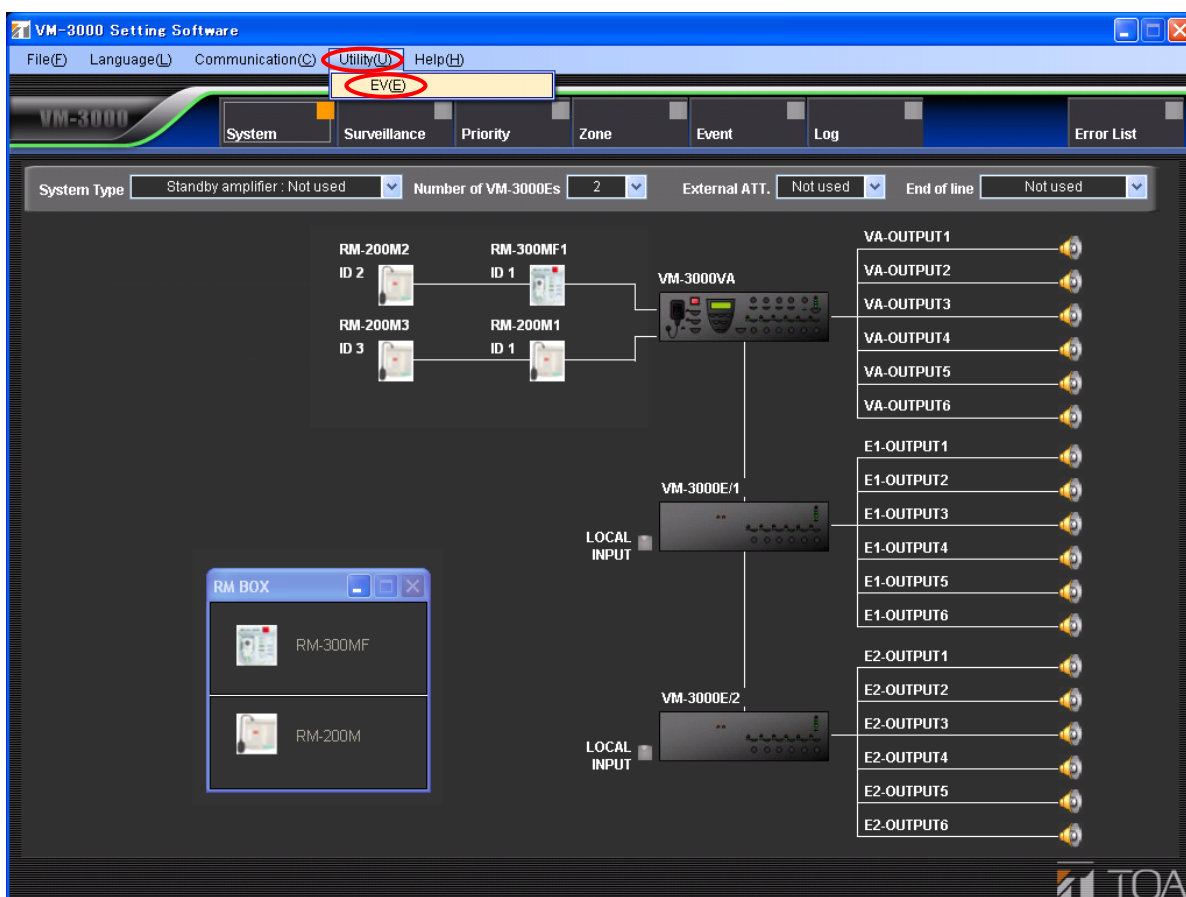

The EV message file registration screen is displayed.
All fields on the EV screen are empty.



Shown below are explanations of each indication on the screen (buttons are excluded from this explanation):

- (1) General: General broadcast message
- (2) Emergency: Emergency broadcast message
- (3) EV: The EV message number or its name
- (4) File Select: If the message is registered in the PC, the message filename is displayed.
- (5) Play/Stop: If the message is registered, both the Play and Stop buttons are displayed.
- (6) PC>VM-3000: Registering the message displays the transfer button. (The delete button is displayed when the message is not registered.)
- (7) Size: Displays the size of each message file.
- (8) Total Size: Shows the sum of all registered message files.

Note

The maximum total size of EV message files that can be used with each of the VM-3000VA and VM-3000E is 60 MB.

The function of each button is explained as follows on the assumption that EV messages have been registered in a PC.



(1) "VM-3000->PC" button


Reads the VM-3000VA/3000E's registered EV message files into the PC's message file registration screen.

After reading is complete, the indication as shown above is displayed. In this event, the indication shown at right is displayed on the VM-3000VA's LCD screen.

TRANSMITTING
COMPLETE

(2) "Reference" button

Registers the EV message files in the PC's message file registration screen. Pressing this button displays a message file selection dialog.

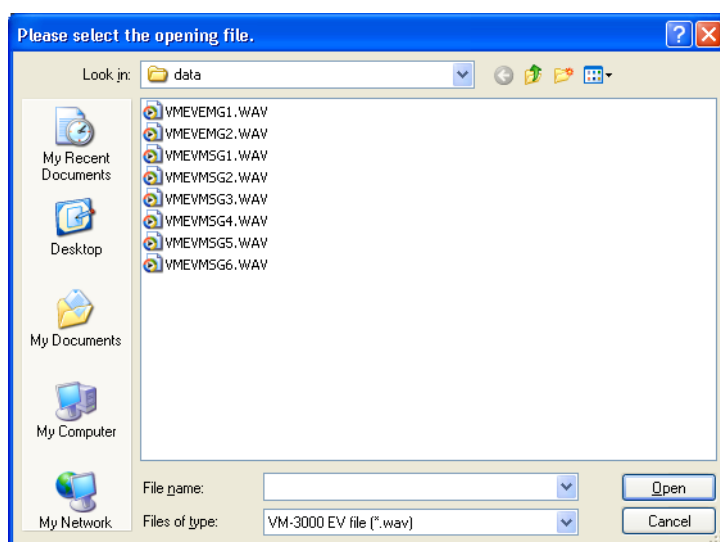

Designate the folder in which the message files are stored and select the message file(s) to be used.

Notes

- Only WAV-format PCM 48 kHz monaural files can be used for EV messages.
- Any filename can be assigned to an EV message. However, if any message file is transferred to the VM-3000VA/VM-3000E and then read into a PC, its filename is automatically changed to the default name as follows:

General EV message 1:	VMEVMSG1.WAV
General EV message 2:	VMEVMSG2.WAV
General EV message 3:	VMEVMSG3.WAV
General EV message 4:	VMEVMSG4.WAV
General EV message 5:	VMEVMSG5.WAV
General EV message 6:	VMEVMSG6.WAV
Evacuation message:	VMEVEMG1.WAV
Alert message:	VMEVEMG2.WAV

(3) "Reset" button

Deletes the EV message file registered in the PC.

(4) "Play" button

Play backs the EV message(s) registered in the PC.

The message(s) can be heard by means of the PC speaker or headphones connected to the PC.

(5) "Stop" button

Stops the EV message played back using the "Play" button (4).

(6) "PC->VM-3000" button

Transfers individual EV message files to the VM-3000VA/VM-3000E.

Note

If an EV message file with the same message number already exists in the VM-3000VA/VM-3000E, it will be overwritten.

(7) "Delete" button

This button is displayed when there is no message file on the message file registration screen (i.e. when the [File Select] box is blank).

Pressing this button causes this EV message number file to be deleted from the VM-3000VA/VM-3000E.

Note

To delete message files read into the screen, first press the "Reset" button to delete the message from the registration screen, then press the "Delete" button.

(8) "PC->VM-3000" button

Simultaneously transfers all EV message files registered on this screen to the VM-3000VA/VM-3000E.

Attention!

Transferring no audio file registered on the screen will erase all existing audio files in the VM-3000VA/VM-3000E.


The following indication is displayed on the VM-3000VA's LCD screen after transfer completion.



(9) "Save" button

Saves all EV message files registered on this screen to the folder designated by the PC.

Pressing this button displays the folder selection dialog.

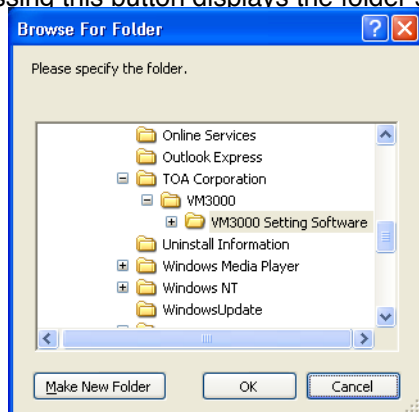

Select the folder the files are to be saved to, then click the "OK" button.

(10) "Close" button

Closes the message file registration screen.

13.11.2. Simultaneous EV message registration

[When no EV message files are registered in the VM-3000VA/VM-3000E (default setting)]

- Step 1.** Press the "Reference" button.
Select the EV message file from those stored in the PC, then its filename is displayed in the "File Select" field on the setting screen.
- Step 2.** Display all message files to be registered on the PC setting screen.
- Step 3.** Press the "PC->VM-3000" button located in the lower part of the screen.
This allows all EV message files displayed on the screen to be read into the VM-3000VA/VM-3000E at once.

[When the EV message file has already been registered in the VM-3000VA/VM-3000E (registration by overwriting)]

- Step 1.** Press the "VM-3000->PC" button located in the lower part of the screen.
The EV message files registered in the VM-3000VA/VM-3000E are loaded into the PC's setting screen.
- Step 2.** Edit and update the message file(s) to be changed.
- Step 3.** Press the "PC->VM-3000" button located in the lower part of the screen.
All EV message files displayed on the screen are simultaneously read into the VM-3000VA/VM-3000E.

13.11.3. Individual EV message file registration

- Step 1.** Press the "VM-3000->PC" button located in the lower part of the screen.
The EV message files registered in the VM-3000VA/VM-3000E are loaded into the PC's setting screen.
- Step 2.** Edit and update the message file to be changed.
- Step 3.** Press the individual "PC->VM-3000" button for the updated EV message file.
The message file is individually written into the VM-3000VA/VM-3000E.


13.11.4. Individual EV message file erasure

- Step 1.** Press the "VM-3000->PC" button.
The EV message files registered in the VM-3000VA/VM-3000E are loaded into the PC's setting screen.
- Step 2.** Press the "Reset" button for the EV message file.
The EV message file is deleted from the PC's setting screen.
- Step 3.** Press the "Delete" button.
The EV message file is deleted from the VM-3000VA/VM-3000E.


13.12. Setting Software Version Display

The version of the setting software can be displayed.

Step 1. Select "Help → Version" from the menu bar of the Setting Software screen.

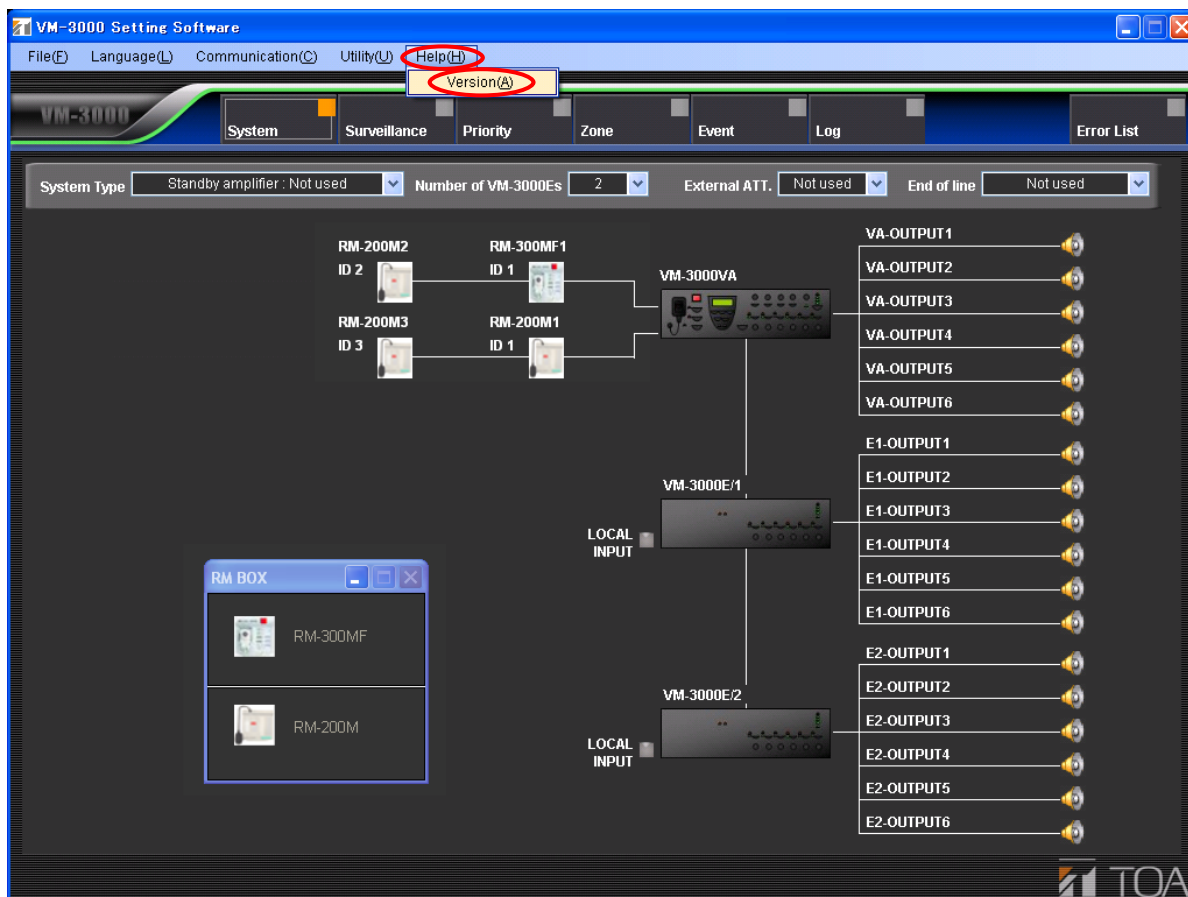

The setting software's version is displayed.

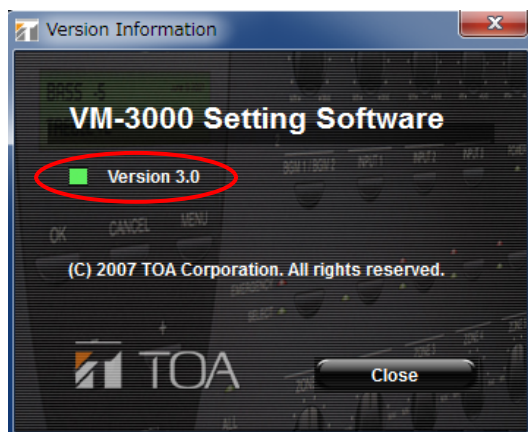

Step 2. Click the "Close" button.

